



User's Manual



HDMI-TPS-RX110AY HDMI-TPS-RX110AY-Plus

HDBaseT™ Multimedia Extender

Important Safety Instructions

Class II apparatus construction.

The equipment should be operated only from the power source indicated on the product.

To disconnect the equipment safely from power, remove the power cord from the rear of the equipment or from the power source. The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

There are no user-serviceable parts inside of the unit. Removal of the cover will expose dangerous voltages. To avoid personal injury, do not remove the cover. Do not operate the unit without the cover installed.

The appliance must be safely connected to multimedia systems. Follow instructions described in this manual.

Ventilation


For the correct ventilation and to avoid overheating, ensure enough free space around the appliance. Do not cover the appliance, leave the ventilation holes free and never block or bypass the ventilators (if there are any).

WARNING

To prevent injury, the apparatus is recommended to be securely attached to the floor/wall or mounted in accordance with the installation instructions. The apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus. No naked flame sources, such as lit candles, should be placed on the apparatus.

Waste Electrical & Electronic Equipment WEEE

This marking shown on the product or its literature indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

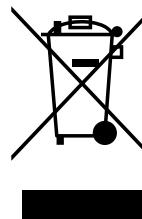

Common Safety Symbols

Symbol	Description
— — —	Direct current
~	Alternating current
□	Double insulation
⚡	Caution, possibility of electric shock
!	Caution

Symbol Legend

The following symbols and markings are used in the document:

WARNING! Safety-related information that is highly recommended to read and keep in every case!

ATTENTION! Useful information for performing a successful procedure; it is recommended to read.

DIFFERENCE: Feature or function that is available with a specific firmware/hardware version or product variant.

INFO: A notice, which may contain additional information. Procedure can be successful without reading it.

DEFINITION: The short description of a feature or a function.

TIPS AND TRICKS: Ideas that you may have not known yet, but can be useful.

Document Information

This User's Manual applies to the following versions of the mentioned software, firmware and hardware:

Item	Version
Lightware Device Controller (LDC) software	2.6.2b3
Lightware Device Updater V2 (LDU2) software	2.17.0b2
Applied firmware package	1.5.0b3
Hardware	1.2

Document revision: **v3.5**

Release date: **12-05-2023**


Editor: Nikolett Keindl

About Printing

Lightware Visual Engineering supports green technologies and eco-friendly mentality. Thus, this document is primarily made for digital use. If you need to print out a few pages for any reason, follow the recommended printing settings:

- Page size: A4
- Output size: Fit to page or Match page size
- Orientation: Landscape

TIPS AND TRICKS: Thanks to the size of the original page, a border around the content (grey on the second picture below) makes it possible to organize the pages better. After punching holes in the printed pages, they can easily be placed into a ring folder.

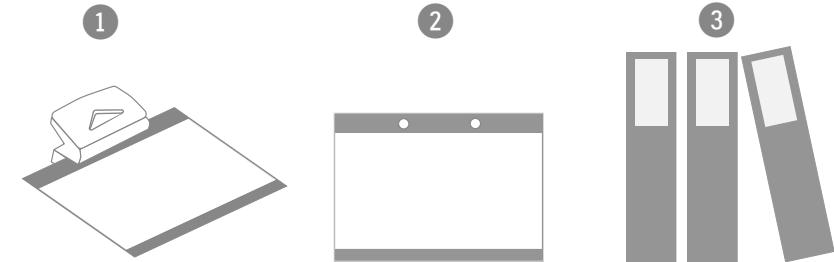

Hashtag (#) Keywords in the Document

This user's manual contains keywords with hashtags (#) to help you find the relevant information as quick as possible.

The format of the keywords is the following:

#<keyword>

The usage of the keywords: use the **Search** function (Ctrl+F / Cmd+F) of your PDF reader application, type the # (hashtag) character and the wished keyword.

The **#new** special keyword indicates a new feature/function that has just appeared in the latest firmware or software version.

Example

#dhcp

This keyword is placed at the DHCP setting command in the LW3 Programmer's reference section.

See the list of all hashtag keywords of the document in the [Hashtag Keyword List](#) section.

Table of Contents

1. INTRODUCTION.....	7	5.7.8. Ethernet.....	45
1.1. DESCRIPTION.....	8	5.7.9. Infra	47
1.2. COMPATIBLE DEVICES	8	5.7.10. Macros	50
1.3. BOX CONTENTS	8	5.7.11. Variables	51
1.4. FEATURES	9		
1.5. MODEL COMPARISON	9		
1.6. TYPICAL APPLICATION	10		
2. INSTALLATION.....	11	5.8. EVENT MANAGER.....	53
2.1. MOUNTING OPTIONS	12	5.8.1. The Event Editor.....	53
2.1.1. 1U High Rack Shelf.....	12	5.8.2. Create or Modify an Event.....	54
2.1.2. Under-desk Double Mounting Kit.....	12	5.8.3. Special Tools and Accessories.....	55
2.2. ELECTRICAL CONNECTIONS.....	13	5.8.4. Clear One or More Event(s).....	56
2.2.1. DC 12V Connection	13	5.8.5. Export and Import Events	56
2.2.2. HDMI Connector	13	5.8.6. Event Creating - Example	56
2.2.3. Analog Audio Output	13		
2.2.4. Ethernet Connector (TPS and LAN Ports)	13		
2.2.5. USB Connector.....	14		
2.2.6. IR Connector	14		
2.2.7. RS-232 Connector.....	14		
2.2.8. Relay Connector.....	14		
2.3. CONNECTING STEPS.....	15		
3. PRODUCT OVERVIEW.....	16	5.9. SETTINGS MENU.....	57
3.1. FRONT VIEW.....	17	5.9.1. Status	57
3.2. REAR VIEW.....	18	5.9.2. Network	58
3.3. FRONT PANEL - SPECIAL FUNCTIONS	19	5.9.3. Front Panel.....	58
3.3.1. Programmable Function Button	19	5.9.4. Backup	59
3.3.2. Enable Dynamic (DHCP) IP Address	19	5.9.5. System	59
3.3.3. Reset to Factory Default Settings	19		
3.3.4. Restarting the Device	19		
3.3.5. Entering Bootload Mode	19		
4. DEVICE CONCEPT	20	5.10. THE BUILT-IN MINIWEB.....	60
4.1. TPS RECEIVER CONCEPT	21	5.10.1. Opening the Miniweb	60
4.2. PORT DIAGRAM	21	5.10.2. Miniweb Customization	61
4.3. TPS INTERFACE.....	21		
4.4. AUDIO INTERFACE	22	5.11. CONFIGURATION CLONING (BACKUP TAB).....	62
4.4.1. Audio Input.....	22	5.11.1. Steps in a Nutshell	62
4.4.2. Audio Output Modes	22	5.11.2. Save the Settings of a Device (Backup)	63
4.4.3. Audio Options - Example	22	5.11.3. Upload the Settings to a Device (Restore)	63
4.5. VIDEO INTERFACE	22	5.11.4. Create and Restore Backups from the Device Memory	63
4.6. CONTROL FEATURES	23		
4.6.1. Serial Interface.....	23	5.12. ADVANCED VIEW WINDOW	64
4.6.2. RS-232 Recognizer.....	24		
4.6.3. IR Interface.....	25	6. LW2 PROGRAMMERS' REFERENCE	65
4.6.4. Relay Interface	26		
4.6.5. Consumer Electronics Control (CEC) Interface	26	6.1. LW2 PROTOCOL DESCRIPTION.....	66
4.6.6. USB Control Interface.....	26		
4.7. ETHERNET INTERFACE	27	6.2. INSTRUCTIONS FOR THE TERMINAL APPLICATION USAGE	66
4.7.1. Device Control over Ethernet	27		
4.7.2. Wake-on-Lan	27	6.3. GENERAL LW2 COMMANDS	67
4.7.3. TCP Recognizer	27		
4.8. BATCH COMMANDS.....	27	6.3.1. List of All Available LW2 Commands	67
4.9. BASIC IT SECURITY	28	6.3.2. Viewing the Product Type	67
4.10. BULK DEVICE MANAGEMENT	28	6.3.3. Querying the Control Protocol	67
4.10.1. Network Settings	28	6.3.4. Viewing the Firmware Version of the CPU	67
4.11. THE EVENT MANAGER FEATURE	29	6.3.5. Connection Test	67
4.12. FURTHER BUILT-IN FEATURES.....	30	6.3.6. Viewing the Serial Number	67
4.12.1. Automatically Launched Actions – The Event Manager.....	30	6.3.7. Compile Time	67
4.12.2. Receiver Cloning – Configuration Backup and Restore.....	30	6.3.8. Viewing Installed Boards	68
4.12.3. Remote Firmware Update of Connected Lightware Devices.....	30	6.3.9. Viewing Firmware for All Controllers	68
4.13. SOFTWARE CONTROL MODES	30	6.3.10. Restarting the Device	68
5. SOFTWARE CONTROL - LIGHTWARE DEVICE CONTROLLER	31	6.3.11. Querying Health Status	68
5.1. INSTALL AND UPDATE.....	32	6.3.12. Restoring Factory Default Settings	68
5.2. RUNNING THE LDC	32		
5.3. ESTABLISHING THE CONNECTION.....	33		
5.3.1. Ethernet Tab	33		
5.3.2. Serial Tab	34		
5.3.3. USB Tab	34		
5.3.4. Further Tools	34		
5.4. BULK DEVICE MANAGEMENT	35		
5.4.1. Network Settings	35		
5.5. PORT PARAMETERS MENU	36		
5.5.1. Video Tab	36		
5.5.2. CEC Command Sending	37		
5.5.3. Audio Tab	38		
5.6. DIAGNOSTIC TOOLS	39		
5.6.1. Frame Detector	39		
5.6.2. Cable Diagnostics	39		
5.7. EDID MENU	40		
5.7.1. EDID Operations	41		
5.7.2. EDID Summary Window	41		
5.7.3. Editing an EDID	42		
5.7.4. Creating an EDID - Easy EDID Creator	42		
5.7.5. Control Menu	43		
5.7.6. RS-232	43		
5.7.7. Relays	44		
6.4. PORT SETTINGS.....	69		

Table of Contents

6.4.1. Muting an Output.....	69	7.4.4. Querying the Firmware Version	82	7.8.3. Volume Setting (Percent).....	92																																																																																																																																																																																																																																																																																																				
6.4.2. Unmuting an Output	69	7.4.5. Identifying the Device	82	7.8.4. Volume Setting (Percent) in Steps	92																																																																																																																																																																																																																																																																																																				
6.4.3. Locking an Output	69	7.4.6. Dark Mode.....	82	7.8.5. Balance Setting.....	93																																																																																																																																																																																																																																																																																																				
6.4.4. Unlocking an Output.....	70	7.4.7. Restarting the Device	83	7.8.6. Balance Setting in Steps	93																																																																																																																																																																																																																																																																																																				
6.4.5. Viewing the Connection State on the Outputs.....	70	7.4.8. Restoring the Factory Default Settings	83	7.9. EVENT MANAGER BASICS	94																																																																																																																																																																																																																																																																																																				
6.4.6. Viewing Crosspoint Size	70	7.4.9. Running a Macro.....	83	6.5. NETWORK CONFIGURATION	71	7.5. CLEARTEXT LOGIN PROTECTION	83	7.9.1. How to arrange an Event?	94	6.5.1. Querying the IP Status.....	71	7.5.1. Setting the Login Password.....	83	7.9.2. Setting a Condition by Linking Another Condition	94	6.5.2. Querying the IP Address.....	71	7.5.2. Logging into the Device.....	83	7.9.3. Setting a Condition by Linking More Conditions	94	6.5.3. Setting the IP Address.....	71	7.5.3. Logging out of the Device	84	7.9.4. Setting an Action by Specifying a Direct Path	95	6.5.4. Querying the Subnet Mask.....	72	7.5.4. Enabling/Disabling the Cleartext Login Function	84	7.9.5. Setting an Action by Linking Another Action	95	6.5.5. Setting the Subnet Mask.....	72	7.6. VIDEO PORT SETTINGS	85	7.9.6. Setting an Action by Linking a Macro.....	95	6.5.6. Querying the Gateway Address	72	7.6.1. Querying the Status of Source Ports	85	7.10. EVENT MANAGER TOOL KIT	95	6.5.7. Setting the Gateway Address	72	7.6.2. Querying the Status of Destination Port	86	6.5.8. Applying Network Settings	72	7.6.3. Muting an Input.....	86	7.10.1. Setting the Delay.....	95	6.6. RS-232 SETTINGS	73	7.6.4. Unmuting an Input.....	86	6.6.1. Setting the RS-232 Mode	73	7.6.5. Locking an Input.....	86	7.10.2. Setting the Name of the Event	96	6.6.2. Setting the Local RS-232 Parameters	73	7.6.6. Unlocking an Input.....	86	6.6.3. Setting the Link RS-232 Parameters	74	7.6.7. Muting an Output.....	86	7.10.3. Enabling/Disabling the Event	96	6.6.4. Setting the Local RS-232 Control Protocol	74	7.6.8. Unmuting an Output	86	6.6.5. Setting the Link RS-232 Control Protocol	74	7.6.9. Locking an Output	87	7.10.4. Triggering a Condition	96	6.7. RELAY SETTINGS	75	7.6.10. Unlocking an Output.....	87	6.7.1. Querying the Relay Connection State	75	7.6.11. HDCP Setting (Input Port).....	87	7.10.5. Querying the Condition Counter	96	6.7.2. Setting the Relay Connection State	75	7.6.12. HDCP Setting (Output Port)	87	6.8. LW2 COMMANDS – QUICK SUMMARY	76	7.6.13. Test Pattern Generator Mode	87	7.10.6. Querying the Condition Trigger Counter	97	7. LW3 PROGRAMMERS' REFERENCE	78	7.6.14. Test Pattern Generator Clock Source.....	88	7.1. OVERVIEW	79	7.6.15. Test Pattern Setting.....	88	7.10.7. Testing an Action.....	97	7.2. INSTRUCTIONS FOR THE TERMINAL APPLICATION USAGE	79	7.6.16. HDMI Mode Settings (Output Port)	88	7.11. VARIABLE-MANAGEMENT	97	7.3. PROTOCOL RULES	79	7.6.17. Querying the Recent TPS Mode	88	7.3.1. LW3 Tree Structure and Command Structure (examples)	79	7.6.18. TPS Mode Settings.....	89	7.11.1. Value Assignment	97	7.3.2. General Rules	79	7.7. AUDIO PORT SETTINGS.....	90	7.3.3. Command Types.....	80	7.7.1. Query the Status of Source Ports	90	7.11.2. Addition and Subtraction (Add Method)	97	7.3.4. Prefix Summary	80	7.7.2. Querying the Status of Destination Port	91	7.3.5. Error Messages	80	7.7.3. Muting an Input.....	91	7.11.3. Addition and Subtraction (Cycle Method)	98	7.3.6. Escaping	80	7.7.4. Unmuting an Input.....	91	7.3.7. Signature	81	7.7.5. Locking an Input	91	7.11.4. Value Change with Intervals (Case)	99	7.3.8. Subscription	81	7.7.6. Unlocking an Input	91	7.3.9. Notifications about the Changes of the Properties	81	7.7.7. Muting an Output	91	7.11.5. Scan and Store	99	7.3.10. Legend for the Control Commands	81	7.7.8. Unmuting an Output	91	7.4. SYSTEM COMMANDS.....	82	7.7.9. Locking an Output	92	7.11.6. Reformatting a Value	100	7.4.1. Querying the Product Name	82	7.7.10. Unlocking an Output.....	92	7.12. ETHERNET PORT CONFIGURATION.....	101	7.4.2. Setting the Device Label.....	82	7.8. ANALOG AUDIO OUTPUT SETTINGS	92	7.4.3. Querying the Serial Number	82	7.8.1. Volume Setting (dB)	92	7.12.1. Querying the DHCP State	101			7.8.2. Volume Setting (dB) in Steps.....	92					7.12.2. Changing the DHCP State	101					7.12.3. Querying the IP Address	101					7.12.4. Changing the IP Address (Static)	101					7.12.5. Querying the Subnet Mask	101					7.12.6. Changing the Subnet Mask (Static)	101					7.12.7. Querying the Gateway Address	101					7.12.8. Changing the Gateway Address (Static)	102					7.12.9. Querying the MAC Address	102					7.12.10. Applying Network Settings	102					7.13. ETHERNET TOOL KIT	102					7.13.1. Device Filter Based on MAC Address	102					7.13.2. Blocking the LW2 Control Port	103					7.13.3. Blocking the HTTP Port	103					7.13.4. Blocking Reception of HTTP Posts	103					7.13.5. Powering on a Computer over Ethernet (Wake-on-LAN)	103					7.13.6. Setting the Host Name	103
6.5. NETWORK CONFIGURATION	71	7.5. CLEARTEXT LOGIN PROTECTION	83	7.9.1. How to arrange an Event?	94																																																																																																																																																																																																																																																																																																				
6.5.1. Querying the IP Status.....	71	7.5.1. Setting the Login Password.....	83	7.9.2. Setting a Condition by Linking Another Condition	94																																																																																																																																																																																																																																																																																																				
6.5.2. Querying the IP Address.....	71	7.5.2. Logging into the Device.....	83	7.9.3. Setting a Condition by Linking More Conditions	94																																																																																																																																																																																																																																																																																																				
6.5.3. Setting the IP Address.....	71	7.5.3. Logging out of the Device	84	7.9.4. Setting an Action by Specifying a Direct Path	95																																																																																																																																																																																																																																																																																																				
6.5.4. Querying the Subnet Mask.....	72	7.5.4. Enabling/Disabling the Cleartext Login Function	84	7.9.5. Setting an Action by Linking Another Action	95																																																																																																																																																																																																																																																																																																				
6.5.5. Setting the Subnet Mask.....	72	7.6. VIDEO PORT SETTINGS	85	7.9.6. Setting an Action by Linking a Macro.....	95																																																																																																																																																																																																																																																																																																				
6.5.6. Querying the Gateway Address	72	7.6.1. Querying the Status of Source Ports	85	7.10. EVENT MANAGER TOOL KIT	95																																																																																																																																																																																																																																																																																																				
6.5.7. Setting the Gateway Address	72	7.6.2. Querying the Status of Destination Port	86	6.5.8. Applying Network Settings	72	7.6.3. Muting an Input.....	86	7.10.1. Setting the Delay.....	95	6.6. RS-232 SETTINGS	73	7.6.4. Unmuting an Input.....	86	6.6.1. Setting the RS-232 Mode	73	7.6.5. Locking an Input.....	86	7.10.2. Setting the Name of the Event	96	6.6.2. Setting the Local RS-232 Parameters	73	7.6.6. Unlocking an Input.....	86	6.6.3. Setting the Link RS-232 Parameters	74	7.6.7. Muting an Output.....	86	7.10.3. Enabling/Disabling the Event	96	6.6.4. Setting the Local RS-232 Control Protocol	74	7.6.8. Unmuting an Output	86	6.6.5. Setting the Link RS-232 Control Protocol	74	7.6.9. Locking an Output	87	7.10.4. Triggering a Condition	96	6.7. RELAY SETTINGS	75	7.6.10. Unlocking an Output.....	87	6.7.1. Querying the Relay Connection State	75	7.6.11. HDCP Setting (Input Port).....	87	7.10.5. Querying the Condition Counter	96	6.7.2. Setting the Relay Connection State	75	7.6.12. HDCP Setting (Output Port)	87	6.8. LW2 COMMANDS – QUICK SUMMARY	76	7.6.13. Test Pattern Generator Mode	87	7.10.6. Querying the Condition Trigger Counter	97	7. LW3 PROGRAMMERS' REFERENCE	78	7.6.14. Test Pattern Generator Clock Source.....	88	7.1. OVERVIEW	79	7.6.15. Test Pattern Setting.....	88	7.10.7. Testing an Action.....	97	7.2. INSTRUCTIONS FOR THE TERMINAL APPLICATION USAGE	79	7.6.16. HDMI Mode Settings (Output Port)	88	7.11. VARIABLE-MANAGEMENT	97	7.3. PROTOCOL RULES	79	7.6.17. Querying the Recent TPS Mode	88	7.3.1. LW3 Tree Structure and Command Structure (examples)	79	7.6.18. TPS Mode Settings.....	89	7.11.1. Value Assignment	97	7.3.2. General Rules	79	7.7. AUDIO PORT SETTINGS.....	90	7.3.3. Command Types.....	80	7.7.1. Query the Status of Source Ports	90	7.11.2. Addition and Subtraction (Add Method)	97	7.3.4. Prefix Summary	80	7.7.2. Querying the Status of Destination Port	91	7.3.5. Error Messages	80	7.7.3. Muting an Input.....	91	7.11.3. Addition and Subtraction (Cycle Method)	98	7.3.6. Escaping	80	7.7.4. Unmuting an Input.....	91	7.3.7. Signature	81	7.7.5. Locking an Input	91	7.11.4. Value Change with Intervals (Case)	99	7.3.8. Subscription	81	7.7.6. Unlocking an Input	91	7.3.9. Notifications about the Changes of the Properties	81	7.7.7. Muting an Output	91	7.11.5. Scan and Store	99	7.3.10. Legend for the Control Commands	81	7.7.8. Unmuting an Output	91	7.4. SYSTEM COMMANDS.....	82	7.7.9. Locking an Output	92	7.11.6. Reformatting a Value	100	7.4.1. Querying the Product Name	82	7.7.10. Unlocking an Output.....	92	7.12. ETHERNET PORT CONFIGURATION.....	101	7.4.2. Setting the Device Label.....	82	7.8. ANALOG AUDIO OUTPUT SETTINGS	92	7.4.3. Querying the Serial Number	82	7.8.1. Volume Setting (dB)	92	7.12.1. Querying the DHCP State	101			7.8.2. Volume Setting (dB) in Steps.....	92					7.12.2. Changing the DHCP State	101					7.12.3. Querying the IP Address	101					7.12.4. Changing the IP Address (Static)	101					7.12.5. Querying the Subnet Mask	101					7.12.6. Changing the Subnet Mask (Static)	101					7.12.7. Querying the Gateway Address	101					7.12.8. Changing the Gateway Address (Static)	102					7.12.9. Querying the MAC Address	102					7.12.10. Applying Network Settings	102					7.13. ETHERNET TOOL KIT	102					7.13.1. Device Filter Based on MAC Address	102					7.13.2. Blocking the LW2 Control Port	103					7.13.3. Blocking the HTTP Port	103					7.13.4. Blocking Reception of HTTP Posts	103					7.13.5. Powering on a Computer over Ethernet (Wake-on-LAN)	103					7.13.6. Setting the Host Name	103																																														
6.5.8. Applying Network Settings	72	7.6.3. Muting an Input.....	86	7.10.1. Setting the Delay.....	95																																																																																																																																																																																																																																																																																																				
6.6. RS-232 SETTINGS	73	7.6.4. Unmuting an Input.....	86	6.6.1. Setting the RS-232 Mode	73	7.6.5. Locking an Input.....	86	7.10.2. Setting the Name of the Event	96	6.6.2. Setting the Local RS-232 Parameters	73	7.6.6. Unlocking an Input.....	86	6.6.3. Setting the Link RS-232 Parameters	74	7.6.7. Muting an Output.....	86	7.10.3. Enabling/Disabling the Event	96	6.6.4. Setting the Local RS-232 Control Protocol	74	7.6.8. Unmuting an Output	86	6.6.5. Setting the Link RS-232 Control Protocol	74	7.6.9. Locking an Output	87	7.10.4. Triggering a Condition	96	6.7. RELAY SETTINGS	75	7.6.10. Unlocking an Output.....	87	6.7.1. Querying the Relay Connection State	75	7.6.11. HDCP Setting (Input Port).....	87	7.10.5. Querying the Condition Counter	96	6.7.2. Setting the Relay Connection State	75	7.6.12. HDCP Setting (Output Port)	87	6.8. LW2 COMMANDS – QUICK SUMMARY	76	7.6.13. Test Pattern Generator Mode	87	7.10.6. Querying the Condition Trigger Counter	97	7. LW3 PROGRAMMERS' REFERENCE	78	7.6.14. Test Pattern Generator Clock Source.....	88	7.1. OVERVIEW	79	7.6.15. Test Pattern Setting.....	88	7.10.7. Testing an Action.....	97	7.2. INSTRUCTIONS FOR THE TERMINAL APPLICATION USAGE	79	7.6.16. HDMI Mode Settings (Output Port)	88	7.11. VARIABLE-MANAGEMENT	97	7.3. PROTOCOL RULES	79	7.6.17. Querying the Recent TPS Mode	88	7.3.1. LW3 Tree Structure and Command Structure (examples)	79	7.6.18. TPS Mode Settings.....	89	7.11.1. Value Assignment	97	7.3.2. General Rules	79	7.7. AUDIO PORT SETTINGS.....	90	7.3.3. Command Types.....	80	7.7.1. Query the Status of Source Ports	90	7.11.2. Addition and Subtraction (Add Method)	97	7.3.4. Prefix Summary	80	7.7.2. Querying the Status of Destination Port	91	7.3.5. Error Messages	80	7.7.3. Muting an Input.....	91	7.11.3. Addition and Subtraction (Cycle Method)	98	7.3.6. Escaping	80	7.7.4. Unmuting an Input.....	91	7.3.7. Signature	81	7.7.5. Locking an Input	91	7.11.4. Value Change with Intervals (Case)	99	7.3.8. Subscription	81	7.7.6. Unlocking an Input	91	7.3.9. Notifications about the Changes of the Properties	81	7.7.7. Muting an Output	91	7.11.5. Scan and Store	99	7.3.10. Legend for the Control Commands	81	7.7.8. Unmuting an Output	91	7.4. SYSTEM COMMANDS.....	82	7.7.9. Locking an Output	92	7.11.6. Reformatting a Value	100	7.4.1. Querying the Product Name	82	7.7.10. Unlocking an Output.....	92	7.12. ETHERNET PORT CONFIGURATION.....	101	7.4.2. Setting the Device Label.....	82	7.8. ANALOG AUDIO OUTPUT SETTINGS	92	7.4.3. Querying the Serial Number	82	7.8.1. Volume Setting (dB)	92	7.12.1. Querying the DHCP State	101			7.8.2. Volume Setting (dB) in Steps.....	92					7.12.2. Changing the DHCP State	101					7.12.3. Querying the IP Address	101					7.12.4. Changing the IP Address (Static)	101					7.12.5. Querying the Subnet Mask	101					7.12.6. Changing the Subnet Mask (Static)	101					7.12.7. Querying the Gateway Address	101					7.12.8. Changing the Gateway Address (Static)	102					7.12.9. Querying the MAC Address	102					7.12.10. Applying Network Settings	102					7.13. ETHERNET TOOL KIT	102					7.13.1. Device Filter Based on MAC Address	102					7.13.2. Blocking the LW2 Control Port	103					7.13.3. Blocking the HTTP Port	103					7.13.4. Blocking Reception of HTTP Posts	103					7.13.5. Powering on a Computer over Ethernet (Wake-on-LAN)	103					7.13.6. Setting the Host Name	103																																																								
6.6.1. Setting the RS-232 Mode	73	7.6.5. Locking an Input.....	86	7.10.2. Setting the Name of the Event	96																																																																																																																																																																																																																																																																																																				
6.6.2. Setting the Local RS-232 Parameters	73	7.6.6. Unlocking an Input.....	86	6.6.3. Setting the Link RS-232 Parameters	74	7.6.7. Muting an Output.....	86	7.10.3. Enabling/Disabling the Event	96	6.6.4. Setting the Local RS-232 Control Protocol	74	7.6.8. Unmuting an Output	86	6.6.5. Setting the Link RS-232 Control Protocol	74	7.6.9. Locking an Output	87	7.10.4. Triggering a Condition	96	6.7. RELAY SETTINGS	75	7.6.10. Unlocking an Output.....	87	6.7.1. Querying the Relay Connection State	75	7.6.11. HDCP Setting (Input Port).....	87	7.10.5. Querying the Condition Counter	96	6.7.2. Setting the Relay Connection State	75	7.6.12. HDCP Setting (Output Port)	87	6.8. LW2 COMMANDS – QUICK SUMMARY	76	7.6.13. Test Pattern Generator Mode	87	7.10.6. Querying the Condition Trigger Counter	97	7. LW3 PROGRAMMERS' REFERENCE	78	7.6.14. Test Pattern Generator Clock Source.....	88	7.1. OVERVIEW	79	7.6.15. Test Pattern Setting.....	88	7.10.7. Testing an Action.....	97	7.2. INSTRUCTIONS FOR THE TERMINAL APPLICATION USAGE	79	7.6.16. HDMI Mode Settings (Output Port)	88	7.11. VARIABLE-MANAGEMENT	97	7.3. PROTOCOL RULES	79	7.6.17. Querying the Recent TPS Mode	88	7.3.1. LW3 Tree Structure and Command Structure (examples)	79	7.6.18. TPS Mode Settings.....	89	7.11.1. Value Assignment	97	7.3.2. General Rules	79	7.7. AUDIO PORT SETTINGS.....	90	7.3.3. Command Types.....	80	7.7.1. Query the Status of Source Ports	90	7.11.2. Addition and Subtraction (Add Method)	97	7.3.4. Prefix Summary	80	7.7.2. Querying the Status of Destination Port	91	7.3.5. Error Messages	80	7.7.3. Muting an Input.....	91	7.11.3. Addition and Subtraction (Cycle Method)	98	7.3.6. Escaping	80	7.7.4. Unmuting an Input.....	91	7.3.7. Signature	81	7.7.5. Locking an Input	91	7.11.4. Value Change with Intervals (Case)	99	7.3.8. Subscription	81	7.7.6. Unlocking an Input	91	7.3.9. Notifications about the Changes of the Properties	81	7.7.7. Muting an Output	91	7.11.5. Scan and Store	99	7.3.10. Legend for the Control Commands	81	7.7.8. Unmuting an Output	91	7.4. SYSTEM COMMANDS.....	82	7.7.9. Locking an Output	92	7.11.6. Reformatting a Value	100	7.4.1. Querying the Product Name	82	7.7.10. Unlocking an Output.....	92	7.12. ETHERNET PORT CONFIGURATION.....	101	7.4.2. Setting the Device Label.....	82	7.8. ANALOG AUDIO OUTPUT SETTINGS	92	7.4.3. Querying the Serial Number	82	7.8.1. Volume Setting (dB)	92	7.12.1. Querying the DHCP State	101			7.8.2. Volume Setting (dB) in Steps.....	92					7.12.2. Changing the DHCP State	101					7.12.3. Querying the IP Address	101					7.12.4. Changing the IP Address (Static)	101					7.12.5. Querying the Subnet Mask	101					7.12.6. Changing the Subnet Mask (Static)	101					7.12.7. Querying the Gateway Address	101					7.12.8. Changing the Gateway Address (Static)	102					7.12.9. Querying the MAC Address	102					7.12.10. Applying Network Settings	102					7.13. ETHERNET TOOL KIT	102					7.13.1. Device Filter Based on MAC Address	102					7.13.2. Blocking the LW2 Control Port	103					7.13.3. Blocking the HTTP Port	103					7.13.4. Blocking Reception of HTTP Posts	103					7.13.5. Powering on a Computer over Ethernet (Wake-on-LAN)	103					7.13.6. Setting the Host Name	103																																																																		
6.6.3. Setting the Link RS-232 Parameters	74	7.6.7. Muting an Output.....	86	7.10.3. Enabling/Disabling the Event	96																																																																																																																																																																																																																																																																																																				
6.6.4. Setting the Local RS-232 Control Protocol	74	7.6.8. Unmuting an Output	86	6.6.5. Setting the Link RS-232 Control Protocol	74	7.6.9. Locking an Output	87	7.10.4. Triggering a Condition	96	6.7. RELAY SETTINGS	75	7.6.10. Unlocking an Output.....	87	6.7.1. Querying the Relay Connection State	75	7.6.11. HDCP Setting (Input Port).....	87	7.10.5. Querying the Condition Counter	96	6.7.2. Setting the Relay Connection State	75	7.6.12. HDCP Setting (Output Port)	87	6.8. LW2 COMMANDS – QUICK SUMMARY	76	7.6.13. Test Pattern Generator Mode	87	7.10.6. Querying the Condition Trigger Counter	97	7. LW3 PROGRAMMERS' REFERENCE	78	7.6.14. Test Pattern Generator Clock Source.....	88	7.1. OVERVIEW	79	7.6.15. Test Pattern Setting.....	88	7.10.7. Testing an Action.....	97	7.2. INSTRUCTIONS FOR THE TERMINAL APPLICATION USAGE	79	7.6.16. HDMI Mode Settings (Output Port)	88	7.11. VARIABLE-MANAGEMENT	97	7.3. PROTOCOL RULES	79	7.6.17. Querying the Recent TPS Mode	88	7.3.1. LW3 Tree Structure and Command Structure (examples)	79	7.6.18. TPS Mode Settings.....	89	7.11.1. Value Assignment	97	7.3.2. General Rules	79	7.7. AUDIO PORT SETTINGS.....	90	7.3.3. Command Types.....	80	7.7.1. Query the Status of Source Ports	90	7.11.2. Addition and Subtraction (Add Method)	97	7.3.4. Prefix Summary	80	7.7.2. Querying the Status of Destination Port	91	7.3.5. Error Messages	80	7.7.3. Muting an Input.....	91	7.11.3. Addition and Subtraction (Cycle Method)	98	7.3.6. Escaping	80	7.7.4. Unmuting an Input.....	91	7.3.7. Signature	81	7.7.5. Locking an Input	91	7.11.4. Value Change with Intervals (Case)	99	7.3.8. Subscription	81	7.7.6. Unlocking an Input	91	7.3.9. Notifications about the Changes of the Properties	81	7.7.7. Muting an Output	91	7.11.5. Scan and Store	99	7.3.10. Legend for the Control Commands	81	7.7.8. Unmuting an Output	91	7.4. SYSTEM COMMANDS.....	82	7.7.9. Locking an Output	92	7.11.6. Reformatting a Value	100	7.4.1. Querying the Product Name	82	7.7.10. Unlocking an Output.....	92	7.12. ETHERNET PORT CONFIGURATION.....	101	7.4.2. Setting the Device Label.....	82	7.8. ANALOG AUDIO OUTPUT SETTINGS	92	7.4.3. Querying the Serial Number	82	7.8.1. Volume Setting (dB)	92	7.12.1. Querying the DHCP State	101			7.8.2. Volume Setting (dB) in Steps.....	92					7.12.2. Changing the DHCP State	101					7.12.3. Querying the IP Address	101					7.12.4. Changing the IP Address (Static)	101					7.12.5. Querying the Subnet Mask	101					7.12.6. Changing the Subnet Mask (Static)	101					7.12.7. Querying the Gateway Address	101					7.12.8. Changing the Gateway Address (Static)	102					7.12.9. Querying the MAC Address	102					7.12.10. Applying Network Settings	102					7.13. ETHERNET TOOL KIT	102					7.13.1. Device Filter Based on MAC Address	102					7.13.2. Blocking the LW2 Control Port	103					7.13.3. Blocking the HTTP Port	103					7.13.4. Blocking Reception of HTTP Posts	103					7.13.5. Powering on a Computer over Ethernet (Wake-on-LAN)	103					7.13.6. Setting the Host Name	103																																																																												
6.6.5. Setting the Link RS-232 Control Protocol	74	7.6.9. Locking an Output	87	7.10.4. Triggering a Condition	96																																																																																																																																																																																																																																																																																																				
6.7. RELAY SETTINGS	75	7.6.10. Unlocking an Output.....	87	6.7.1. Querying the Relay Connection State	75	7.6.11. HDCP Setting (Input Port).....	87	7.10.5. Querying the Condition Counter	96	6.7.2. Setting the Relay Connection State	75	7.6.12. HDCP Setting (Output Port)	87	6.8. LW2 COMMANDS – QUICK SUMMARY	76	7.6.13. Test Pattern Generator Mode	87	7.10.6. Querying the Condition Trigger Counter	97	7. LW3 PROGRAMMERS' REFERENCE	78	7.6.14. Test Pattern Generator Clock Source.....	88	7.1. OVERVIEW	79	7.6.15. Test Pattern Setting.....	88	7.10.7. Testing an Action.....	97	7.2. INSTRUCTIONS FOR THE TERMINAL APPLICATION USAGE	79	7.6.16. HDMI Mode Settings (Output Port)	88	7.11. VARIABLE-MANAGEMENT	97	7.3. PROTOCOL RULES	79	7.6.17. Querying the Recent TPS Mode	88	7.3.1. LW3 Tree Structure and Command Structure (examples)	79	7.6.18. TPS Mode Settings.....	89	7.11.1. Value Assignment	97	7.3.2. General Rules	79	7.7. AUDIO PORT SETTINGS.....	90	7.3.3. Command Types.....	80	7.7.1. Query the Status of Source Ports	90	7.11.2. Addition and Subtraction (Add Method)	97	7.3.4. Prefix Summary	80	7.7.2. Querying the Status of Destination Port	91	7.3.5. Error Messages	80	7.7.3. Muting an Input.....	91	7.11.3. Addition and Subtraction (Cycle Method)	98	7.3.6. Escaping	80	7.7.4. Unmuting an Input.....	91	7.3.7. Signature	81	7.7.5. Locking an Input	91	7.11.4. Value Change with Intervals (Case)	99	7.3.8. Subscription	81	7.7.6. Unlocking an Input	91	7.3.9. Notifications about the Changes of the Properties	81	7.7.7. Muting an Output	91	7.11.5. Scan and Store	99	7.3.10. Legend for the Control Commands	81	7.7.8. Unmuting an Output	91	7.4. SYSTEM COMMANDS.....	82	7.7.9. Locking an Output	92	7.11.6. Reformatting a Value	100	7.4.1. Querying the Product Name	82	7.7.10. Unlocking an Output.....	92	7.12. ETHERNET PORT CONFIGURATION.....	101	7.4.2. Setting the Device Label.....	82	7.8. ANALOG AUDIO OUTPUT SETTINGS	92	7.4.3. Querying the Serial Number	82	7.8.1. Volume Setting (dB)	92	7.12.1. Querying the DHCP State	101			7.8.2. Volume Setting (dB) in Steps.....	92					7.12.2. Changing the DHCP State	101					7.12.3. Querying the IP Address	101					7.12.4. Changing the IP Address (Static)	101					7.12.5. Querying the Subnet Mask	101					7.12.6. Changing the Subnet Mask (Static)	101					7.12.7. Querying the Gateway Address	101					7.12.8. Changing the Gateway Address (Static)	102					7.12.9. Querying the MAC Address	102					7.12.10. Applying Network Settings	102					7.13. ETHERNET TOOL KIT	102					7.13.1. Device Filter Based on MAC Address	102					7.13.2. Blocking the LW2 Control Port	103					7.13.3. Blocking the HTTP Port	103					7.13.4. Blocking Reception of HTTP Posts	103					7.13.5. Powering on a Computer over Ethernet (Wake-on-LAN)	103					7.13.6. Setting the Host Name	103																																																																																						
6.7.1. Querying the Relay Connection State	75	7.6.11. HDCP Setting (Input Port).....	87	7.10.5. Querying the Condition Counter	96																																																																																																																																																																																																																																																																																																				
6.7.2. Setting the Relay Connection State	75	7.6.12. HDCP Setting (Output Port)	87	6.8. LW2 COMMANDS – QUICK SUMMARY	76	7.6.13. Test Pattern Generator Mode	87	7.10.6. Querying the Condition Trigger Counter	97	7. LW3 PROGRAMMERS' REFERENCE	78	7.6.14. Test Pattern Generator Clock Source.....	88	7.1. OVERVIEW	79	7.6.15. Test Pattern Setting.....	88	7.10.7. Testing an Action.....	97	7.2. INSTRUCTIONS FOR THE TERMINAL APPLICATION USAGE	79	7.6.16. HDMI Mode Settings (Output Port)	88	7.11. VARIABLE-MANAGEMENT	97	7.3. PROTOCOL RULES	79	7.6.17. Querying the Recent TPS Mode	88	7.3.1. LW3 Tree Structure and Command Structure (examples)	79	7.6.18. TPS Mode Settings.....	89	7.11.1. Value Assignment	97	7.3.2. General Rules	79	7.7. AUDIO PORT SETTINGS.....	90	7.3.3. Command Types.....	80	7.7.1. Query the Status of Source Ports	90	7.11.2. Addition and Subtraction (Add Method)	97	7.3.4. Prefix Summary	80	7.7.2. Querying the Status of Destination Port	91	7.3.5. Error Messages	80	7.7.3. Muting an Input.....	91	7.11.3. Addition and Subtraction (Cycle Method)	98	7.3.6. Escaping	80	7.7.4. Unmuting an Input.....	91	7.3.7. Signature	81	7.7.5. Locking an Input	91	7.11.4. Value Change with Intervals (Case)	99	7.3.8. Subscription	81	7.7.6. Unlocking an Input	91	7.3.9. Notifications about the Changes of the Properties	81	7.7.7. Muting an Output	91	7.11.5. Scan and Store	99	7.3.10. Legend for the Control Commands	81	7.7.8. Unmuting an Output	91	7.4. SYSTEM COMMANDS.....	82	7.7.9. Locking an Output	92	7.11.6. Reformatting a Value	100	7.4.1. Querying the Product Name	82	7.7.10. Unlocking an Output.....	92	7.12. ETHERNET PORT CONFIGURATION.....	101	7.4.2. Setting the Device Label.....	82	7.8. ANALOG AUDIO OUTPUT SETTINGS	92	7.4.3. Querying the Serial Number	82	7.8.1. Volume Setting (dB)	92	7.12.1. Querying the DHCP State	101			7.8.2. Volume Setting (dB) in Steps.....	92					7.12.2. Changing the DHCP State	101					7.12.3. Querying the IP Address	101					7.12.4. Changing the IP Address (Static)	101					7.12.5. Querying the Subnet Mask	101					7.12.6. Changing the Subnet Mask (Static)	101					7.12.7. Querying the Gateway Address	101					7.12.8. Changing the Gateway Address (Static)	102					7.12.9. Querying the MAC Address	102					7.12.10. Applying Network Settings	102					7.13. ETHERNET TOOL KIT	102					7.13.1. Device Filter Based on MAC Address	102					7.13.2. Blocking the LW2 Control Port	103					7.13.3. Blocking the HTTP Port	103					7.13.4. Blocking Reception of HTTP Posts	103					7.13.5. Powering on a Computer over Ethernet (Wake-on-LAN)	103					7.13.6. Setting the Host Name	103																																																																																																
6.8. LW2 COMMANDS – QUICK SUMMARY	76	7.6.13. Test Pattern Generator Mode	87	7.10.6. Querying the Condition Trigger Counter	97																																																																																																																																																																																																																																																																																																				
7. LW3 PROGRAMMERS' REFERENCE	78	7.6.14. Test Pattern Generator Clock Source.....	88	7.1. OVERVIEW	79	7.6.15. Test Pattern Setting.....	88	7.10.7. Testing an Action.....	97	7.2. INSTRUCTIONS FOR THE TERMINAL APPLICATION USAGE	79	7.6.16. HDMI Mode Settings (Output Port)	88	7.11. VARIABLE-MANAGEMENT	97	7.3. PROTOCOL RULES	79	7.6.17. Querying the Recent TPS Mode	88	7.3.1. LW3 Tree Structure and Command Structure (examples)	79	7.6.18. TPS Mode Settings.....	89	7.11.1. Value Assignment	97	7.3.2. General Rules	79	7.7. AUDIO PORT SETTINGS.....	90	7.3.3. Command Types.....	80	7.7.1. Query the Status of Source Ports	90	7.11.2. Addition and Subtraction (Add Method)	97	7.3.4. Prefix Summary	80	7.7.2. Querying the Status of Destination Port	91	7.3.5. Error Messages	80	7.7.3. Muting an Input.....	91	7.11.3. Addition and Subtraction (Cycle Method)	98	7.3.6. Escaping	80	7.7.4. Unmuting an Input.....	91	7.3.7. Signature	81	7.7.5. Locking an Input	91	7.11.4. Value Change with Intervals (Case)	99	7.3.8. Subscription	81	7.7.6. Unlocking an Input	91	7.3.9. Notifications about the Changes of the Properties	81	7.7.7. Muting an Output	91	7.11.5. Scan and Store	99	7.3.10. Legend for the Control Commands	81	7.7.8. Unmuting an Output	91	7.4. SYSTEM COMMANDS.....	82	7.7.9. Locking an Output	92	7.11.6. Reformatting a Value	100	7.4.1. Querying the Product Name	82	7.7.10. Unlocking an Output.....	92	7.12. ETHERNET PORT CONFIGURATION.....	101	7.4.2. Setting the Device Label.....	82	7.8. ANALOG AUDIO OUTPUT SETTINGS	92	7.4.3. Querying the Serial Number	82	7.8.1. Volume Setting (dB)	92	7.12.1. Querying the DHCP State	101			7.8.2. Volume Setting (dB) in Steps.....	92					7.12.2. Changing the DHCP State	101					7.12.3. Querying the IP Address	101					7.12.4. Changing the IP Address (Static)	101					7.12.5. Querying the Subnet Mask	101					7.12.6. Changing the Subnet Mask (Static)	101					7.12.7. Querying the Gateway Address	101					7.12.8. Changing the Gateway Address (Static)	102					7.12.9. Querying the MAC Address	102					7.12.10. Applying Network Settings	102					7.13. ETHERNET TOOL KIT	102					7.13.1. Device Filter Based on MAC Address	102					7.13.2. Blocking the LW2 Control Port	103					7.13.3. Blocking the HTTP Port	103					7.13.4. Blocking Reception of HTTP Posts	103					7.13.5. Powering on a Computer over Ethernet (Wake-on-LAN)	103					7.13.6. Setting the Host Name	103																																																																																																										
7.1. OVERVIEW	79	7.6.15. Test Pattern Setting.....	88	7.10.7. Testing an Action.....	97																																																																																																																																																																																																																																																																																																				
7.2. INSTRUCTIONS FOR THE TERMINAL APPLICATION USAGE	79	7.6.16. HDMI Mode Settings (Output Port)	88	7.11. VARIABLE-MANAGEMENT	97																																																																																																																																																																																																																																																																																																				
7.3. PROTOCOL RULES	79	7.6.17. Querying the Recent TPS Mode	88	7.3.1. LW3 Tree Structure and Command Structure (examples)	79	7.6.18. TPS Mode Settings.....	89	7.11.1. Value Assignment	97	7.3.2. General Rules	79	7.7. AUDIO PORT SETTINGS.....	90	7.3.3. Command Types.....	80	7.7.1. Query the Status of Source Ports	90	7.11.2. Addition and Subtraction (Add Method)	97	7.3.4. Prefix Summary	80	7.7.2. Querying the Status of Destination Port	91	7.3.5. Error Messages	80	7.7.3. Muting an Input.....	91	7.11.3. Addition and Subtraction (Cycle Method)	98	7.3.6. Escaping	80	7.7.4. Unmuting an Input.....	91	7.3.7. Signature	81	7.7.5. Locking an Input	91	7.11.4. Value Change with Intervals (Case)	99	7.3.8. Subscription	81	7.7.6. Unlocking an Input	91	7.3.9. Notifications about the Changes of the Properties	81	7.7.7. Muting an Output	91	7.11.5. Scan and Store	99	7.3.10. Legend for the Control Commands	81	7.7.8. Unmuting an Output	91	7.4. SYSTEM COMMANDS.....	82	7.7.9. Locking an Output	92	7.11.6. Reformatting a Value	100	7.4.1. Querying the Product Name	82	7.7.10. Unlocking an Output.....	92	7.12. ETHERNET PORT CONFIGURATION.....	101	7.4.2. Setting the Device Label.....	82	7.8. ANALOG AUDIO OUTPUT SETTINGS	92	7.4.3. Querying the Serial Number	82	7.8.1. Volume Setting (dB)	92	7.12.1. Querying the DHCP State	101			7.8.2. Volume Setting (dB) in Steps.....	92					7.12.2. Changing the DHCP State	101					7.12.3. Querying the IP Address	101					7.12.4. Changing the IP Address (Static)	101					7.12.5. Querying the Subnet Mask	101					7.12.6. Changing the Subnet Mask (Static)	101					7.12.7. Querying the Gateway Address	101					7.12.8. Changing the Gateway Address (Static)	102					7.12.9. Querying the MAC Address	102					7.12.10. Applying Network Settings	102					7.13. ETHERNET TOOL KIT	102					7.13.1. Device Filter Based on MAC Address	102					7.13.2. Blocking the LW2 Control Port	103					7.13.3. Blocking the HTTP Port	103					7.13.4. Blocking Reception of HTTP Posts	103					7.13.5. Powering on a Computer over Ethernet (Wake-on-LAN)	103					7.13.6. Setting the Host Name	103																																																																																																																										
7.3.1. LW3 Tree Structure and Command Structure (examples)	79	7.6.18. TPS Mode Settings.....	89	7.11.1. Value Assignment	97																																																																																																																																																																																																																																																																																																				
7.3.2. General Rules	79	7.7. AUDIO PORT SETTINGS.....	90	7.3.3. Command Types.....	80	7.7.1. Query the Status of Source Ports	90	7.11.2. Addition and Subtraction (Add Method)	97	7.3.4. Prefix Summary	80	7.7.2. Querying the Status of Destination Port	91	7.3.5. Error Messages	80	7.7.3. Muting an Input.....	91	7.11.3. Addition and Subtraction (Cycle Method)	98	7.3.6. Escaping	80	7.7.4. Unmuting an Input.....	91	7.3.7. Signature	81	7.7.5. Locking an Input	91	7.11.4. Value Change with Intervals (Case)	99	7.3.8. Subscription	81	7.7.6. Unlocking an Input	91	7.3.9. Notifications about the Changes of the Properties	81	7.7.7. Muting an Output	91	7.11.5. Scan and Store	99	7.3.10. Legend for the Control Commands	81	7.7.8. Unmuting an Output	91	7.4. SYSTEM COMMANDS.....	82	7.7.9. Locking an Output	92	7.11.6. Reformatting a Value	100	7.4.1. Querying the Product Name	82	7.7.10. Unlocking an Output.....	92	7.12. ETHERNET PORT CONFIGURATION.....	101	7.4.2. Setting the Device Label.....	82	7.8. ANALOG AUDIO OUTPUT SETTINGS	92	7.4.3. Querying the Serial Number	82	7.8.1. Volume Setting (dB)	92	7.12.1. Querying the DHCP State	101			7.8.2. Volume Setting (dB) in Steps.....	92					7.12.2. Changing the DHCP State	101					7.12.3. Querying the IP Address	101					7.12.4. Changing the IP Address (Static)	101					7.12.5. Querying the Subnet Mask	101					7.12.6. Changing the Subnet Mask (Static)	101					7.12.7. Querying the Gateway Address	101					7.12.8. Changing the Gateway Address (Static)	102					7.12.9. Querying the MAC Address	102					7.12.10. Applying Network Settings	102					7.13. ETHERNET TOOL KIT	102					7.13.1. Device Filter Based on MAC Address	102					7.13.2. Blocking the LW2 Control Port	103					7.13.3. Blocking the HTTP Port	103					7.13.4. Blocking Reception of HTTP Posts	103					7.13.5. Powering on a Computer over Ethernet (Wake-on-LAN)	103					7.13.6. Setting the Host Name	103																																																																																																																																				
7.3.3. Command Types.....	80	7.7.1. Query the Status of Source Ports	90	7.11.2. Addition and Subtraction (Add Method)	97																																																																																																																																																																																																																																																																																																				
7.3.4. Prefix Summary	80	7.7.2. Querying the Status of Destination Port	91	7.3.5. Error Messages	80	7.7.3. Muting an Input.....	91	7.11.3. Addition and Subtraction (Cycle Method)	98	7.3.6. Escaping	80	7.7.4. Unmuting an Input.....	91	7.3.7. Signature	81	7.7.5. Locking an Input	91	7.11.4. Value Change with Intervals (Case)	99	7.3.8. Subscription	81	7.7.6. Unlocking an Input	91	7.3.9. Notifications about the Changes of the Properties	81	7.7.7. Muting an Output	91	7.11.5. Scan and Store	99	7.3.10. Legend for the Control Commands	81	7.7.8. Unmuting an Output	91	7.4. SYSTEM COMMANDS.....	82	7.7.9. Locking an Output	92	7.11.6. Reformatting a Value	100	7.4.1. Querying the Product Name	82	7.7.10. Unlocking an Output.....	92	7.12. ETHERNET PORT CONFIGURATION.....	101	7.4.2. Setting the Device Label.....	82	7.8. ANALOG AUDIO OUTPUT SETTINGS	92	7.4.3. Querying the Serial Number	82	7.8.1. Volume Setting (dB)	92	7.12.1. Querying the DHCP State	101			7.8.2. Volume Setting (dB) in Steps.....	92					7.12.2. Changing the DHCP State	101					7.12.3. Querying the IP Address	101					7.12.4. Changing the IP Address (Static)	101					7.12.5. Querying the Subnet Mask	101					7.12.6. Changing the Subnet Mask (Static)	101					7.12.7. Querying the Gateway Address	101					7.12.8. Changing the Gateway Address (Static)	102					7.12.9. Querying the MAC Address	102					7.12.10. Applying Network Settings	102					7.13. ETHERNET TOOL KIT	102					7.13.1. Device Filter Based on MAC Address	102					7.13.2. Blocking the LW2 Control Port	103					7.13.3. Blocking the HTTP Port	103					7.13.4. Blocking Reception of HTTP Posts	103					7.13.5. Powering on a Computer over Ethernet (Wake-on-LAN)	103					7.13.6. Setting the Host Name	103																																																																																																																																														
7.3.5. Error Messages	80	7.7.3. Muting an Input.....	91	7.11.3. Addition and Subtraction (Cycle Method)	98																																																																																																																																																																																																																																																																																																				
7.3.6. Escaping	80	7.7.4. Unmuting an Input.....	91	7.3.7. Signature	81	7.7.5. Locking an Input	91	7.11.4. Value Change with Intervals (Case)	99	7.3.8. Subscription	81	7.7.6. Unlocking an Input	91	7.3.9. Notifications about the Changes of the Properties	81	7.7.7. Muting an Output	91	7.11.5. Scan and Store	99	7.3.10. Legend for the Control Commands	81	7.7.8. Unmuting an Output	91	7.4. SYSTEM COMMANDS.....	82	7.7.9. Locking an Output	92	7.11.6. Reformatting a Value	100	7.4.1. Querying the Product Name	82	7.7.10. Unlocking an Output.....	92	7.12. ETHERNET PORT CONFIGURATION.....	101	7.4.2. Setting the Device Label.....	82	7.8. ANALOG AUDIO OUTPUT SETTINGS	92	7.4.3. Querying the Serial Number	82	7.8.1. Volume Setting (dB)	92	7.12.1. Querying the DHCP State	101			7.8.2. Volume Setting (dB) in Steps.....	92					7.12.2. Changing the DHCP State	101					7.12.3. Querying the IP Address	101					7.12.4. Changing the IP Address (Static)	101					7.12.5. Querying the Subnet Mask	101					7.12.6. Changing the Subnet Mask (Static)	101					7.12.7. Querying the Gateway Address	101					7.12.8. Changing the Gateway Address (Static)	102					7.12.9. Querying the MAC Address	102					7.12.10. Applying Network Settings	102					7.13. ETHERNET TOOL KIT	102					7.13.1. Device Filter Based on MAC Address	102					7.13.2. Blocking the LW2 Control Port	103					7.13.3. Blocking the HTTP Port	103					7.13.4. Blocking Reception of HTTP Posts	103					7.13.5. Powering on a Computer over Ethernet (Wake-on-LAN)	103					7.13.6. Setting the Host Name	103																																																																																																																																																								
7.3.7. Signature	81	7.7.5. Locking an Input	91	7.11.4. Value Change with Intervals (Case)	99																																																																																																																																																																																																																																																																																																				
7.3.8. Subscription	81	7.7.6. Unlocking an Input	91	7.3.9. Notifications about the Changes of the Properties	81	7.7.7. Muting an Output	91	7.11.5. Scan and Store	99	7.3.10. Legend for the Control Commands	81	7.7.8. Unmuting an Output	91	7.4. SYSTEM COMMANDS.....	82	7.7.9. Locking an Output	92	7.11.6. Reformatting a Value	100	7.4.1. Querying the Product Name	82	7.7.10. Unlocking an Output.....	92	7.12. ETHERNET PORT CONFIGURATION.....	101	7.4.2. Setting the Device Label.....	82	7.8. ANALOG AUDIO OUTPUT SETTINGS	92	7.4.3. Querying the Serial Number	82	7.8.1. Volume Setting (dB)	92	7.12.1. Querying the DHCP State	101			7.8.2. Volume Setting (dB) in Steps.....	92					7.12.2. Changing the DHCP State	101					7.12.3. Querying the IP Address	101					7.12.4. Changing the IP Address (Static)	101					7.12.5. Querying the Subnet Mask	101					7.12.6. Changing the Subnet Mask (Static)	101					7.12.7. Querying the Gateway Address	101					7.12.8. Changing the Gateway Address (Static)	102					7.12.9. Querying the MAC Address	102					7.12.10. Applying Network Settings	102					7.13. ETHERNET TOOL KIT	102					7.13.1. Device Filter Based on MAC Address	102					7.13.2. Blocking the LW2 Control Port	103					7.13.3. Blocking the HTTP Port	103					7.13.4. Blocking Reception of HTTP Posts	103					7.13.5. Powering on a Computer over Ethernet (Wake-on-LAN)	103					7.13.6. Setting the Host Name	103																																																																																																																																																																		
7.3.9. Notifications about the Changes of the Properties	81	7.7.7. Muting an Output	91	7.11.5. Scan and Store	99																																																																																																																																																																																																																																																																																																				
7.3.10. Legend for the Control Commands	81	7.7.8. Unmuting an Output	91	7.4. SYSTEM COMMANDS.....	82	7.7.9. Locking an Output	92	7.11.6. Reformatting a Value	100	7.4.1. Querying the Product Name	82	7.7.10. Unlocking an Output.....	92	7.12. ETHERNET PORT CONFIGURATION.....	101	7.4.2. Setting the Device Label.....	82	7.8. ANALOG AUDIO OUTPUT SETTINGS	92	7.4.3. Querying the Serial Number	82	7.8.1. Volume Setting (dB)	92	7.12.1. Querying the DHCP State	101			7.8.2. Volume Setting (dB) in Steps.....	92					7.12.2. Changing the DHCP State	101					7.12.3. Querying the IP Address	101					7.12.4. Changing the IP Address (Static)	101					7.12.5. Querying the Subnet Mask	101					7.12.6. Changing the Subnet Mask (Static)	101					7.12.7. Querying the Gateway Address	101					7.12.8. Changing the Gateway Address (Static)	102					7.12.9. Querying the MAC Address	102					7.12.10. Applying Network Settings	102					7.13. ETHERNET TOOL KIT	102					7.13.1. Device Filter Based on MAC Address	102					7.13.2. Blocking the LW2 Control Port	103					7.13.3. Blocking the HTTP Port	103					7.13.4. Blocking Reception of HTTP Posts	103					7.13.5. Powering on a Computer over Ethernet (Wake-on-LAN)	103					7.13.6. Setting the Host Name	103																																																																																																																																																																												
7.4. SYSTEM COMMANDS.....	82	7.7.9. Locking an Output	92	7.11.6. Reformatting a Value	100																																																																																																																																																																																																																																																																																																				
7.4.1. Querying the Product Name	82	7.7.10. Unlocking an Output.....	92	7.12. ETHERNET PORT CONFIGURATION.....	101																																																																																																																																																																																																																																																																																																				
7.4.2. Setting the Device Label.....	82	7.8. ANALOG AUDIO OUTPUT SETTINGS	92	7.4.3. Querying the Serial Number	82	7.8.1. Volume Setting (dB)	92	7.12.1. Querying the DHCP State	101			7.8.2. Volume Setting (dB) in Steps.....	92					7.12.2. Changing the DHCP State	101					7.12.3. Querying the IP Address	101					7.12.4. Changing the IP Address (Static)	101					7.12.5. Querying the Subnet Mask	101					7.12.6. Changing the Subnet Mask (Static)	101					7.12.7. Querying the Gateway Address	101					7.12.8. Changing the Gateway Address (Static)	102					7.12.9. Querying the MAC Address	102					7.12.10. Applying Network Settings	102					7.13. ETHERNET TOOL KIT	102					7.13.1. Device Filter Based on MAC Address	102					7.13.2. Blocking the LW2 Control Port	103					7.13.3. Blocking the HTTP Port	103					7.13.4. Blocking Reception of HTTP Posts	103					7.13.5. Powering on a Computer over Ethernet (Wake-on-LAN)	103					7.13.6. Setting the Host Name	103																																																																																																																																																																																												
7.4.3. Querying the Serial Number	82	7.8.1. Volume Setting (dB)	92	7.12.1. Querying the DHCP State	101																																																																																																																																																																																																																																																																																																				
		7.8.2. Volume Setting (dB) in Steps.....	92					7.12.2. Changing the DHCP State	101					7.12.3. Querying the IP Address	101					7.12.4. Changing the IP Address (Static)	101					7.12.5. Querying the Subnet Mask	101					7.12.6. Changing the Subnet Mask (Static)	101					7.12.7. Querying the Gateway Address	101					7.12.8. Changing the Gateway Address (Static)	102					7.12.9. Querying the MAC Address	102					7.12.10. Applying Network Settings	102					7.13. ETHERNET TOOL KIT	102					7.13.1. Device Filter Based on MAC Address	102					7.13.2. Blocking the LW2 Control Port	103					7.13.3. Blocking the HTTP Port	103					7.13.4. Blocking Reception of HTTP Posts	103					7.13.5. Powering on a Computer over Ethernet (Wake-on-LAN)	103					7.13.6. Setting the Host Name	103																																																																																																																																																																																																						
				7.12.2. Changing the DHCP State	101																																																																																																																																																																																																																																																																																																				
				7.12.3. Querying the IP Address	101																																																																																																																																																																																																																																																																																																				
				7.12.4. Changing the IP Address (Static)	101																																																																																																																																																																																																																																																																																																				
				7.12.5. Querying the Subnet Mask	101																																																																																																																																																																																																																																																																																																				
				7.12.6. Changing the Subnet Mask (Static)	101																																																																																																																																																																																																																																																																																																				
				7.12.7. Querying the Gateway Address	101																																																																																																																																																																																																																																																																																																				
				7.12.8. Changing the Gateway Address (Static)	102																																																																																																																																																																																																																																																																																																				
				7.12.9. Querying the MAC Address	102																																																																																																																																																																																																																																																																																																				
				7.12.10. Applying Network Settings	102																																																																																																																																																																																																																																																																																																				
				7.13. ETHERNET TOOL KIT	102																																																																																																																																																																																																																																																																																																				
				7.13.1. Device Filter Based on MAC Address	102																																																																																																																																																																																																																																																																																																				
				7.13.2. Blocking the LW2 Control Port	103																																																																																																																																																																																																																																																																																																				
				7.13.3. Blocking the HTTP Port	103																																																																																																																																																																																																																																																																																																				
				7.13.4. Blocking Reception of HTTP Posts	103																																																																																																																																																																																																																																																																																																				
				7.13.5. Powering on a Computer over Ethernet (Wake-on-LAN)	103																																																																																																																																																																																																																																																																																																				
				7.13.6. Setting the Host Name	103																																																																																																																																																																																																																																																																																																				

Table of Contents

7.14. ETHERNET MESSAGE SENDING	104		
7.14.1. Sending a TCP Message (ASCII-format).....	104	7.19.2. Setting the Delimiter Hex	112
7.14.2. Sending a TCP Text (ASCII-format).....	104	7.19.3. Setting the Timeout.....	112
7.14.3. Sending a TCP Binary Message (HEX-format)	104	7.19.4. Querying the Last Recognized Message (String)	113
7.14.4. Sending a UDP Message (ASCII-format)	104	7.19.5. Querying the Last Recognized Message(Hex)	113
7.14.5. Sending a UDP Text (ASCII-format).....	105	7.19.6. Clearing the Last Recognized Stored Message	113
7.14.6. Sending a UDP Binary Message (HEX-format)	105	7.19.7. Querying the Last Recognized Active Message (String)	113
7.15. HTTP MESSAGING.....	105	7.19.8. Querying the Last Recognized Active Message (Hex).....	113
7.15.1. Setting the Target IP Address.....	105	7.19.9. Setting the Active Timeout	114
7.15.2. Setting the TCP Port.....	105	7.19.10. Running an Immediate Event Action.....	114
7.15.3. Setting the Target Path	105		
7.15.4. Setting the Message Header	106	7.20. SENDING CEC COMMANDS.....	115
7.15.5. Sending a Post Message	106	7.20.1. Press&Release Commands	115
7.15.6. Sending a Put Message	106	7.20.2. Further Commands	115
7.16. TCP MESSAGE RECOGNIZER	106	7.20.3. Sending an OSD String	115
7.16.1. Setting the IP Address of the TCP Server	106	7.20.4. Sending CEC Commands in Hex Format	116
7.16.2. Setting the TCP/IP Port Number of the TCP Server.....	107	7.20.5. Querying the Last Received CEC Message.....	116
7.16.3. Connecting to a TCP Server.....	107		
7.16.4. Disconnecting from a TCP Server	107	7.21. INFRARED PORT CONFIGURATION	116
7.16.5. Setting the Delimiter Hex	107	7.21.1. Enabling/Disabling Command Injection Mode.....	116
7.16.6. Setting the Timeout.....	107	7.21.2. Changing the Command Injection Port Number	116
7.16.7. Querying the Last Recognized Message (String)	107	7.21.3. Enabling/Disabling Output Signal Modulation	116
7.16.8. Querying the Last Recognized Message (Hex)	108		
7.16.9. Clearing the Last Recognized Stored Message	108	7.22. INFRARED MESSAGE SENDING	117
7.16.10. Querying the Last Recognized Active Message (String)	108	7.22.1. Sending Pronto Hex Codes in Little-endian Format via IR Port	117
7.16.11. Querying the Last Recognized Active Message (Hex).....	108	7.22.2. Sending Pronto Hex Codes in Big-endian Format via IR Port ..	117
7.16.12. Setting the Active Timeout	108		
7.16.13. Running an Immediate Event Action.....	108	7.23. RELAY PORT SETTINGS.....	118
7.17. RS-232 PORT CONFIGURATION	109	7.23.1. Querying the Connection State.....	118
7.17.1. Setting the Protocol.....	109	7.23.2. Changing the Connection State.....	118
7.17.2. Setting the BAUD Rate	109	7.23.3. Toggling the Connection State	118
7.17.3. Setting the Databits.....	109		
7.17.4. Setting the Stopbits.....	109	7.24. EDID MANAGEMENT.....	118
7.17.5. Setting the Parity	110	7.24.1. Querying the Emulated EDIDs.....	118
7.17.6. RS-232 Operation Mode.....	110	7.24.2. Querying the Validity of a Dynamic EDID	118
7.17.7. Querying the Command Injection Mode	110	7.24.3. Querying the Preferred Resolution of an User EDID	119
7.17.8. Changing the Command Injection Mode	110	7.24.4. Emulating an EDID to an Input Port.....	119
7.18. RS-232 MESSAGE SENDING	111	7.24.5. Emulating an EDID to All Input Ports	119
7.18.1. Sending a Message (ASCII-format) via RS-232	111	7.24.6. Copying an EDID to User Memory	119
7.18.2. Sending a Text (ASCII-format) via RS-232	111	7.24.7. Deleting an EDID from User Memory	119
7.18.3. Sending a Binary Message (HEX-format) via RS-232	111	7.24.8. Resetting the Emulated EDIDs.....	119
7.18.4. Using Hexadecimal Codes.....	111		
7.19. RS-232 MESSAGE RECOGNIZER	112	7.25. LW3 COMMANDS - QUICK SUMMARY	120
7.19.1. Enabling/Disabling the Recognizer	112		
		8. FIRMWARE UPDATE.....	126
		8.1. INTRODUCTION	127
		8.2. PREPARATION	127
		8.2.1. About the Firmware Package (LFP2 File)	127
		8.2.2. LDU2 Installation	127
		8.3. RUNNING THE SOFTWARE	128
		8.3.1. LDU2 Interfaces	128
		8.3.2. The Updating Steps	129
		8.4. UPDATING VIA GUI	130
		8.5. COMMAND LINE INTERFACE (CLI)	131
		8.5.1. How to Run	131
		8.5.2. How to Use	132
		8.6. CLI COMMANDS	132
		8.6.1. Help	132
		8.6.2. LDU2 Version	132
		8.6.3. Check For New LDU2 Version	132
		8.6.4. Device Info	133
		8.6.5. Update	133
		8.6.6. Restore	134
		8.6.7. Package Options	134
		8.6.8. Complex Examples	135
		8.6.9. Exit Codes	136
		8.7. IF THE UPDATE IS NOT SUCCESSFUL	136
		9. TROUBLESHOOTING	137
		9.1. USE CASE STUDIES	138
		9.2. HOW TO SPEED UP THE TROUBLESHOOTING PROCESS	139
		10. TECHNOLOGIES	140
		10.1. EDID MANAGEMENT	141
		10.1.1. Understanding the EDID	141
		10.1.2. Advanced EDID Management	141
		10.1.3. HDCP Management	142
		10.1.4. Protected and Unprotected Content	142
		10.1.5. Disable Unnecessary Encryption	142
		10.2. PIXEL ACCURATE RECLOCKING	143
		11. APPENDIX	144
		11.1. SPECIFICATIONS	145
		11.2. INPUT/OUTPUT PORT NUMBERING	146
		11.3. CONTENT OF BACKUP FILE	147
		11.4. FACTORY DEFAULT SETTINGS	147
		11.5. MECHANICAL DRAWINGS	148
		11.6. CABLE WIRING GUIDE	149
		11.6.1. Serial Ports	149
		11.6.2. Audio Ports	149
		11.7. FACTORY EDID LIST	150
		11.8. MAXIMUM EXTENSION DISTANCES	151
		11.9. APPLIED PORTS (NETWORK SETTINGS)	151
		11.10. RELEASE NOTES OF THE FIRMWARE PACKAGES	152
		11.11. HASHTAG KEYWORD LIST	153
		11.12. FURTHER INFORMATION	155

1

Introduction


Thank you for choosing Lightware's HDMI-TPS-RX110AY series receiver. In the first chapter we would like to introduce the device, highlighting the most important features in the sections listed below:

- ▶ [DESCRIPTION](#)
- ▶ [COMPATIBLE DEVICES](#)
- ▶ [BOX CONTENTS](#)
- ▶ [FEATURES](#)
- ▶ [MODEL COMPARISON](#)
- ▶ [TYPICAL APPLICATION](#)

1.1. Description

A small size HDBaseT™ TPS receiver unit is being developed in the Lightware works with one PoE capable TPS input and a single HDMI output. The unit is full 4K/UHD and 3D capable and HDCP compliant. The HDMI audio is de-embedded to the balanced audio output via a Phoenix (Euroblock) connector, the audio port has volume and balance control. The built-in Event Manager feature and the dual Relay module of the device are both configurable via the Lightware Device Controller software. Further control options are served by the USB, RS-232, IR (in and out), and Ethernet ports.

Model Denomination

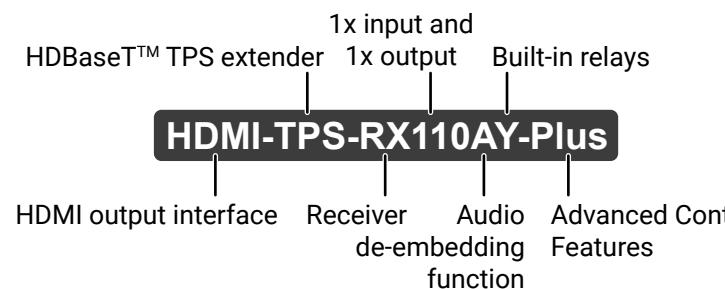

1.2. Compatible Devices

The receiver is compatible with other Lightware TPS transmitters, matrix TPS and TPS2 boards, 25G TPS2 boards, as well as third-party HDBaseT-extenders, displays, but not compatible with the phased out TPS-90 extenders.

ATTENTION! The receiver is PoE-compatible (Power over Ethernet, can be powered remotely via using CATx cable), but the device can only receive power from, and cannot send power to other PoE-compatible devices. Only the TPS connector is PoE-compatible, the Ethernet port cannot receive power.



The receiver is compatible with any third-party HDBaseT™ device.

HDBaseT™ and the HDBaseT Alliance logo are trademarks of the HDBaseT Alliance.

The List of Compatible Lightware Devices

- MX Modular matrix frames - MX-TPS/TPS2-OB
- 25G Modular matrix frames - 25G-TPS2-OB
- Standalone TPS matrix frames – MMX6x2-HT series
- TPS transmitters:
 - HDMI-TPS-TX95/96/97
 - WP/FP-HDMI-TPS-TX97
 - DVI-HDCP-TPS-TX95/96/97
 - UMX-TPS-TX100 series
 - WP/FP-UMX-TPS-TX100 series
 - SW4-TPS-TX240
 - HDMI-TPS-TX200 series
 - DVI-HDCP-TPS-TX200 series
 - DP-TPS-TX200 series
- Single port standalone TPS power injector – TPS-PI-1P1

1.3. Box Contents

Supplied device	Supplied accessories					
	12V DC power adaptor	Phoenix® Combicon 3-pole connector	Phoenix® Combicon 4-pole connector	Phoenix® Combicon 5-pole connector	Safety and warranty info, QSG	
HDMI-TPS-RX110AY	✓	✓	✓	✓	✓	✓
HDMI-TPS-RX110Y-Plus	✓	✓	✓	✓	✓	✓

1.4. Features



3D and 4K Support

High bandwidth allows extension of resolutions of up to 4K, and even 3D sources and displays are supported.



Signal Transmission up to 170 m

Video and audio signal transmission (HDMI, Ethernet, RS-232, and Infra-Red) over a single CAT5e...CAT7e cable.



Pixel Accurate Reclocking

Each output has a clean, jitter free signal, eliminating signal instability and distortion caused by long cables or connector reflections.



Frame Detector and Signal Analysis

The exact video and audio signal format can be determined such as timing, frequencies, scan mode, HDCP encryption, color range, color space and audio sample rate.



HDCP-compliant

The receiver fulfills the HDCP standard. HDCP capability on the digital video inputs can be disabled when non-protected content is extended.



Built-in Event Manager

The Event Manager tool takes care of all the necessary control in a smaller configuration by performing predefined actions in response to device status changes. Hence, in a less complex environment there is no need to invest in additional control solutions, which makes the receiver the best choice for numerous applications.



Remote Power

The receiver is PoE-compatible and can be powered locally by the supplied power adaptor, or remotely via the TPS connection (through the CATx cable) with a compatible power source equipment, e.g. MMX6x2-HT series matrix switchers and TPS2 matrix boards.



Bi-directional RS-232 Pass-through

AV systems can also contain serial port controllers and controlled devices. Serial port pass-through supports any unit that works with standard RS-232.



Relay

2x controllable relay modules up to 30V, 1A support.



Ethernet Control

Multiple simultaneous TCP/IP connections are available with a simple ASCII-based protocol for controlling, configuring the receiver or performing a firmware update.



Dark Mode

Rental application requires this function that keeps the LEDs unlit to hide the device during an event.

Advanced Control Features (Only for HDMI-TPS-RX110AY-Plus model)



Consumer Electronic Control

Supports transmitting standard CEC commands in order to remote control the source or sink device.



Infra Message Sending

Infrared (IR) is a wireless technology used for device communication over short ranges. Third party control systems may send IR control commands to endpoints turning them on and off or switching their inputs.



RS-232 Recognizer

Support recognizing incoming RS-232 messages to integrate with 3rd party devices like VC codec.

1.5. Model Comparison


The available models have different features depending on their design. The following table contains the most important differences between the two models:

	Advanced Control Features		
	Infra message sending	CEC message sending	RS-232 recognizer
HDMI-TPS-RX110AY	-	-	-
HDMI-TPS-RX110AY-Plus	✓	✓	✓


The AV input/output ports, interface ports and the software features that are not mentioned here are the same in case of both models.

1.6. Typical Application

Standalone Application Diagram

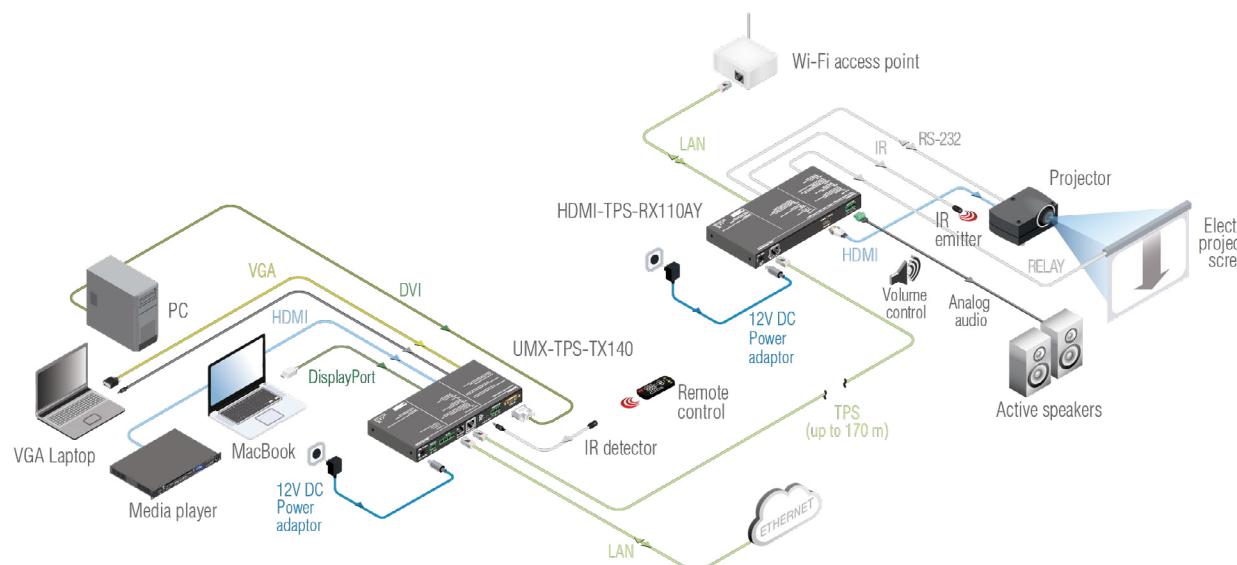

Integrated System Diagram

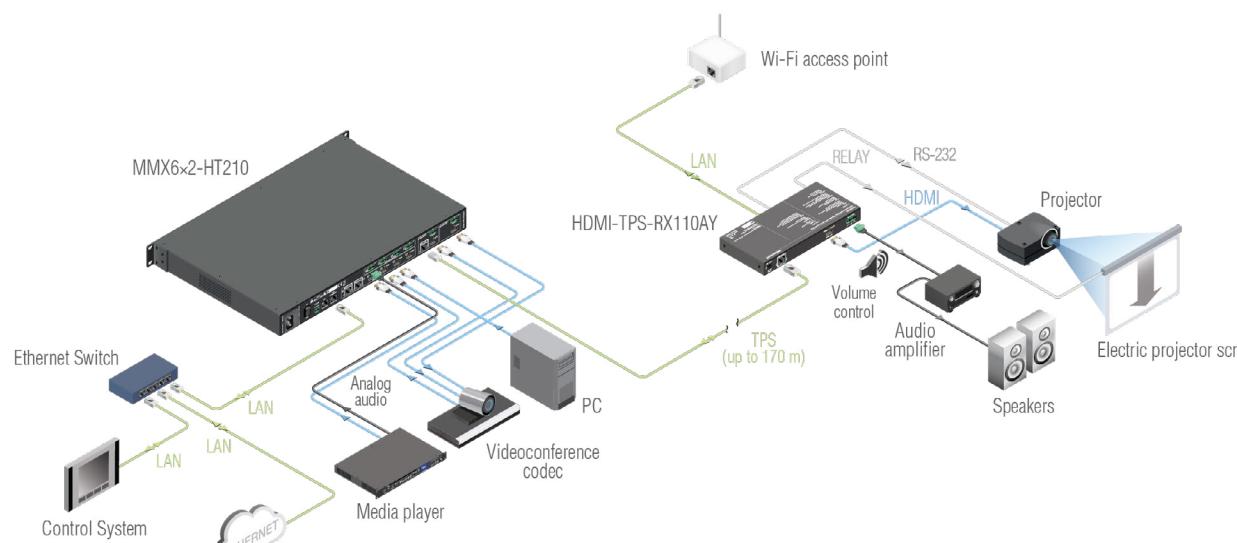

2

Installation

The chapter is about the installation of the device and connecting to other appliances, also presenting the mounting options and further assembly steps:

- ▶ [MOUNTING OPTIONS](#)
- ▶ [ELECTRICAL CONNECTIONS](#)
- ▶ [CONNECTING STEPS](#)

2.1. Mounting Options

To mount the receiver, Lightware supplies optional accessories for different usage. There are two kinds of mounting kits with a similar fixing method. The receiver has two mounting holes with inner thread on the bottom side; see the bottom view in the [Mechanical Drawings](#) section. Fasten the device by the screws enclosed to the accessory:



Under-desk double mounting kit



1U high rack shelf


The Under-desk double mounting kit makes it easy to mount a single device on any flat surface, e.g. furniture. The 1U high rack shelf provides mounting holes for fastening two half-rack or four quarter-rack sized units. Pocket-sized devices can also be fastened to the shelf. To order mounting accessories, please contact sales@lightware.com.

WARNING! Always use the supplied screws. Using different (e.g. longer) ones may cause damage to the device.

INFO: The receiver is half-rack sized.

2.1.1. 1U High Rack Shelf


Allows rack mounting for half-rack, quarter-rack and pocket sized units.

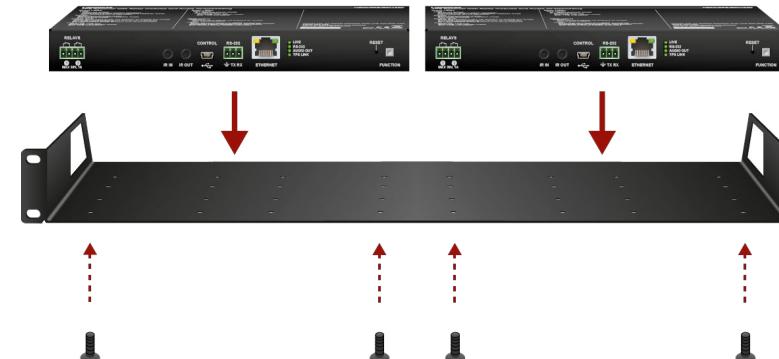

The 1U high rack shelf provides mounting holes for fastening two half-rack or four quarter-rack sized units. Pocket sized devices can also be fastened to the self.

2.1.2. Under-desk Double Mounting Kit


The UD-kit double makes it easy to mount a single receiver on any flat surface (e.g. furniture).

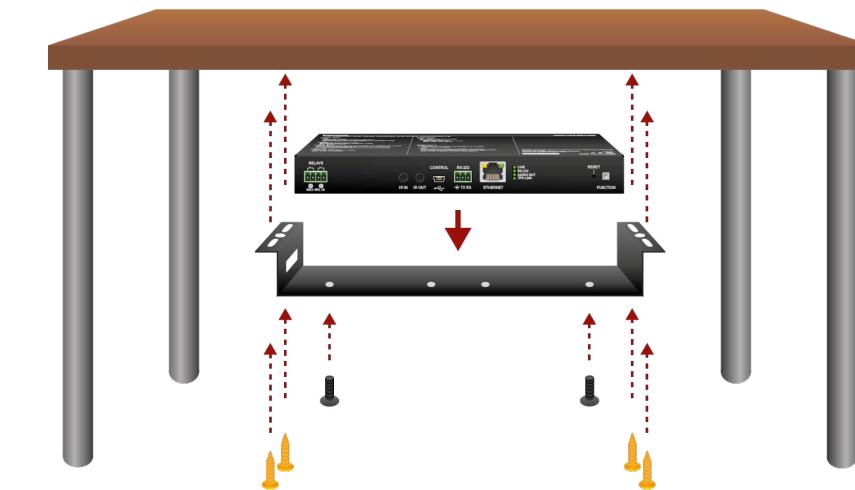

INFO: The chipboard screws are not supplied with the mounting kit.

2.2. Electrical Connections

2.2.1. DC 12V Connection

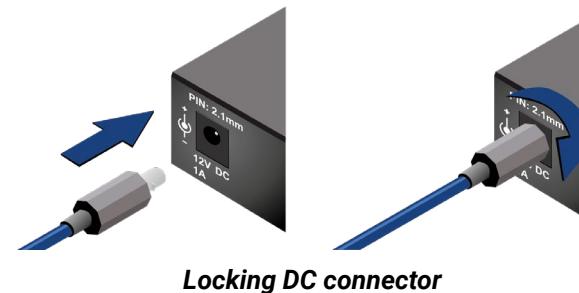

Do not forget to turn the plug counterclockwise before disconnecting the power adaptor.

WARNING! Always use the supplied 12V power adaptor. Warranty void if damage occurs due to use of a different power source.

2.2.2. HDMI Connector


The extender provides a standard 19 pole HDMI connector for output. Always use high quality HDMI cables for connecting sources and displays.



2.2.3. Analog Audio Output

A 5-pole Phoenix connector is used for balanced analog audio output. Unbalanced audio signals can be connected as well. For unbalanced output, connect + and ground to the source and connect – to the ground.

Pin nr.	Signal
1	Left+
2	Left-
3	Ground
4	Right-
5	Right+

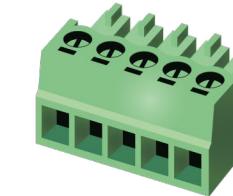

Analog audio connector and plug pin assignments

Compatible Plug Type

Phoenix® Combicon series (3.5mm pitch, 5-pole), type: MC 1.5/5-ST-3.5.


You can find more information about analog audio function in the [Audio Interface](#) section. Audio cable wiring guide is in the [Cable Wiring Guide](#) section.

2.2.4. Ethernet Connector (TPS and LAN Ports)

The extender provides standard RJ45 connectors for TPS IN and LAN ports. Always use high quality Ethernet cables for connecting transmitters and receivers. Maximum CATx cable distances can be found in the [Mechanical Drawings](#) section.

Wiring of TPS and LAN Cables

Lightware recommends the termination of LAN cables on the basis of TIA/EIA T 568 A or TIA/EIA T 568 B standards.

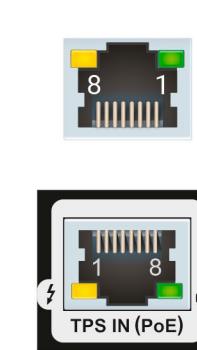


Pin	TIA/EIA T568A	TIA/EIA T568B
1	white/green	white/orange
2	green	orange
3	white/orange	white/green
4	blue	blue
5	white/blue	white/blue
6	orange	green
7	white/brown	white/brown
8	brown	brown

Wiring of LAN cables by types

WARNING! Never connect a non-assembled CATx cable to the port while the unit is powered, it may damage the device.

You can find more information about the TPS interface in the [TPS Interface](#) section.

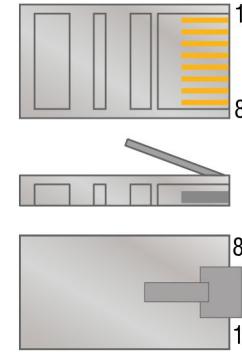

2.2.5. USB Connector

The extender provides a standard USB 2.0 mini B-type connector for software control purpose.



2.2.6. IR Connector

An IR detector and IR emitter can be connected to the receiver with TRS (Tip, Ring, and Sleeve) connectors. They are also known as (3,5 mm or approx. 1/8") audio jack, phone jack, phone plug, and mini-jack plug. The pin assignments are the following for the detector and the emitter:

EMITTER: 2-pole TS



Pin nr.	Signal
1 Tip	+5V
2 Ring	Signal (active low)
3 Sleeve	



DETECTOR: 3-pole TRS



Pin nr.	Signal
1 Tip	Signal (active low)
2 Ring	Ground
3 Sleeve	+5V



INFO: Ring pole of the emitter is optional. If your IR emitter has three-pole TRS plug, then the Ring and the Sleeve are the same signal (Output -).

You can find more information about the Infrared interface in the [IR Interface](#) section.


2.2.7. RS-232 Connector

The receiver contains a 3-pole Phoenix connector, which is used for RS-232 serial connection.



RS-232 connector pin assignments

Pin nr.	Signal
1	Ground
2	TX data
3	RX data

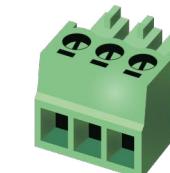

Compatible Plug Type

Phoenix® Combicon series (3.5mm pitch, 3-pole), type: MC 1.5/3-ST-3.5.

You can find more information about the RS-232 interface in the [Serial Interface](#) section.

2.2.8. Relay Connector

The receiver contains a 4-pole Phoenix connector, which is used for relay connection.



Pin nr.	Signal
1	Pin 1 for Relay 1
2	Pin 2 for Relay 1
3	Pin 1 for Relay 2
4	Pin 2 for Relay 2


Relay connector pin assignment

INFO: The maximum ratings for each relay are 30V and 1A, AC/DC.


Compatible Plug Type

Phoenix® Combicon series (3.5mm pitch, 4-pole), type: MC 1.5/4-ST-3.5.

You can find more information about the relay interface in the [Relay Interface](#) section.

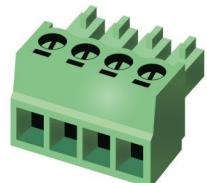


2.3. Connecting Steps

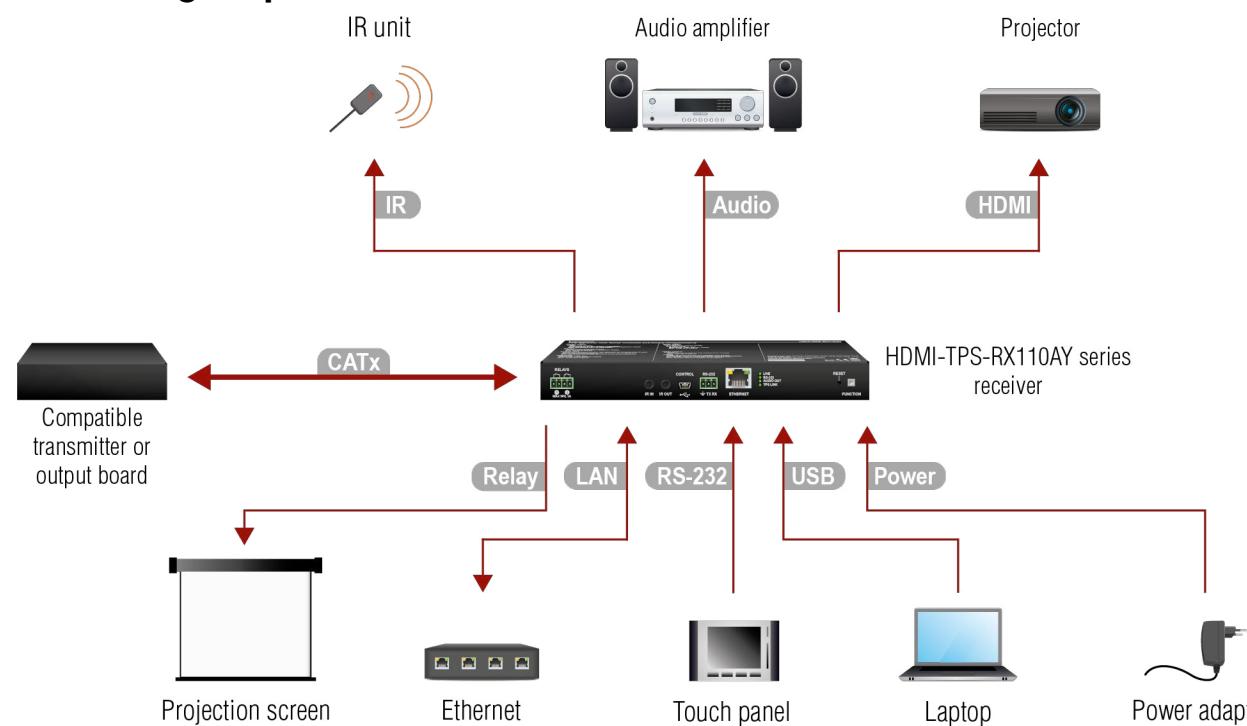

- CATx** Connect the compatible transmitter or the matrix output board and the receiver unit by a CATx cable via the TPS connectors.
- HDMI** Connect the sink device to the HDMI output port.
- Audio** Optionally connect an audio device (e.g. an audio amplifier) to the audio output port. See the wiring guide for the Phoenix 5-pole connector in the [Cable Wiring Guide](#) section.
- IR** Optionally for Infrared extension:
 - Connect an IR emitter to the IR OUT port of the receiver.
 - Connect an IR detector to the IR IN port of the receiver.
- USB** Optionally connect the receiver to a control device (e.g. laptop) with an USB mini cable.
- RS-232** Optionally for RS-232 extension: connect a controller/controlled device (e.g. touch panel) to the RS-232 port.
- LAN** Optionally connect the receiver to a LAN network in order to control the device.
- Relay** Optionally for relays: connect a controlled device (e.g. a projection screen) to the relay port.
- Power** See powering options in the next section.

Powering Options

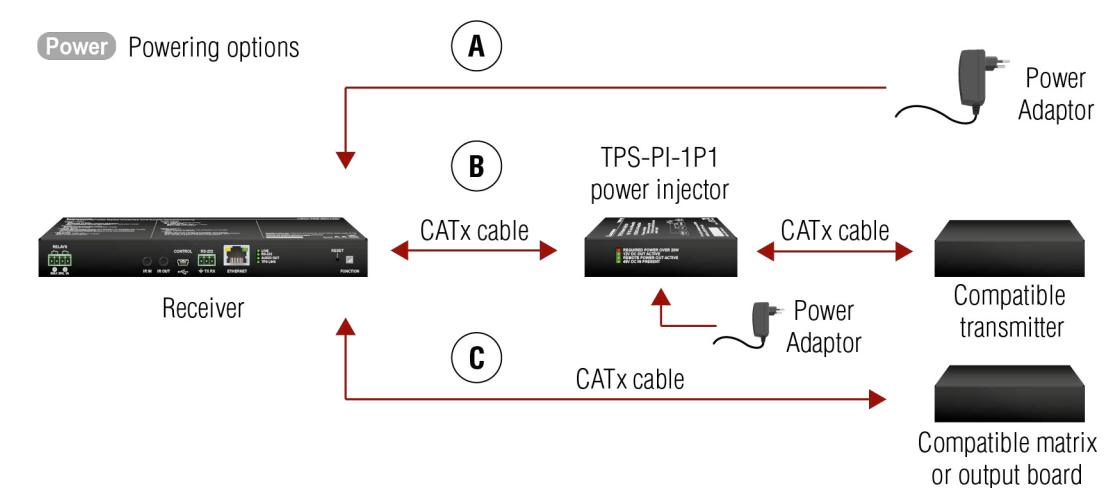

ATTENTION! In case of connecting the receiver to an output board of the matrix, always connect an external PSU to the board. For the detailed information, please read the user's manual of the matrix.

ATTENTION! The Ethernet port does not support PoE. Only the TPS port supports PoE function.

INFO: If both remote and local power sources are connected, the remote power will be used.


3

Product Overview

The following sections are about the physical structure of the device, input/ output ports and connectors:

- ▶ [FRONT VIEW](#)
- ▶ [REAR VIEW](#)
- ▶ [FRONT PANEL - SPECIAL FUNCTIONS](#)

3.1. Front View

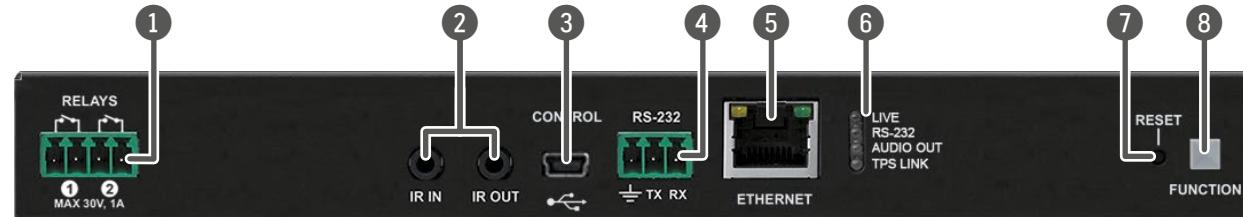

1 Relay 4-pole Phoenix connector for relay ports. Pin assignment can be found in the [Relay Connector](#) section.

2 IR IN and OUT 3-pole TRS connector, also known as 3.5 mm (1/8") jack plug for optional IR receiver (IR IN) and transmitter (IR OUT). Pin assignments can be found in the [IR Connector](#) section.

3 USB USB interface for LDC connection to control the receiver.

4 RS-232 3-pole Phoenix connector for controlling the device with LDC or third-party control systems. Pin assignment can be found in the [RS-232 Connector](#) section.

5 Ethernet Locking RJ45 connector for controlling the device with LDC or third-party control systems and LDU for firmware update.

6 Status LEDs The LEDs give immediate feedback about the current state of the device. See the details below.

7 Reset button Pressing the reset button reboots the extender.

8 Function button Special functions are available via this button (switch to bootload mode, enable DHCP, restore factory default settings). For the details about special functions, see the [Front Panel - Special Functions](#) section.

INFO: The illumination of the status LEDs can be switched off (dark mode) in the LDC software (see the details in the [Front Panel](#) section) and using LW3 protocol command (see the details in the [Dark Mode](#) section).

Status LEDs

FRONT			
LIVE LED			
○	off	The device is not powered.	
○ green	blinking slow	Device is powered and operational.	
○ green	blinking fast	Device is in bootload mode.	
● green	on	The device is powered but not operational.	
FRONT			
RS-232			
○	off	RS-232 ports (local and link) in Passthrough mode.	
○ green	blinking	Command Injection mode is active.	
● green	on	RS-232 ports (local and link) are in Control mode.	
FRONT			
AUDIO OUT			
○	off	Embedded audio is not present or analog output is muted.	
○ green	blinking	Embedded audio format is not supported for audio de-embedding.	
● green	on	Embedded audio is present and de-embedded.	
FRONT			
TPS LINK			
○	off	No TPS link between transmitter and receiver.	
○ green	blinking	Device is in low power mode or in Ethernet fallback mode.	
● green	on	TPS link is established, HDBaseT or Long Reach mode is active.	

3.2. Rear View



- 1 DC 12V IN** Local power in; connect the output of the supplied 12V DC power adaptor. For more details, see the next section.
- 2 TPS IN (PoE)** Locking RJ45 connector. Connect a twisted pair cable between the transmitter and the receiver. Remote powering is also available through this connector. Maximum CATx cable distances can be found in the [Maximum Extension Distances](#) section.
- 3 SIGNAL status LED** The LED gives immediate feedback about current state of the HDMI output signal. See the legend below.
- 4 HDMI OUT** Connect an HDMI cable between the receiver and the local sink device. The applied cable shall not be more than 30 m (when the signal is 1080p) or 20 m (when the signal is 4K).
- 5 HDCP status LED** The LED gives immediate feedback about the current state of the HDCP. See the legend next to the table.
- 6 AUDIO OUT** 5-pole Phoenix connector for asymmetric analog audio output. Pin assignment can be found in the next section.

Front/Rear LEDs

TPS Input LED (Remote power, left)				REAR
	off	Remote power (PoE) is inactive, device is powered locally.		
	amber	on	Remote power is active.	
TPS Input LED (TPS connection, right)				REAR
	off	No TPS link between the transmitter and receiver.		
	green	blinking	Device is in low power mode or Ethernet fallback mode.	
	green	on	TPS signal is present.	
SIGNAL LED for HDMI Output				REAR
	off	Output signal is not present or muted.		
	green	on	Signal is present.	
HDCP LED for HDMI Output				REAR
	off	Output signal is not HDCP-encrypted.		
	green	blinking	Non-HDCP capable device is connected, encrypted signal is replaced with red screen.	
	green	on	Output signal is HDCP-encrypted.	

3.3. Front Panel - Special Functions

3.3.1. Programmable Function Button



An action or an operation can be assigned to the **Function** button. “Function button pressed” is a condition that can be selected in the Event Manager. See more details in the [Event Manager](#) section. [#function](#)

HighlightMe (Default Function)

DIFFERENCE: This feature is available only from FW package v1.5.0b3.

This feature is to help find the desired device in the Device discovery window of the Lightware Device Controller software. Press the **Show Me** button for **5 seconds** until the front panel LEDs start to blink slowly, then release the button. In parallel, the device is **highlighted in green for 4 seconds** in the Device discovery window of the LDC, see the [Highlighting the Device](#) section. [#highlightme](#)

3.3.2. Enable Dynamic (DHCP) IP Address



The device gets a static IP address as a factory default setting. If this setting does not fit the circumstances during install or usage, DHCP can be enabled from the front panel:

Step 1. Make sure the device is powered on and operational.

Step 2. Press and keep pressing the **Function** button for 5 seconds.

Step 3. After 5 seconds the front panel LEDs start blinking; release the button and press it 3 times again quickly (within 3 seconds).

Step 4. The LEDs get dark, DHCP gets enabled.

[#dhcp](#)

3.3.3. Reset to Factory Default Settings



To restore factory default values, do the following steps:

Step 1. Make sure the device is powered on and operational.

Step 2. Press and keep pressing the **Function** button for 10 seconds. After 5 seconds the front panel LEDs start blinking, but keep on pressing the button.

Step 3. After 10 seconds the blinking gets faster; release the button and press it 3 times again quickly (within 3 seconds).

Step 4. The LEDs get dark, the device restores the factory default settings and reboots.

Factory default settings are listed in the [Factory Default Settings](#) section. [#factory](#)

3.3.4. Restarting the Device



In a few cases (after firmware update, etc) you may need to reset the device. Pushing the reset button is the same as disconnecting and reconnecting the power adaptor to the receiver. To reset the device, follow these steps:

Step 1. Push the button with a thin object for a second.

Step 2. Wait until the device reboots. You can use the receiver when the LIVE LED is blinking slowly again.

ATTENTION! Resetting the device does not reset the settings to factory defaults. To reset factory default settings, see the previous section.

[#reset #restart #reboot](#)

3.3.5. Entering Bootload Mode



It may happen that the firmware update process is not successful, as the device cannot be switched to bootload mode automatically. In this case, the receiver device can be forced to switch to bootload mode as follows:

Step 1. Make sure the device is powered off.

Step 2. Press and keep pressing the **Function** button.

Step 3. Power on the receiver. If the device is switched to bootload mode, the LIVE LED is blinking quickly (less than 500 ms duty cycle). The other LEDs are off.

[#bootload](#)

4


Device Concept

The following chapter describes the features of the device with a few real-life examples. The topics that are described:

- ▶ [TPS RECEIVER CONCEPT](#)
- ▶ [PORT DIAGRAM](#)
- ▶ [TPS INTERFACE](#)
- ▶ [AUDIO INTERFACE](#)
- ▶ [VIDEO INTERFACE](#)
- ▶ [CONTROL FEATURES](#)
- ▶ [ETHERNET INTERFACE](#)
- ▶ [BATCH COMMANDS](#)
- ▶ [BASIC IT SECURITY](#)
- ▶ [BULK DEVICE MANAGEMENT](#)
- ▶ [THE EVENT MANAGER FEATURE](#)
- ▶ [FURTHER BUILT-IN FEATURES](#)
- ▶ [SOFTWARE CONTROL MODES](#)

4.1. TPS Receiver Concept


HDMI-TPS-RX110AY is a multifunctional receiver with HDBaseT™ (TPS) technology. The device can be controlled over many kinds of interfaces, e.g. Ethernet, USB, RS-232, and Infrared. The receiver is built with audio de-embedder and relay function.

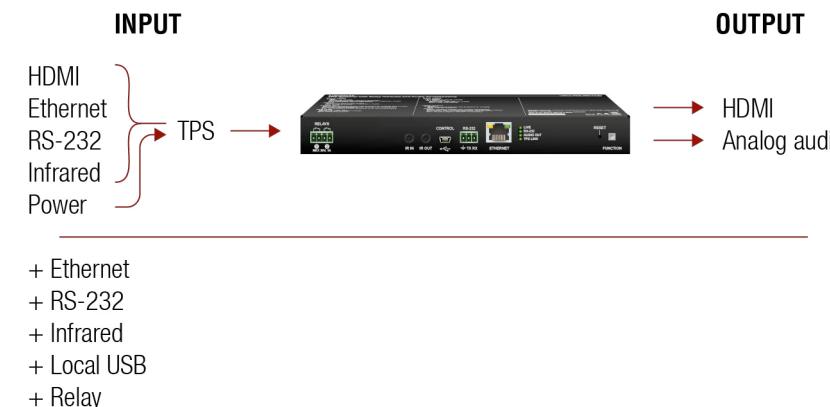

Summary of the interfaces

4.2. Port Diagram

The following figure describes the port diagram of the device:

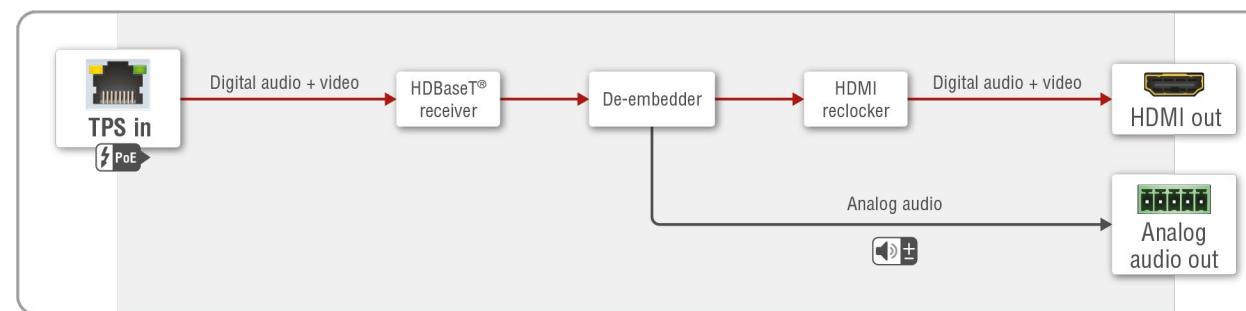

Port diagram of HDMI-TPS-RX110AY receiver

The device receives HDMI/DVI, Ethernet, RS-232 and Infrared signals on the TPS input line. A/V signals are processed in the HDBaseT™ receiver unit. The audio de-embedder separates the digital audio and video signals. The digital video signal through the HDMI re-clocker can be forwarded to the local sink device by the HDMI output port while digital audio signal is converted to analog by the digital-analog (D/A) converter and forwarded to the local audio sink device by the analog audio output port.

4.3. TPS Interface

The device is built with TPS (Twisted Pair Single) interface, which is using HDBaseT™ technology. It means the unit receives video, audio, Ethernet, RS-232 and Infrared signals via a single CATx cable.

TPS Interface Working Modes

The TPS working mode between the transmitter and the receiver is determined by the mode set in them. Both devices' TPS mode settings together determine the finally established TPS transmission mode.

The following TPS modes are defined in the receiver:

- **Auto:** The TPS mode is determined automatically.
- **HDBaseT:** Ideal for high resolution signals of up to 4K.
- **Long reach:** Ideal for big distances with up to 1080p@60Hz with extended cable lengths.
- **LPPF1***: Only RS-232 communication is transmitted (@ 9600 baud).
- **LPPF2***: Only RS-232 (@ 9600 baud) and Ethernet communication are transmitted.

* LPPF: Low Power Partial Functionality.

	Selected mode on RX side				
	LPPF1	LPPF2	HDBaseT	Long reach	Auto
Selected mode on TX side	LPPF1	LPPF1	LPPF1	LPPF1	LPPF1
LPPF1	LPPF1	LPPF1	LPPF1	LPPF1	LPPF1
LPPF2	LPPF1	LPPF2	LPPF2	LPPF2	LPPF2
HDBaseT	LPPF1	LPPF2	HDBaseT	Long reach	HDBaseT
Long reach	LPPF1	LPPF2	Long reach	Long reach	Long reach
Auto	LPPF1	LPPF2	HDBaseT	Long reach	HDBaseT **

** If there is a valid HDMI/DVI signal on the TX side, the TPS mode will be HDBaseT on both sides. If the transmitter does not transmit HDMI/DVI signal, the TPS mode will automatically be changed to LPPF2 or LPPF1. Long reach mode is not available when both sides are set to Auto mode.

When using automatic operation mode selection, the device determines the mode of operation. If both halves are set to Auto mode, the source side is the initiator. It will negotiate each state transition with its sink side partner.

When one of the devices is configured to manual operation mode selection, the other device may be placed in automatic mode. In this case, the mode transition negotiation is initiated by the host-managed device, and the auto-mode device follows through. The allowed cable lengths and resolutions are listed in the [Maximum Extension Distances](#) section.

4.4. Audio Interface

4.4.1. Audio Input

The device can receive embedded audio signal on the TPS input line.

4.4.2. Audio Output Modes

The device can transmit two types of audio:


- Embedded (HDMI) and
- Analog balanced stereo audio.

Audio de-embedding

The receiver has a built-in audio de-embedder, which means the device is able to receive HDMI signal with embedded audio via the TPS line and can separate it to video and audio signals on the output side.

ATTENTION! The de-embedding function supports 2 channel PCM audio signals only. Other audio formats are not supported and de-embedding will not be successful.

4.4.3. Audio Options - Example

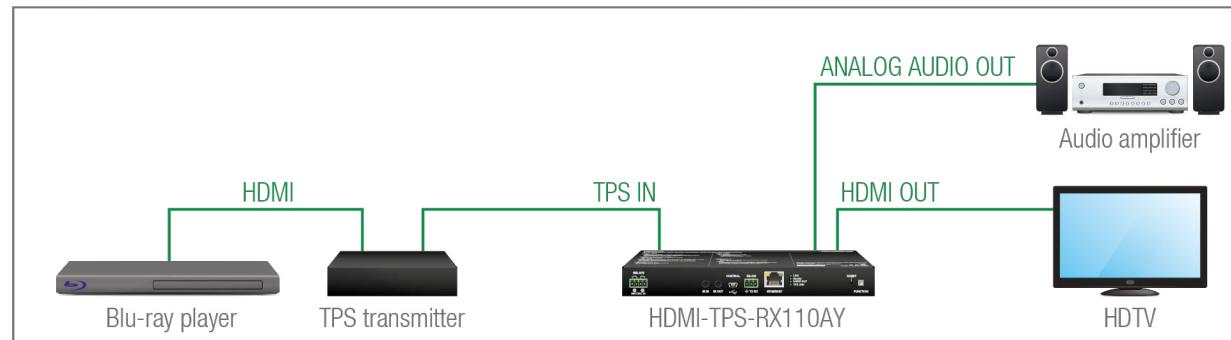

The Concept

The source is a Blu-ray player that sends audio and video signals on HDMI to the transmitter. The receiver accepts the signal on the TPS line, the audio signal is still embedded. HDMI-TPS-RX110AY de-embeds the AV signal to separate the digital audio and analog audio signals and transmit them to the HDTV and the audio amplifier.


The following ways are available for the audio devices:

- The **Receiver** transmits the digital audio signal together with the video signal to the **HDTV**.
- The **Receiver** de-embeds the digital audio signal and converts it to an analog one. It is transmitted to the **Audio amplifier**. So the **HDTV** provides the picture and the **Audio amplifier** provides the sound. In this case the digital audio on the HDMI line needs to be muted.

4.5. Video Interface

The device can receive digital video signal via the TPS line from any HDBaseT™ compliant transmitter, matrix or matrix board. On the output side the receiver transmits HDMI signal toward the sink.

Video Interface - Example

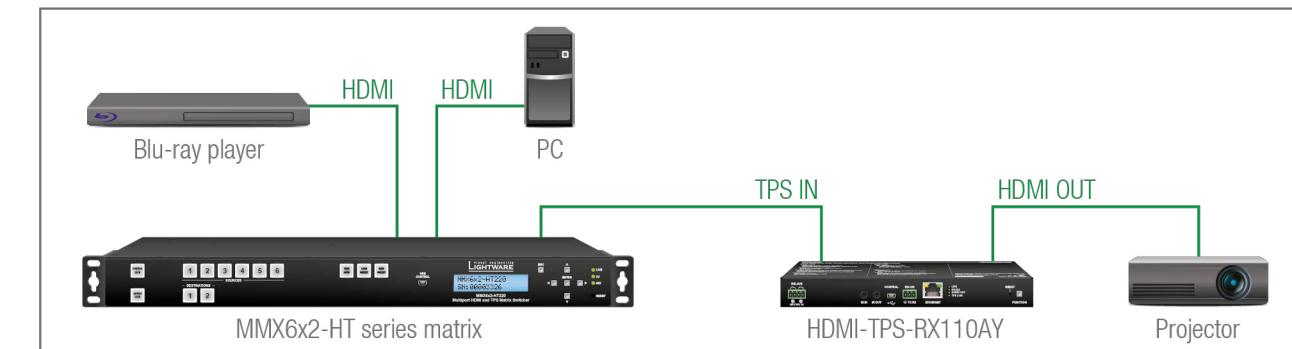

The Concept

The Receiver is connected to the Matrix, which has two sources: a Blu-ray player and a PC. The input source can be selected in the matrix, which transmits the video signal toward the receiver via the TPS interface.

4.6. Control Features

The HDMI-TPS-RX110AY has several control functions. This chapter is about the possibilities through two simple layout examples.


System Control via Local Ethernet (Example)



The following ways are available for device control:

- The **System controller** can communicate with the **Receiver** via the **Transmitter** by using LW2/LW3 protocol commands.
- The **System controller** can communicate directly with the **Projector** via their IP:port address.
- The **Receiver** can send commands (e.g. as an action by the Event Manager) to the IP:port address of the **Projector** by using LW3 protocol methods.

System Control via Local RS-232 (Example)

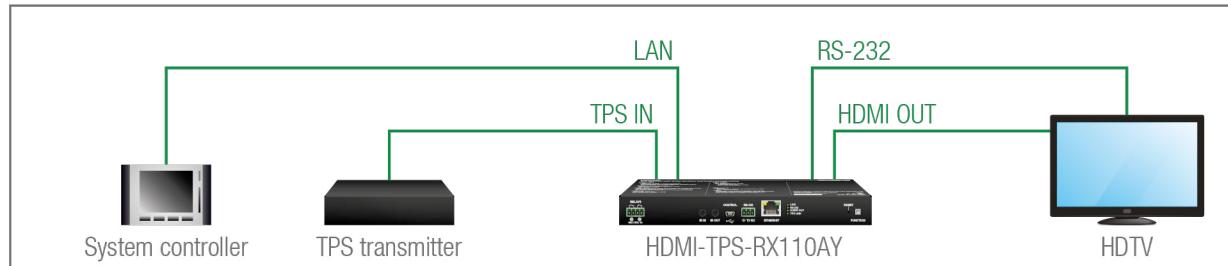

The following ways are available for controlling the devices:

- The **System controller** can communicate with LW2/LW3 protocol commands via the local RS-232 port of the **Receiver**.
- The **System controller** can send TCP or UDP messages to the IP:port address of the **Receiver** by using LW3 protocol methods.
- The **Receiver** can send LW3 protocol commands to the **HDTV** via the local RS-232 port.


4.6.1. Serial Interface

Technical Background

Serial data communication can be established via the local RS-232 port (Phoenix connector) or via the TPS lines. The RS-232 ports – which are connected to the CPU – can be configured separately (e.g. if the Baud rates are different, the CPU does the conversion automatically between the ports). The RS-232 port can be switched to **Pass-through mode**, **Control mode**, or **Command Injection mode**; see the figure below.

ATTENTION! Only one mode can be used at the same time: Control mode, Pass-through mode, or Command Injection mode. If you choose one of them, the TPS serial link and the local RS-232 port will operate in the same mode.


Pass-through Mode

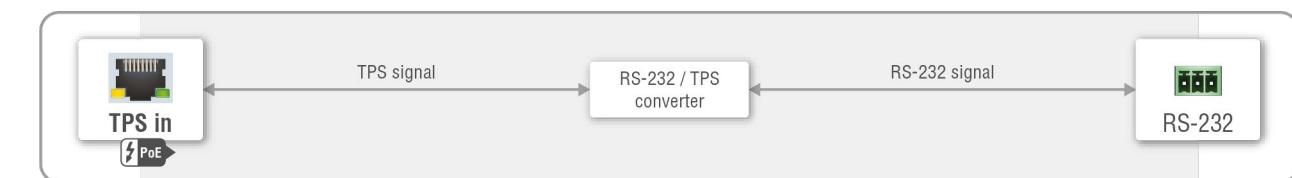

Block diagram of the serial interface in pass-through mode

In pass-through mode, the given device forwards the data that is coming from one of its ports to another, same type of port. The command is not processed by the CPU. Incoming serial data is forwarded from the TPS input port to the local RS-232 port and vice versa inside the receiver.


Control Mode

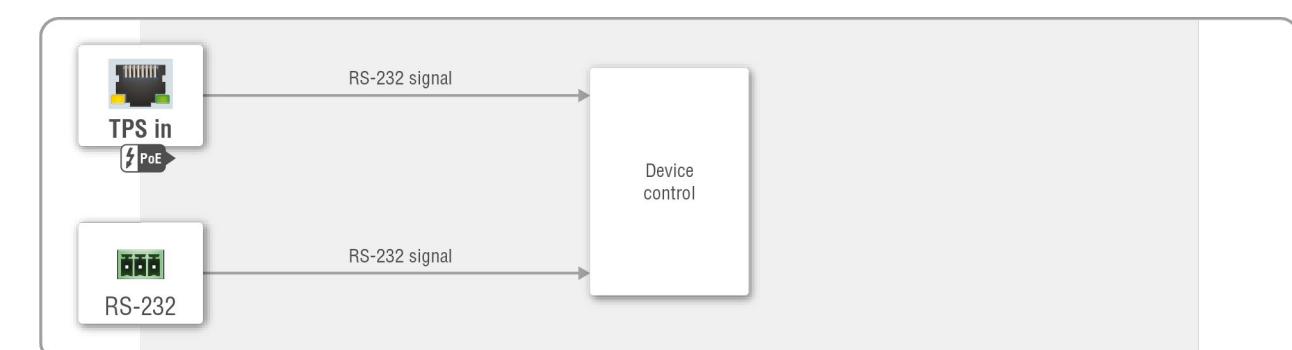

Block diagram of the serial interface in control mode

The incoming data from the given port is processed and interpreted by the CPU. The mode allows to control the receiver directly. LW2 or LW3 protocol commands are accepted – depending on the current port setting.

Command Injection Mode

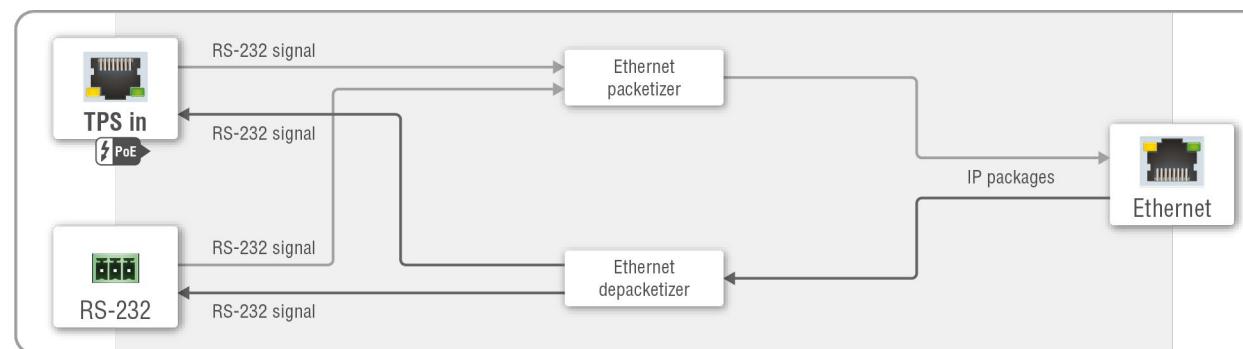

Block diagram of the serial interface in command injection mode

In this mode, the receiver works as an RS-232 bidirectional converter. The TPS signal is converted to RS-232 data and vice versa. TCP/IP port numbers are defined for the serial ports (TPS and local) for this purpose. E.g. the default Command Injection port number of the local RS-232 port is 8001. If a command is coming from the TPS interface that is addressed to the port no. 8001, it will be transmitted to the Tx pin of the local RS-232 port. That works in the opposite direction as well, and the method is the same on the serial interface of the TPS port too.

RS-232 Signal Transmission – Example



The Concept

The System controller can send commands to the receiver through the TPS transmitter and is able to remote control the projector via RS-232.

Settings


- System controller:** wireless IP connection to the same Ethernet as the transmitter is connected to. Use a dedicated software tool (e.g. a terminal) that is suitable for sending commands via TCP/IP to a certain IP:port address.
- Transmitter:** set the RS-232 mode to Command Injection on the TPS output port. Set the further parameters (Baud rate, Data bits, etc.) in accordance with the specifications of the projector. The transmitter will transmit the RS-232 data toward the receiver.
- Receiver:** set the RS-232 mode to Pass-through on the RS-232 port.
- Projector:** note the RS-232 port setting that is specified by the Manufacturer. Connect a suitable serial cable with the proper wiring.

4.6.2. RS-232 Recognizer

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model.

When the **HDMI-TPS-RX110AY-Plus** has an active video signal, the receiver logs into the VC codec automatically.

Steps and Settings

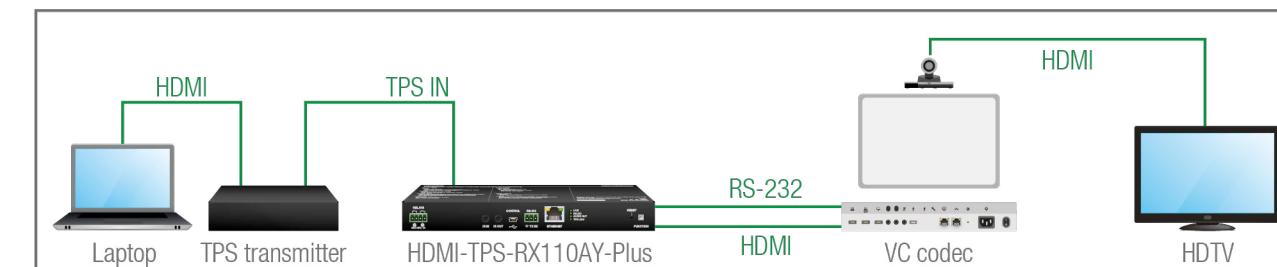

Process

When signal presents on any HDMI input, the extender sends a message: 'ping'.



Video codec sends a message: 'Login name:'.



When 'Login name:' is detected in the string, the extender sends a message: 'Admin'.



Video codec sends a message: 'Password:'.



When 'Password:' is detected in the string, the extender sends a message: 'Admin'.



Login is established, Video codec is ready to use.

Settings

This condition and the action is set in Event manager.

The serial communication is scanned continuously by the recognizer in the extender and gets the 'Login name' string.

This condition and the action is set in Event manager.

The serial communication is scanned continuously by the recognizer in the extender and gets the 'Password' string.

This condition and the action is set in Event manager.

First, configure the recognizer for the serial communication, after that set the events in the Event Manager (for more details, see the [Event Manager](#) section). The RS-232 recognizer settings need to be done with the Lightware Device Controller Software (see the [Message Recognizer](#) section) or with LW3 protocol commands (see the [RS-232 Message Recognizer](#) section).

Settings in the Event manager


- E1.** When the signal is present on the O1 port of the HDMI-TPS-RX110AY-Plus, it sends a message 'PING' on the P1 port of the RS-232 to the VC codec. For more details, see the [RS-232 Settings](#) section.
- E2.** Set a condition where 'Login name:' is the recognized RS-232 message. Action is sending serial message ('Admin') on the P1 port to the VC codec.
- E3.** Set a condition where 'Password:' is the recognized RS-232 message. Action is sending serial message ('Admin') on the P1 port to the VC codec.

4.6.3. IR Interface

ATTENTION! For the complete usage attach an IR emitter unit to the IR OUT and an IR detector unit to the IR IN connectors.

Technical Background

The Infrared signal transmission is similar to the serial data communication. The receiver contains a dedicated IR I/O connection, and can also transmit/receive IR signal via the TPS interface. The signal is in pronto HEX format in both cases.

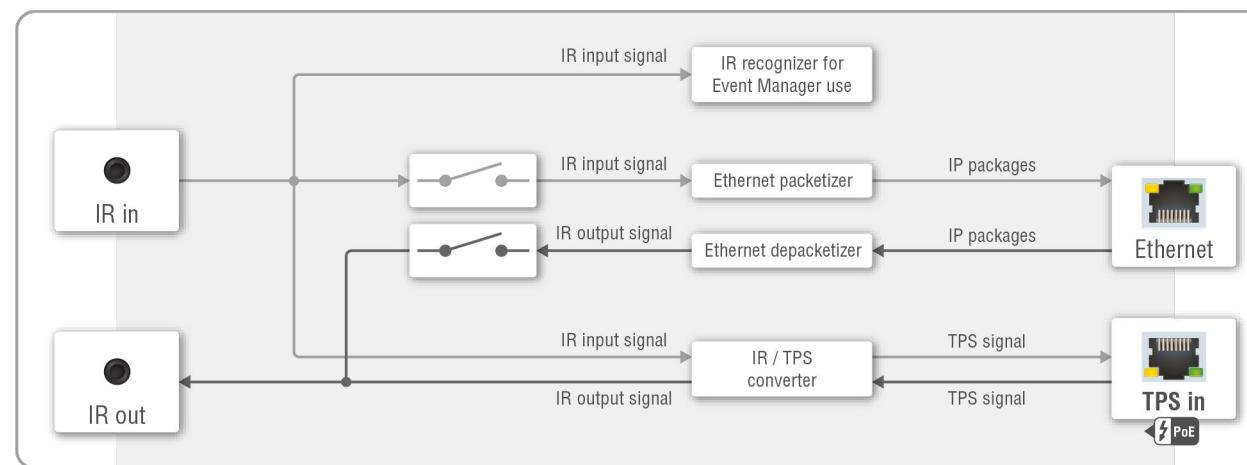


Block diagram of the IR interface

The most trivial usage of the IR interface is the transparent mode: signals received or sent on local IR ports are transmitted directly on the TPS IR link port and vice versa. Beside this, there is an IR recognizer in the device that you can assign actions in Event Manager for. The third option is the command injection mode (like at serial interface in the previous section), where you can send IR commands over LAN. Command injection mode can be turned on and off by input/output ports.

INFO: All settings are available in the LDC software, see the settings in the [Infra](#) section.

INFO: The modulation of the output IR signal can be turned off or on by an LW3 command, see the [Enabling/Disabling Output Signal Modulation](#) section.

IR Signal Transmission - Example

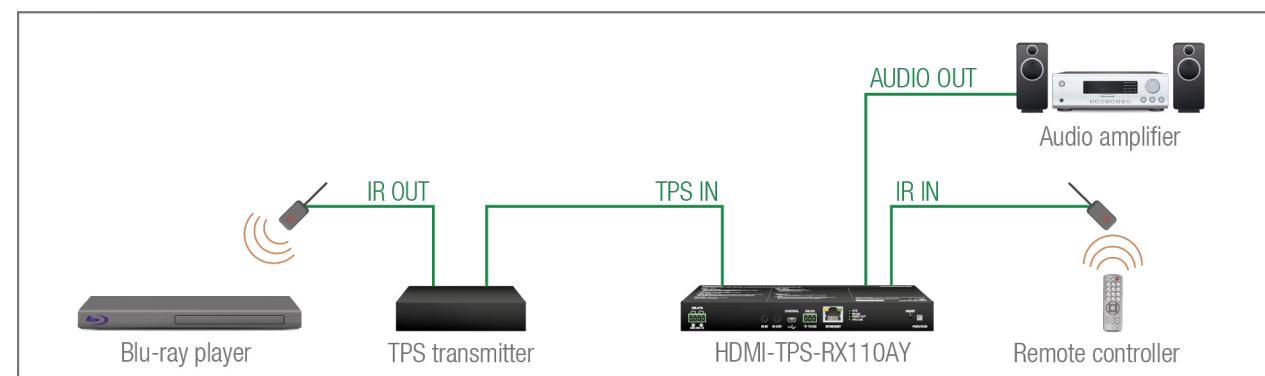

The Concept

An IR detector is attached to the Infrared input port of the Receiver and IR signals are sent by the Remote controller. The Receiver is connected to a compatible Transmitter built with an IR output port via TPS line. An audio device is also connected to the audio output port of the receiver.

The following ways are available for controlling the devices:

- **Transparent mode:** IR signals are received over the local IR input port of the **Receiver** from the Remote controller. The signals are transmitted further over the TPS line to the **Transmitter**, which can control the **Blu-ray player** via an IR emitter.
- **Event Manager usage:** set an action in Event Manager that if the volume control buttons are pressed on the **Remote controller**, the volume of the analog audio port of the **Receiver** increase or decrease accordingly. In this case you can control the audio device via the Receiver remotely. See the details about the Event Manager settings in the [Event Manager](#) section.

Advanced IR Functionality

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model.

HDMI-TPS-RX110AY-Plus can send Little-endian pronto hex IR codes on its IR output port.

It is possible in the following ways:

- With Lightware Device Controller software (for more details, see the [Sending pronto hex codes \(Little-endian format\)](#) section)
- With Event Manager (for more details, see the [Sending pronto hex codes \(Little-endian format\)](#) and [Event Manager](#) sections)
- With LW3 protocol command (for more information, see [Sending Pronto Hex Codes in Little-endian Format via IR Port](#))

Sending Bigger-endian pronto hex code is also available, see [Sending Pronto Hex Codes in Big-endian Format via IR Port](#).


4.6.4. Relay Interface

The HDMI-TPS-RX110AY receiver contains two relay modules, which can be accessed by a 4-pole Phoenix connector. The relays can be controlled by Lightware protocol commands (LW3), and Event manager actions can also be assigned to the port.

ATTENTION! The device is built with normally open (N.O.) contact relays, which means when the unit is not powered (DC plug is disconnected), the relays will be open.

INFO: The default state of each relay port is open.

Application of Relays - Example

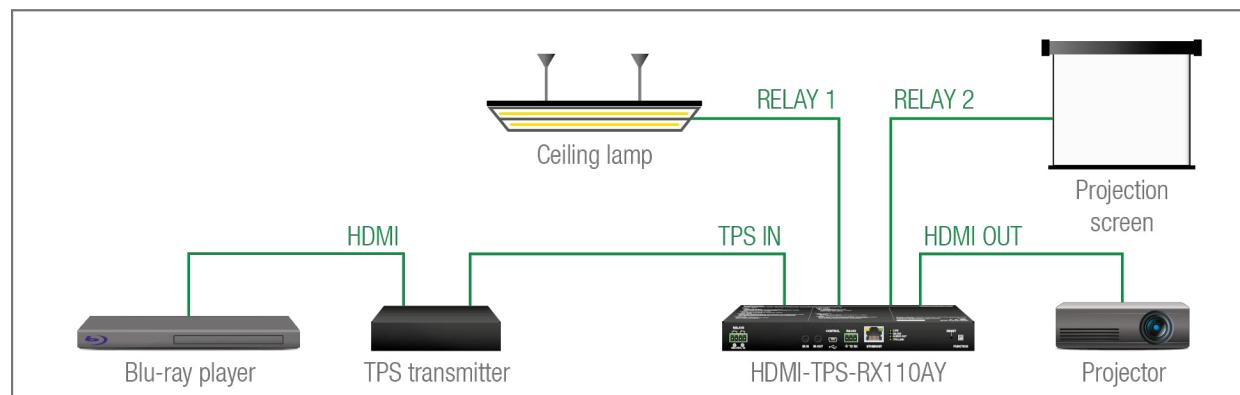

The Concept

The ceiling lamp is turned off by Relay 1 and the projection screen is rolled down by Relay 2 when a signal is received from the transmitter over the TPS input line.

Settings of the Receiver

- **Relay 1:** create an event in Event manager: when a signal is present on Input 1 (I1), set Relay 1 to be open. Also create another event: when signal is not present on Input 1 (I1), set Relay 1 to be closed.
- **Relay 2:** create an event in Event manager: when a signal is present on Input 1 (I1), set Relay 2 to be closed. Also create another event: when signal is not present on Input 1 (I1), set Relay 2 to be open.

When the Blu-ray player starts to play the presentation video, a signal is received over the TPS input line, so Relay 1 opens, which turns off the lights, Relay 2 closes and the projection screen is rolled down. When the presentation ends, signal ceases on the TPS input line, so Relay 1 closes, the lights are turned on, Relay 2 opens and the projection screen returns to its enclosure.

See the details about the Event Manager settings in the [Event Manager](#) section.

4.6.5. Consumer Electronics Control (CEC) Interface

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model.


Consumer Electronics Control (CEC) is a bi-directional communication, defined in the HDMI standard. This feature is for remote control of the source and sink devices in the A/V system.

The HDMI-TPS-RX110AY-Plus model is able to send and receive CEC commands from the input ports towards the source and from the output port towards the sink. For more information about sending CEC messages, see the [Relay Port Settings](#) section.

CEC has a dedicated pin in the HDMI connector. DVI connector does not contain this pin, so the CEC transmission brakes when a HDMI-DVI connector or adapter is in the signal route.

CEC Application Example

When active signal is detected on the TPS in, the transmitter automatically sends a CEC message to the HDTV to wake up.

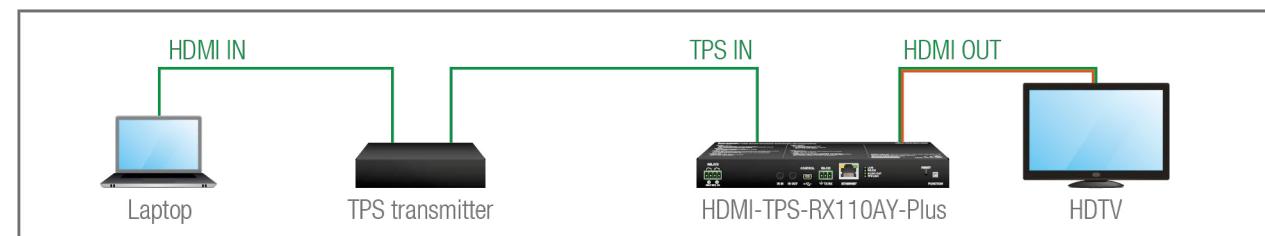

Create an event in the event manager:

- Set as a condition: signal is present on the output (O1),
- Set as an action: send a CEC command 'Image view on' O1 output port.

See the details about the Event Manager settings in the [Event Manager](#) section.

ATTENTION! The CEC command sending over TPS interface is working only with CEC-transparent TPS transmitters. For the details, please download our [Using CEC in Lightware Devices](#) document on <https://lightware.com/support/guides-and-white-papers> website.

4.6.6. USB Control Interface

The device can be controlled over the front panel USB mini B-type connector. This interface only supports LW3 protocol. The interface can be used to establish a connection to the Lightware Device Controller software.


4.7. Ethernet Interface

The device can be controlled over the Ethernet port. This interface supports both LW2 and LW3 protocols.

4.7.1. Device Control over Ethernet

The interface can also be used to remote control a third-party device, establish connection to the Lightware Device Updater software or perform firmware update.

Third-party Device Control via Local Ethernet (Example)

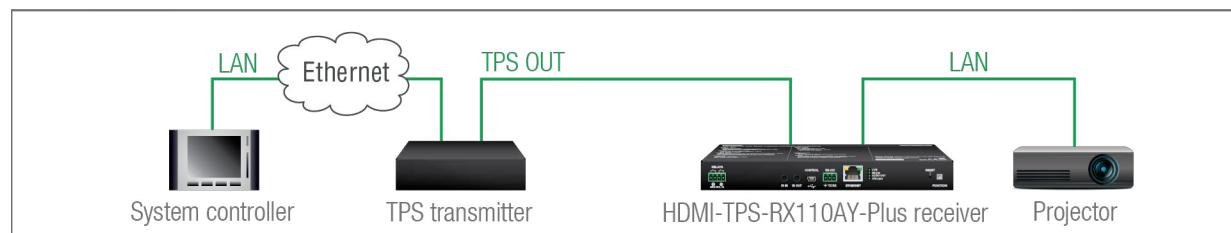

The following ways are available for device control:


- The **system controller** can communicate with the **transmitter** via Ethernet using LW2/LW3 protocol commands.
- The **system controller** can communicate with the **projector** by its IP:port address.
- The **transmitter** can send commands (e.g. as an action in the Event Manager) to the IP:port address of the **projector** by using LW3 protocol commands. See the Event Manager usage in the [Event Manager](#) section, and find the related LW3 protocol commands in the [Ethernet Message Sending](#) section.

4.7.2. Wake-on-Lan

DIFFERENCE: This feature is available from FW package v1.5.0b3.

The well-known wake-on-lan feature (sending magic Packet to the target PC) is available. This can be used to power on a computer automatically: just send a simple LW3 command; see the [Powering on a Computer over Ethernet \(Wake-on-LAN\)](#) section.

INFO: Please make sure the feature is enabled in the target PC and it is powered (but switched off).

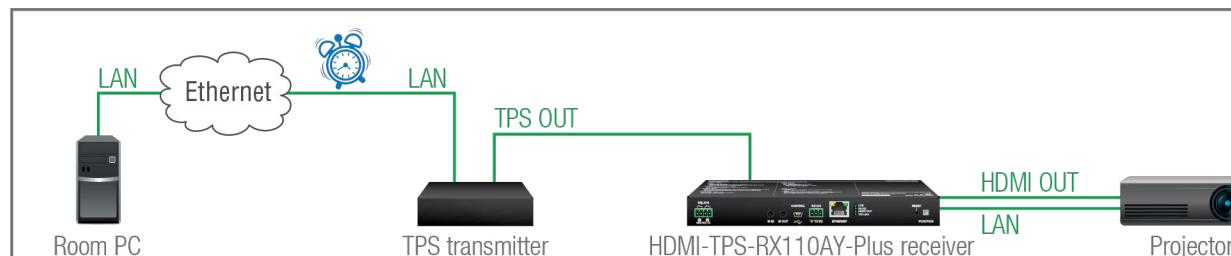


4.7.3. TCP Recognizer

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

The feature is almost the same as in case of the RS-232, but for the network interface: the incoming TCP messages can be processed, which may trigger actions. The combination of the TCP recognizer and the Event Manager gives numerous opportunities for creating automatic room solutions. [#tcprecognizer](#)

TCP Recognizer Example

When the Projector switches off, the button light (1) of the TBP6-EU button panel is turned off automatically.

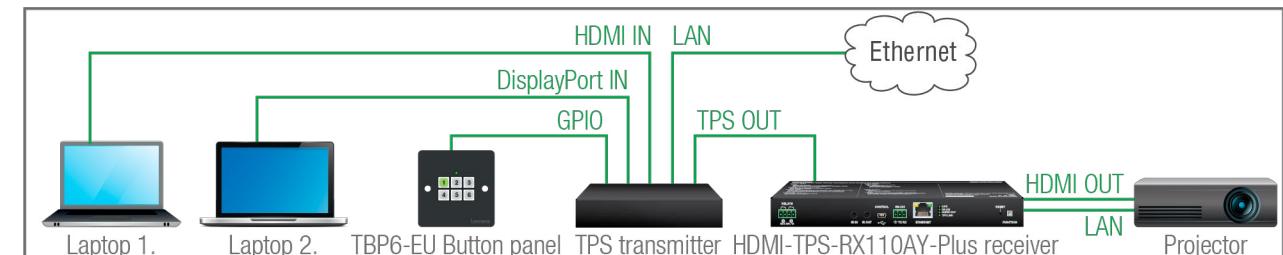

When the power-off process is started in the projector, it will send a message over Ethernet. That message will be recognized by the **Switcher** and it will be used as a Condition in Event Manager.

How to set up the transmitter

Step 1. Configure the recognizer for the communication by the LDC, see the [TCP Clients \(TCP Message Recognizer\)](#) section, or by LW3 protocol commands (see the [TCP Message Recognizer](#) section). Define the desired device as a TCP client. (The Projector is saved as 'C1' in this example.)

Step 2. Create the following event in the Event manager:

E1. When the (PWR!001 "On") message is recognized from the C1 client, the GPIO pin 1 is set to low level.

4.8. Batch Commands

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

These features can be used to process a group of pre-defined commands. The commands can be stored in the device as macros or you can save the commands in a plain text file and send them to the device by an HTTP message.

LW3 over HTTP (Command Salvo)

This feature allows the LW device to be controlled over HTTP. In this case, a batch of commands is sent over HTTP to the Lightware device for processing. Save the LW3 commands into a file, post it to the <IP_address>/protocol.lw3 file and the commands are processed immediately. [#http](#)

Running Macros

In this case, the command sequences (macros) are stored in the device. You can create your custom macros in a file, upload them into the device and run at any time. The number of the macros depends on the device type, at most 50 macros can be saved in the receiver. See more information about the feature in the [Macros](#) section. [#macro](#)

4.9. Basic IT Security

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

These entry-level network security improvements help prevent unauthorized access to the Lightware device: [#new](#)

- **Cleartext login**
- **IP Port Block**
- **MAC Filtering**

The **Cleartext Login** tool allows setting a password for login, thus the device will not accept any command coming from an interface (RS-232, Ethernet, etc...), only the device type and the serial number can be queried without login. You can set all affected TCP/IP ports individually to enable or disable.

The **IP Port Block** feature is an additional protection for the Cleartext login. There are TCP/IP ports in Lightware devices that are not protected by the login, so you can disable them if necessary. Example: due to the working method of the LW2 communication, the Cleartext login does not provide protection when an LW2 command is sent to the device, that is why the TCP port no. 10001 shall be blocked manually.

Another level of security is the **MAC Filtering** tool. You can create an 'allowlist' of network devices based on the MAC address that are allowed:

- Controlling the device (Send option), or
- Querying parameters (Receive option) to/from the Lightware device.

The table below shows the protection levels of these features.

IP Port	Function	MAC Filter	Cleartext Login	IP Port Block
80	HTTP Post&Get	✓	-	✓
81	LW3 control (miniweb)	✓	✓	-
6107	LW3 protocol	✓	✓	-
800x	Command injection (RS-232)	✓	-	✓
900x	Command injection (IR)	✓	-	✓
10001	LW2 protocol	✓	-	✓

ATTENTION! Be careful when combining these functions; improper settings may cause malfunction.

Most of these features are available in LDC, see the [Settings Menu](#) section.


4.10. Bulk Device Management

It is possible to configure several devices at once with the Bulk Device Management tool. This feature can be accessed by clicking on the **Tools** button in the bottom left corner of the Device Discovery window of the LDC and choosing the Bulk Management option. [#new](#)

See the [Bulk Device Management](#) section for more details.


4.10.1. Network Settings

This function makes it possible to change and adjust the network settings of several devices at once (unique settings for each device), without having to set them at each device one by one. A .csv file can be created containing the list and desired settings of the devices and it can be uploaded into the LDC to be applied to the devices quickly.

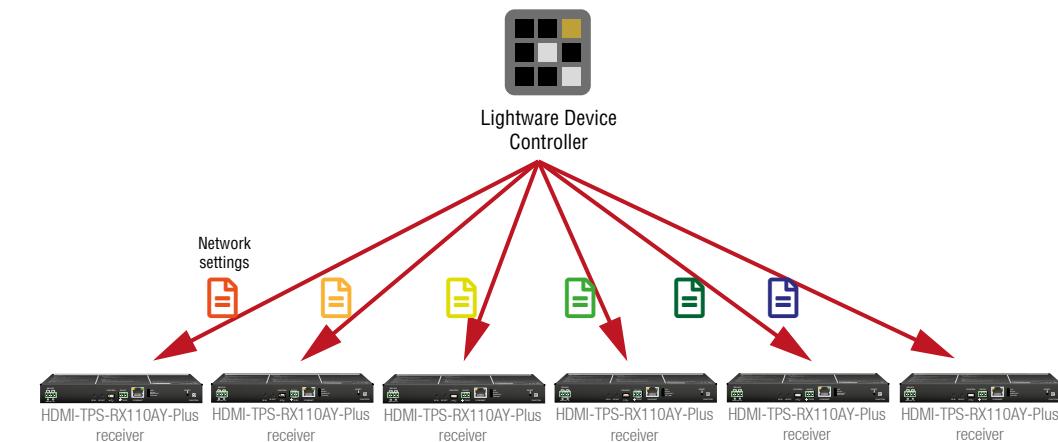

4.11. The Event Manager Feature

The Event Manager feature means that the device can sense changes on its ports and is able to react according to the pre-defined settings. Lightware Device Controller contains a user-friendly software tool and allows to create Events by defining a Condition and an Action.

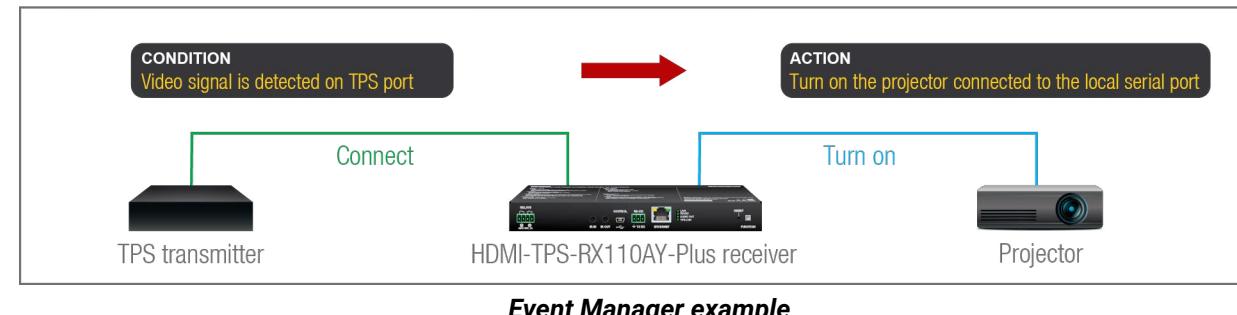

See more information about the settings in the [Event Manager](#) section.

Event Manager +

The AND Operator

DIFFERENCE: This feature is available from FW package v1.5.0b3.

The practical experience has shown that there is a need to examine several conditions (up to four) as follows: if one of the set conditions becomes true (while the other conditions are fulfilled), then the set Action is launched. For example, in a meeting room we have the following situation:

- Signal is present on an input port,
- A GPIO pin state becomes 'low' (by an external device).

If the two **Conditions** are present at the same time, the **Action** is launched. Just create the two **Conditions** into separate Events, then create a third Event, select the two **Conditions** and define the **Action**.

See the [Combine Links](#) section for the settings in LDC.

Event Manager Variables

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

A brand new area is opened by implementing the variables. You can create custom variables in number or text format, which can be used in the Event Manager. The variables can have the following properties/methods:

- Numeric (integer) type with min/max value setting, or string-type (determined automatically)
- Increment/step the numeric value,
- Value-dependent case operations,
- Reading and storing the value of an LW3 property into a string or a numeric variable.

The defined variables are stored in a non-volatile memory and the value is kept in case of a reboot. The new opportunities allow creating a monitoring/controlling system without connecting an additional control processor.

See the [Variables](#) section for the settings in LDC.

Condition Trigger

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.


This improvement in the Event Manager works as if a condition is detected. When a complex control system is built, a Condition may trigger numerous Actions. A typical example is when a system is powered on and the 'ready-to-use' state has to be loaded. In this case, there could be many actions that are based on the same condition. In order to reduce the number of the commands, you can trigger one 'key' condition, which could start the whole process.

See the [Condition Triggering](#) section for the settings in LDC.

4.12. Further Built-in Features

4.12.1. Automatically Launched Actions – The Event Manager


The Event Manager feature means that the device can sense changes on its ports and is able to react according to the pre-defined settings. Lightware Device Controller contains a user-friendly software tool and allows to create Events by defining a Condition and an Action.

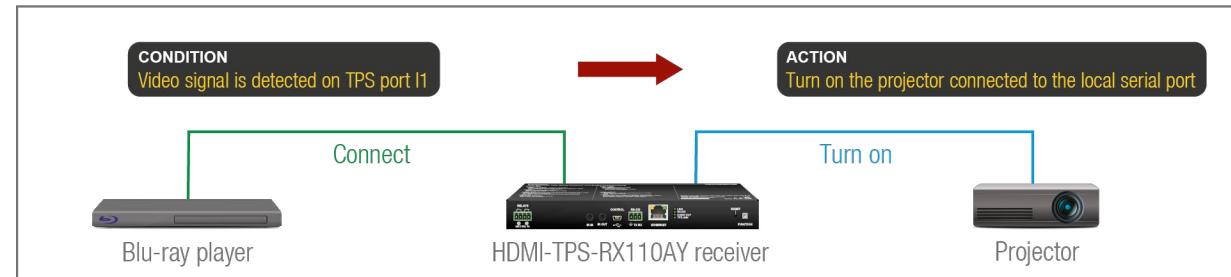

Event Manager example

See more information about the settings in the [Event Manager](#) section.

4.12.2. Receiver Cloning – Configuration Backup and Restore

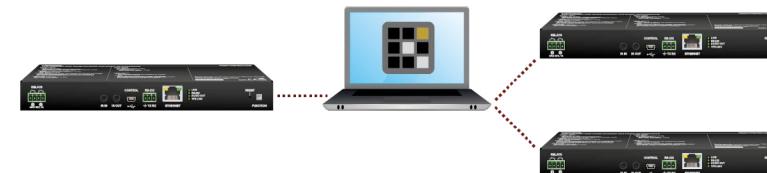

The receiver (configuration) cloning of HDMI-TPS-RX110AY is a simple method that eliminates the need to repeatedly configure certain devices to have identical (non-factory) settings. If the devices are installed in the same type of system multiple times, then it is enough to set up only one device to fit the user's needs and then copy those settings to the others, thus saving time and resources.

See more information about the settings in the [Configuration Cloning \(Backup Tab\)](#) section.

4.12.3. Remote Firmware Update of Connected Lightware Devices



The firmware of the Lightware TPS devices can be updated individually by the Lightware Device Updater (LDU) software. HDMI-TPS-RX110AY contains a feature that allows having a faster and more comfortable firmware update process. When the firmware of the connected extenders has to be updated, the TPS connection is necessary towards the extenders – nothing else. The LDU will find the connected devices and update them.

4.13. Software Control Modes

The user has more possibilities to control the device besides the front panel buttons. The following list contains the software control modes:

- **Lightware Device Controller (LDC):** you can connect to the device via our control software using USB, RS-232 or Ethernet interfaces and control or configure the device as you wish. For the details, see the [Software Control - Lightware Device Controller](#) chapter.
- **LW2 protocol commands:** you can configure the device by using the reduced command set of LW2 protocol. For more details, see the [LW2 Programmers' Reference](#) chapter.
- **LW3 protocol commands:** you can configure the device by using the full-range command set of LW3 protocol. For more details, see the [LW3 Programmers' Reference](#) chapter.

5

Software Control - Lightware Device Controller

The device can be controlled by a computer through RS-232, Ethernet and USB interfaces by the Lightware Device Controller (LDC). The software can be installed on a Windows PC or macOS. The application and the User's Manual can be downloaded from www.lightware.com.

- ▶ [INSTALL AND UPDATE](#)
- ▶ [RUNNING THE LDC](#)
- ▶ [ESTABLISHING THE CONNECTION](#)
- ▶ [BULK DEVICE MANAGEMENT](#)
- ▶ [PORT PARAMETERS MENU](#)
- ▶ [DIAGNOSTIC TOOLS](#)
- ▶ [EDID MENU](#)
- ▶ [EVENT MANAGER](#)
- ▶ [SETTINGS MENU](#)
- ▶ [THE BUILT-IN MINIWEB](#)
- ▶ [CONFIGURATION CLONING \(BACKUP TAB\)](#)
- ▶ [ADVANCED VIEW WINDOW](#)

5.1. Install and Update

INFO: After the installation, the Windows and the Mac applications have the same look and functionality. This type of the installer is equal to the Normal install in case of Windows and results in an updateable version with the same attributes.

Minimum System Requirement

RAM: 1 GB

Minimum display resolution: 1280x720

Installation for Windows OS

Run the installer. If the User Account Control drops a pop-up message, click **Yes**.

During the installation you will be prompted to select the type of the installation: **normal** and the **snapshot** install:

Normal install	Snapshot install
Available for Windows and macOS	Available for Windows
The installer can update only this instance	Cannot be updated
Only one updateable instance can exist for all users	More than one different version can be installed for all users

Comparison of installation types

ATTENTION! Using the Normal install as the default choice is highly recommended.

Installation for macOS

Mount the DMG file by double clicking on it, and drag the LDC icon over the Applications icon to copy the program into the Applications folder. If you want to copy the LDC into another location, just drag the icon over the desired folder.

ATTENTION! Please check the firewall settings on the macOS device. LDC needs to be added to the exceptions of the blocked software for the proper operation.

Updating LDC

Step 1. Run the application.

The **Device Discovery** window appears automatically, and the program checks the available updates on Lightware's website and opens the update window if the LDC found updates.

The current and the update version number can be seen at the top of the window and they are shown in this window even with the snapshot install.

The **Update** window can also be opened by clicking on the **About**  icon and the **Update** button.

Step 2. Set the desired update setting in the **Options** section.

- If you do not want to check for updates automatically, uncheck the **circle** that contains the green tick.
- If you want to postpone the update, a reminder can be set with different delays from the **drop down list**.
- If the proxy settings traverse the update process, set the proper values, then click on the **OK** button.

Step 3. Click on the **Download update** button to start the updating.

The updates can be checked manually by clicking on the **Check now** button.

5.2. Running the LDC


The common way to start the software is to double-click on the LDC icon. But the LDC can be run by command line parameters as follows:

Connecting to a Device with Static IP Address

The LDC is connected to a device with the indicated static IP address directly; the Device Discovery window is not displayed. When the port number is not set, the default port is used: 10001 (LW2 protocol). For LW3, devices use the **6107** port number.

Format: LightwareDeviceController -i <IP_address>:<port>

Example: LightwareDeviceController -i 192.168.0.20:6107

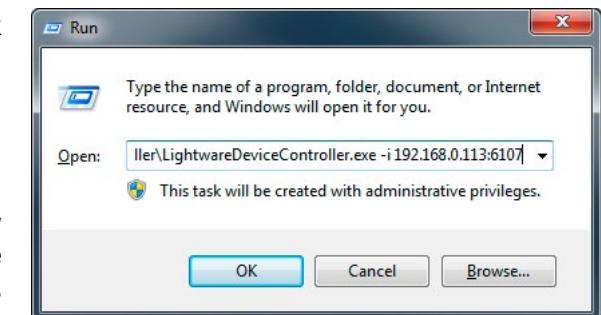

Connecting to a Device via a Serial Port

Format: LightwareDeviceController -c <COM_port>:<Baud>

Example: LightwareDeviceController -c COM1:57600

The LDC is connected to a device with the indicated COM port directly; the Device Discovery window is not displayed. If no Baud rate is set, the application will detect it automatically.

Adjusting the Zoom

The window can be zoomed to a specific value to fit to the resolution of the desktop (higher/lower). '1' is the default value (100%).

Format: LightwareDeviceController -z <magnifying_value>


Example: LightwareDeviceController -z 1.2

ATTENTION! The last set value is stored and applied when LDC is started without a parameter.

5.3. Establishing the Connection

Connecting Steps

- Step 1. Connect the device to a computer via USB, RS-232 or Ethernet.
- Step 2. Run the controller software; the device discovery window appears automatically. There are three tabs for the different types of interfaces: Ethernet, Serial, and USB.
- Step 3. Select the desired unit and click on the green **Connect** button (or just double-click on the device).

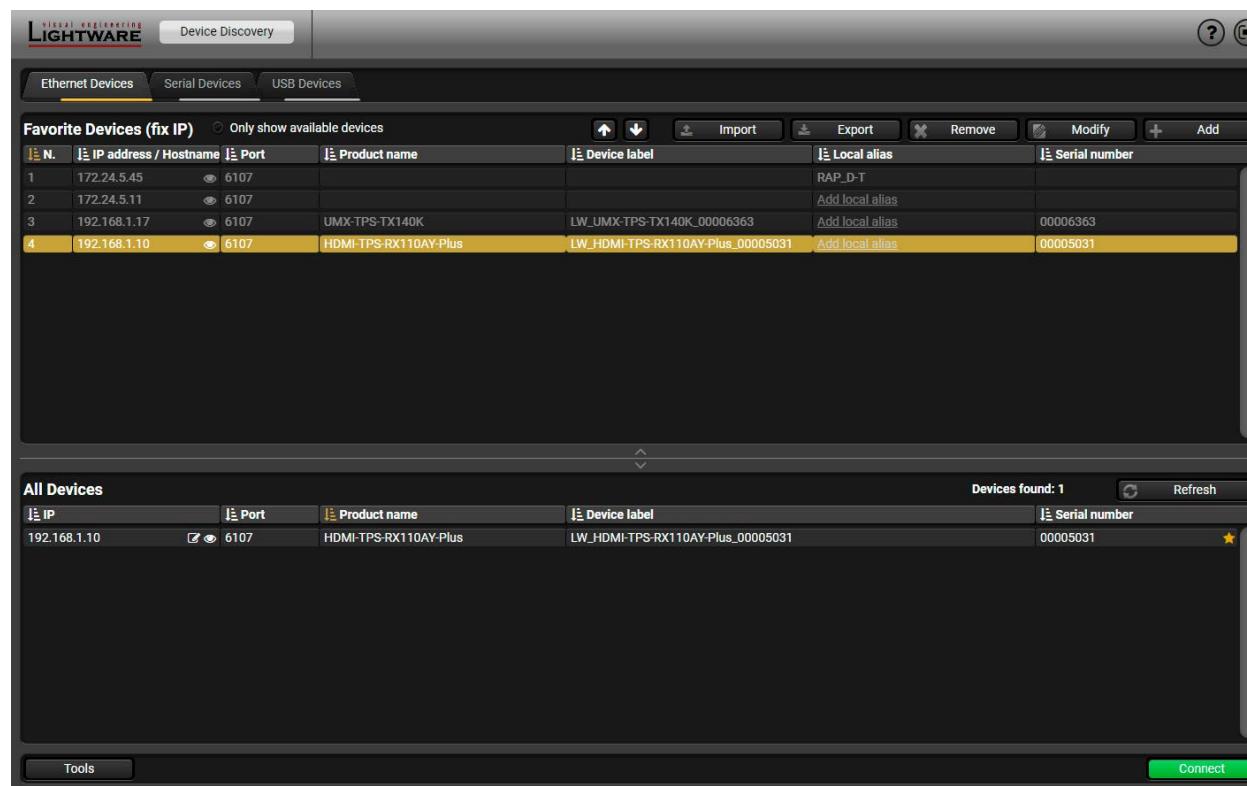

Device discovery window in LDC

5.3.1. Ethernet Tab

The Ethernet tab consists of two lists. The **All devices** list contains all Lightware devices that are available in the connected network (in the 255.255.0.0 subnet). However, there is no need to browse all available devices, as you can expand the list of **Favorite devices** with any Lightware device that is connected via Ethernet in any of the following ways:


- Mark the desired device with the ★ symbol in the **All Devices** list,
- Press the **Add** button and add the device in the appearing window, or
- Import the list of favorite devices that was **exported** previously.

Add New Favorite Device

Press the **Add** button; in the appearing window you can enter the **IP address**. The **host name** of the desired device can be used instead if it is supported. That allows setting a unique name to identify the device in a network. If the host name is saved in this window and the IP address is changing, the device will still be available and connectable.

ATTENTION! The host name connection-feature does not work when the target device is accessed over VPN.

See more information about the host name property in the [Setting the Host Name](#) section.

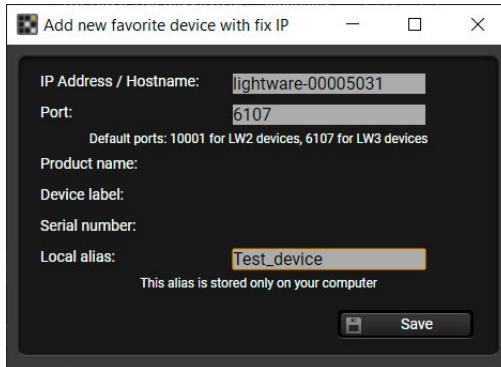

Import/Export the List of Favorite Devices

The list of favorite devices can be exported/imported by the dedicated buttons (saved as *.JSON file). The list can be imported later (in another computer, too), but please note that the current list will be overwritten by the imported list.

Changing the IP Address


To modify the IP address settings quickly, it is not necessary to enter the device's settings/network menu, you can set them by clicking on the pencil icon beside the IP address.

You can see the new settings only in this window. The device needs a few seconds to apply the new settings.



Identifying the Device

Clicking on the icon results in the status LEDs blinking for 10 seconds. The feature helps find the device itself physically.

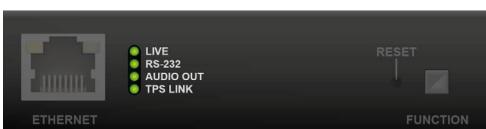

Highlighting the Device

DIFFERENCE: This feature is available from FW package v1.5.0b3.


The opposite feature is also available to help find the desired device. Press the **Show Me** button for **5 seconds**, until the front panel LEDs start to blink slowly. In parallel, the device is **highlighted in green for 4 seconds** in the Device discovery window of the LDC. `#highlightme`



INFO: "Highlight Me" is the default function of the **Show Me** button. If you assign a different function to the button, the feature above will not be available.

5.3.2. Serial Tab


If the device is connected via the RS-232 port, click on the **Query** button next to the desired serial port to display the device's name and serial number. Double-click on the device, or select it and click on the green **Connect** button.

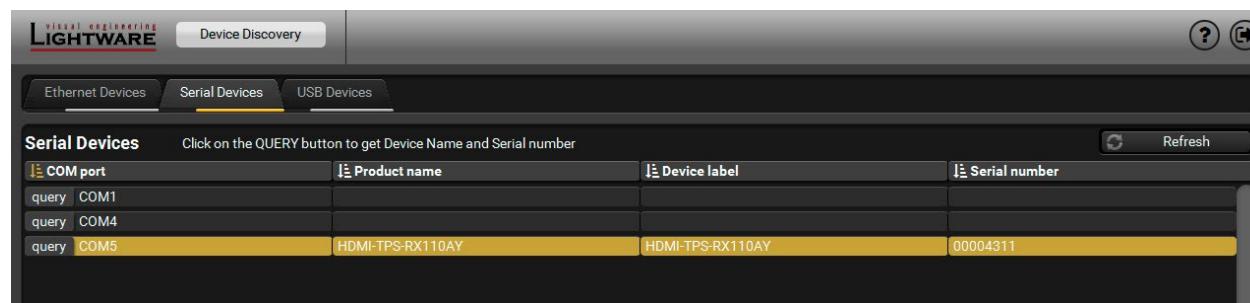

ATTENTION! Before the device is connected via the local RS-232 port, make sure that **Control mode** and **LW3 protocol** are set on the serial port. Furthermore, the RS-232 port must be free and other serial connection must not be established to the device over that port.

5.3.3. USB Tab

Connect the device to a PC/computer over the USB mini-B type connector. Refresh the list and double-click on the device or select it and click on the green **Connect** button.

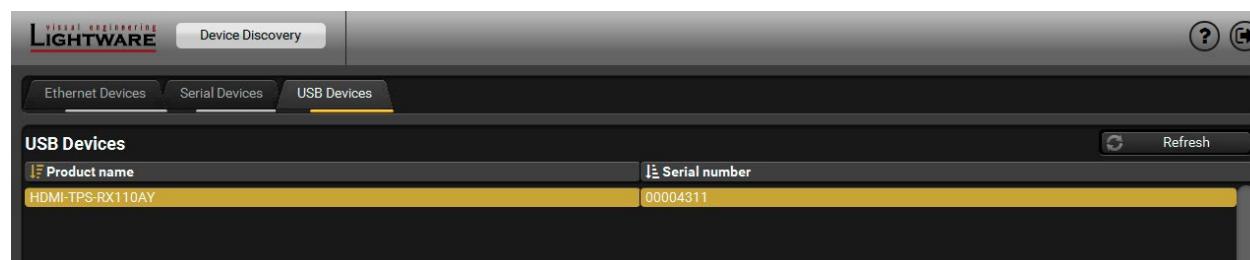

5.3.4. Further Tools

The **Tools** menu contains the following options:

- **Log Viewer:** The tool can be used for reviewing log files that have been saved previously.
- **Create EDID:** This tool opens the Easy EDID Creator wizard, which can be used for creating unique EDIDs in a few simple steps. Functionality is the same as that of the Easy EDID Creator.
- **Demo Mode:** This is a virtual MX-FR17 matrix router with full functionality built into the LDC. Functions and options are the same as that of a real MX-FR17 device.
- **Bulk Management:** This tool allows changing the network settings of several devices at once. See the details in the next section.

The **Terminal** window is also available by pressing its button on the bottom.

5.4. Bulk Device Management

It is possible to configure several devices at once with the Bulk Device Management tool. This feature can be accessed by clicking on the Tools button in the bottom left corner of the Device Discovery window and choosing the Bulk Management option.


#new

DIFFERENCE: This function is available from the firmware version v2.6.0b6 of the LDC and v1.5.0b3 of the HDMI-TPS-RX110AY series devices.


5.4.1. Network Settings

It is possible to set the network settings of several devices at once by using a .csv file that contains the list of the devices that we need to configure, then uploading it into the LDC.

Please note that if the data in the file is missing or incorrect, then the discovery of the affected device will fail and an 'Invalid data' message will be displayed in the State column. In case of an IP or MAC address conflict, the message is 'Duplicated'.

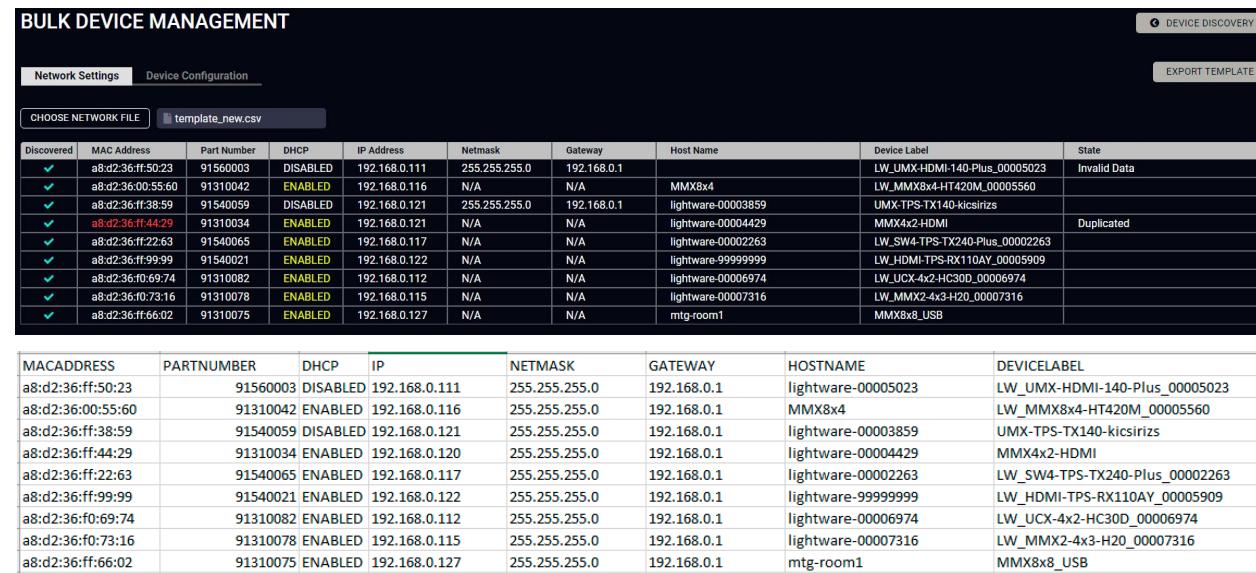

The screenshot shows the 'BULK DEVICE MANAGEMENT' interface. At the top, there are tabs for 'Network Settings' and 'Device Configuration', with 'Network Settings' being the active tab. Below the tabs is a 'CHOOSE NETWORK FILE' button and a preview window showing 'template_new.csv'. The main area is a table with columns: Discovered, MAC Address, Part Number, DHCP, IP Address, Netmask, Gateway, Host Name, Device Label, and State. The table lists several devices with their current network settings and a status column indicating if they are 'Invalid Data', 'Duplicated', or 'All Done'. Below the table is another table with columns: MACADDRESS, PARTNUMBER, DHCP, IP, NETMASK, GATEWAY, HOSTNAME, and DEVICELABEL, showing the same data in a different format.

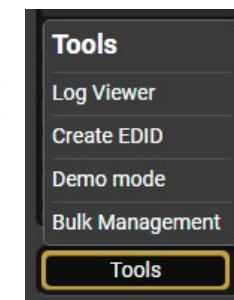


Changing the network settings can be done in a few easy steps:

Step 1. First alter the settings you need to change in the .csv file that contains the devices. You can use a template file accessible via the **Export template** button and saving the file to your computer, then filling it out with the parameters of the devices. The file contains the MAC address, Partnumber, DHCP status, IP address, Netmask, Gateway, Hostname and Device label of each device.

Step 2. Upload the .csv file into the LDC by pressing the **Choose network file** button and browsing the file in the pop-up window. This will result in a list of the devices appearing on the screen.

Step 3. Finally, press the **Apply settings** button to execute the changes. This might take up to a minute to finish.

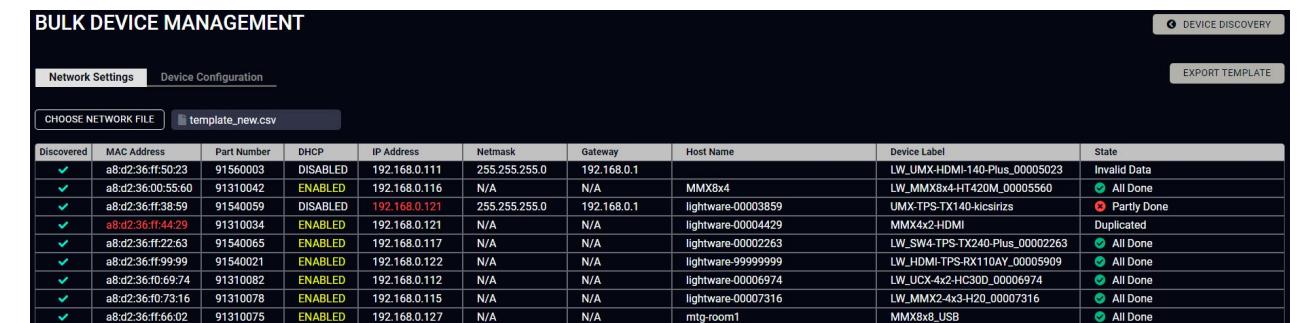


The screenshot shows the 'BULK DEVICE MANAGEMENT' interface with the 'Device Configuration' tab active. At the top, there are buttons for 'DEVICE DISCOVERY' and 'EXPORT TEMPLATE'. Below is a 'CHOOSE NETWORK FILE' button with 'template_new.csv' selected. The main area is a table with columns: Discovered, MAC Address, Part Number, DHCP, IP Address, Netmask, Gateway, Host Name, Device Label, and State. The table lists the same devices as the previous screenshot, but with more detailed configuration information. Below the table is a preview of the CSV file content with columns: MACADDRESS, PARTNUMBER, DHCP, IP, NETMASK, GATEWAY, HOSTNAME, and DEVICELABEL.

Message	DHCP enabled	DHCP disabled	Device discovered
✓ All Done	Successful procedure		✓
✗ Partly Done	Failure setting the Host name and/or the Device label		✗
Unavailable device	Host name and Device label missing	IP address, Network, and/or Gateway missing	✗
Failed	Host name and Device label incorrect	IP address, Network and Gateway incorrect	✓
IP mismatch	-	Host name and Device label incorrect	✗

ATTENTION! The 'Failed' and 'IP mismatch' status indicators are not common, they appear when the multicast and/or the port used for LMDMP connection is disabled, or if the firmware version of the device is below the recommended (see the pop-up window when opening the Bulk Management or the beginning of this chapter).

5.5. Port Parameters Menu

5.5.1. Video Tab

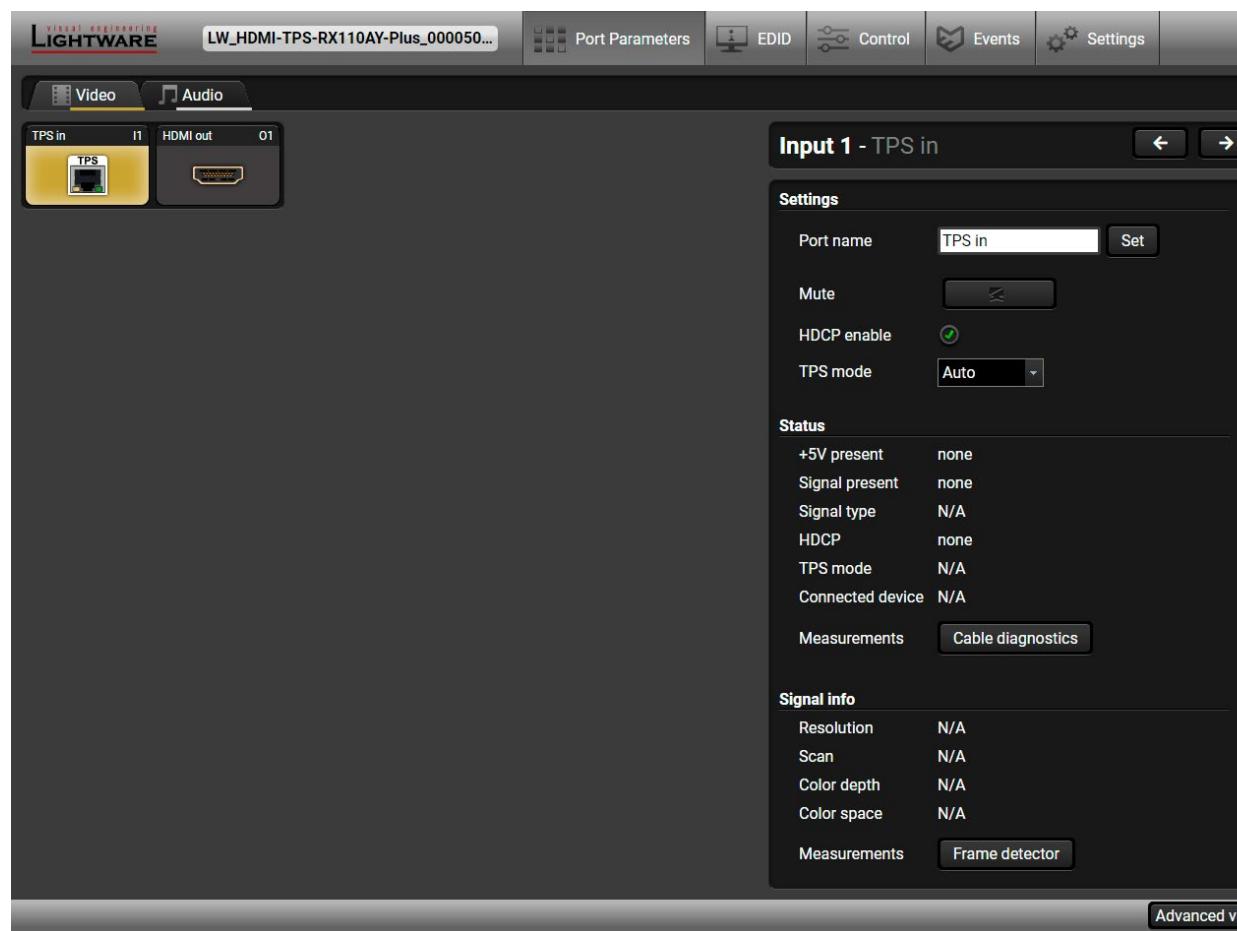

Video tab in Port parameters menu

The most important video related information and settings are available on this tab.

Link Video (I1)

This is the TPS (HDBaseT) input line of the receiver. Clicking on the TPS icon results in the settings panel appearing on the right side. You can check the status of the line, signal info and current emulated EDID.

Available Settings:

- HDCP setting (enable / disable);
- TPS mode (see details in the [TPS Interface](#) section);
- [Cable Diagnostics](#) and [Frame Detector](#) tools;
- Reloading [Factory Default Settings](#).

HDMI OUT Video (O1)

This is the HDMI output line of the receiver. Clicking on the HDMI icon results in the settings panel appearing on the right side. You can check the status of the line, signal and display info.

Available Settings:

- Mute/Unmute port;
- Signal type: Auto, DVI, or HDMI;
- HDCP mode: Auto or Always;
- Power 5V mode: Auto, Always on, or Always off;
- Connected Source port no.
- Test pattern mode: Off, On, No signal;
- Test pattern clock source: 480p, 576p, or Original video signal;
- Test pattern: Red, Green, Blue, Black, White, Ramp, Chess, Bar, Cycle;
- [Frame Detector](#);
- Reloading [Factory Default Settings](#).

#hdcp #tpsmode #cablediagnostics #mute #unmute #signaltypes #power5v #testpattern #framedetector

TIPS AND TRICKS: Hover the mouse cursor over the information ribbon; the product name and the IP address of the device will appear as a tooltip text.



5.5.2. CEC Command Sending

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model.

The HDMI-TPS-RX110AY-Plus model is able to send and receive Consumer Electronics Control (CEC) commands. This feature is for remote control of the source or sink device. CEC is a bi-directional communication via HDMI cable.

ATTENTION! It can occur that the third-party device can receive, but not execute the command, because it is not supported by the product. Check the accepted commands in the documentation of the device.

INFO: The first 2x2 bytes of the CEC commands contain identification data of the source and destination address. When the port is an input, it is always 04 (from the TV to the Playback device 1.), when the port is an output, it is always 40 (from the Playback device 1. to the TV).

The CEC panel is available on the port properties window of the **TPS input** and **HDMI output** ports.



CEC control panel on the HDMI out port properties window

1 Drop-down command list

2 Custom command textbox

3 OSD string textbox

4 Received Command box

This list contains the basic CEC commands; most of them are displayed on the graphical interface, too (on the left side). Click on the **Send** button to send the command.

The text field is for sending hexadecimal commands to the source. The maximum length of the message could be 30 characters (15 bytes). Click on the **Send** button to send the command.

A max. 14-character-long text can be shown on the sink device. The send OSD (On-screen display) command textbox is the input field of the string. Alphanumeric characters, glyphs and space are accepted. Click on the **Send** button to execute the command.

Displays all of the sent (in red) CEC commands and the received answers (in blue) with a timestamp.

Legend of the received message:

< [10:33:17] ACK

Answer for the acknowledged command.

< [10:35:01] NACK

Answer for the not acknowledged command.

< [10:33:17] IN PROGRESS

The command is in progress at the moment.

< [10:33:17] FAILED

Answer for other failure.

< [10:35:40] feature_abort <*>

This is the most common answer from the third-party devices when the command is delivered, but the execution is refused. The cause of the refusal stands after the 'feature_abort' expression.

Click on the **Clear** button to erase the content of the terminal window.

5 Clear button


6 CEC command button panel

This panel provides quick and easy management of CEC commands. These buttons are pre-programmed with basic functions and send commands towards the sink. The communication is displayed in the Received Command box. For the list of the commands, see the [Relay Port Settings](#) section. Both the layout and functionality are similar to the design of a remote control.

ATTENTION! Make sure that the controlled unit is CEC-capable and this function is enabled.

#cec

5.5.3. Audio Tab

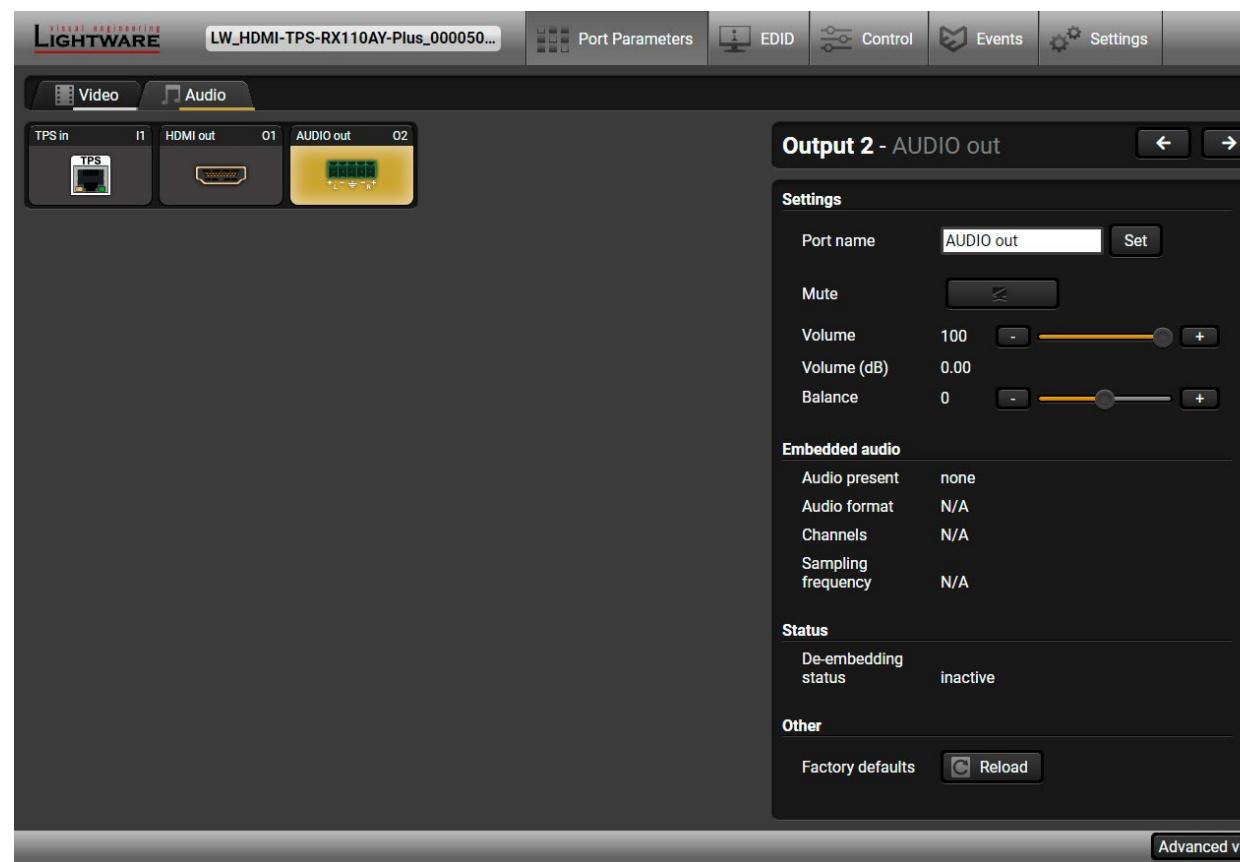

Audio tab in Port parameters menu

The most important audio related information and settings are available on this tab.

Link Audio (I1)

This is the embedded TPS audio input line of the receiver. Clicking on the TPS icon results in the settings panel appearing on the right side. You can check the signal info of the port.

Available Settings:

- Mute/Unmute port;
- Lock/Unlock port;
- Reloading factory defaults (see factory default settings in the [Factory Default Settings](#) section).

HDMI OUT Audio (01)

This is the embedded HDMI audio output line of the receiver. Clicking on the HDMI icon results in the settings panel appearing on the right side. You can check the signal info of the port.

Available Settings:

- Mute/Unmute port;
- Lock/Unlock port;
- Reloading factory defaults (see factory default settings in the [Factory Default Settings](#) section).

Audio Out (02)

This is the de-embedded analog audio output line of the receiver. Clicking on the HDMI icon results in the settings panel appearing on the right side. You can check the signal info and the de-embedding status of the signal.

Available Settings:


- Mute/Unmute port;
- Volume (in percent);
- Balance;
- Reloading factory defaults (see factory default settings in the [Factory Default Settings](#) section).

`#mute #unmute #lock #unlock #volume #balance #analogaudio`

5.6. Diagnostic Tools

5.6.1. Frame Detector

The ports can show detailed information about the signal like blanking intervals and active video resolution. This feature is a good troubleshooter if compatibility problems occur during system installation. To access this function, open the port properties window and click on the **Frame detector** button.

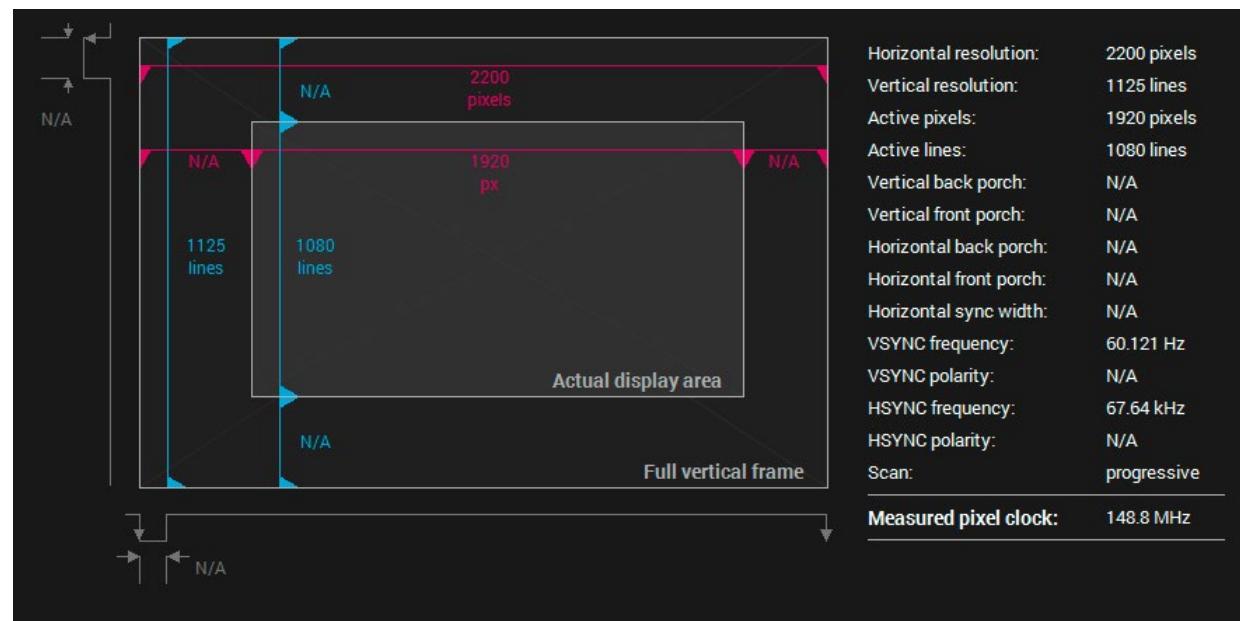

Frame detector window


Lightware's Frame Detector function works like a signal analyzer and makes it possible to determine the exact video format that is present on the port, thus helps identify many problems. E.g. actual timing parameters may differ from the expected and this may cause some displays to drop the picture.

Frame Detector measures detailed timings on the video signals just like a built-in oscilloscope, but it is much easier to use. Actual display area shows the active video size (light gray). The dark gray area of the full frame is the blanking interval, which can contain the info frames and embedded audio data for HDMI signals. The shown values are measured directly on the signal and not retrieved only from the HDMI info frames.

5.6.2. Cable Diagnostics

The cable diagnostics is a useful tool to determine any cable related issues in case of the TPS connection. The estimated cable length and the quality of the link are measured periodically and the diagnostic window shows the values in real-time. If the green bars hit the first line in the middle, they turn red. It means the number of the errors during the extension is higher than what is generally deemed acceptable. The link might be alive, but recovery of the received data is not guaranteed.

INFO: Each bar represents a differential line in the CATx cable. The inappropriate termination of the cable usually causes high error rates. Check the cable terminations or change the cable.

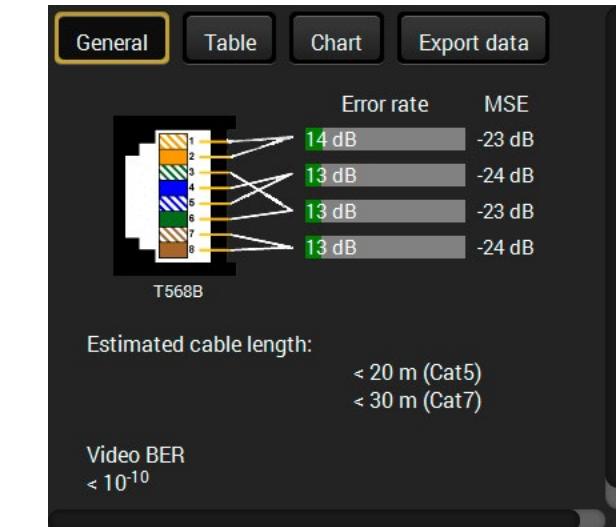

Reference Values


Value	Explanation
10^{-10} - 10^{-9}	Excellent image quality
10^{-8}	Minor error, not recognizable by eyes
10^{-7}	Sometimes recognizable flash on a special test pattern
10^{-6}	Small noise can be seen
10^{-5}	Easy to recognize image error
10^{-4}	Bad image quality

The "Video BER < 10^{-10} " value displayed above means that on average there is 1 bad pixel after 10^{10} pixels, which means the number of the bit errors is about 1 pixel in every 80 seconds.

INFO: You can find more details about maximum twisted pair cable distances in the [Mechanical Drawings](#) section.

Table and Chart Views

Cable diagnostics can be displayed in advanced modes as well. Two ways are available: **table view** and **chart view**. Data can be exported to a file by clicking on the **Export data** button.

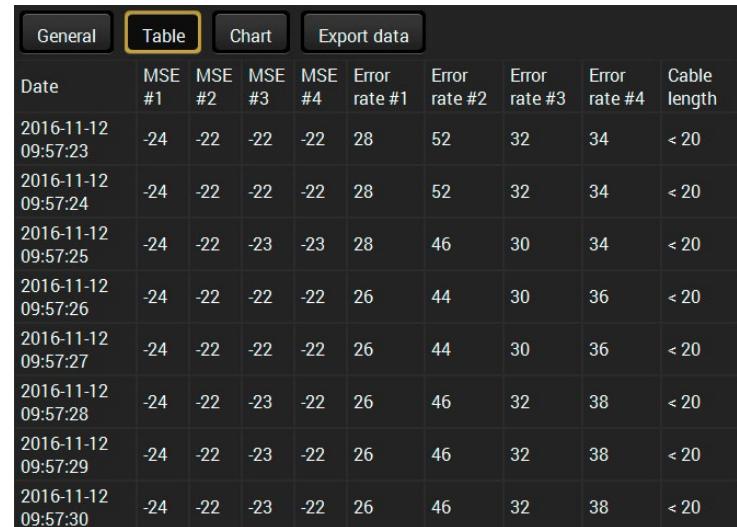

Date	MSE #1	MSE #2	MSE #3	MSE #4	Error rate #1	Error rate #2	Error rate #3	Error rate #4	Cable length
2016-11-12 09:57:23	-24	-22	-22	-22	28	52	32	34	< 20
2016-11-12 09:57:24	-24	-22	-22	-22	28	52	32	34	< 20
2016-11-12 09:57:25	-24	-22	-23	-23	28	46	30	34	< 20
2016-11-12 09:57:26	-24	-22	-22	-22	26	44	30	36	< 20
2016-11-12 09:57:27	-24	-22	-22	-22	26	44	30	36	< 20
2016-11-12 09:57:28	-24	-22	-23	-22	26	46	32	38	< 20
2016-11-12 09:57:29	-24	-22	-23	-22	26	46	32	38	< 20
2016-11-12 09:57:30	-24	-22	-23	-22	26	46	32	38	< 20

Table view of cable diagnostics


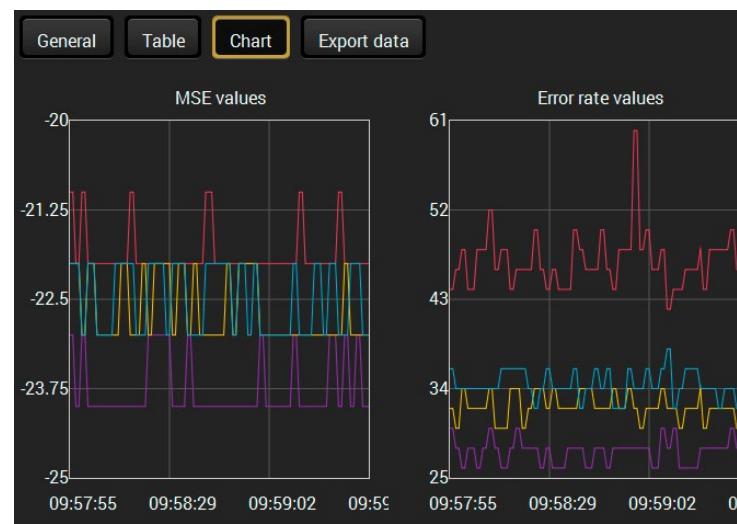


Chart view of cable diagnostics

#framedetector #cablediagnostics

5.7. EDID Menu

Advanced EDID Management can be accessed by selecting the EDID menu. There are two panels: the left one contains Source EDIDs, the right one contains Destination places where the EDIDs can be emulated or copied.

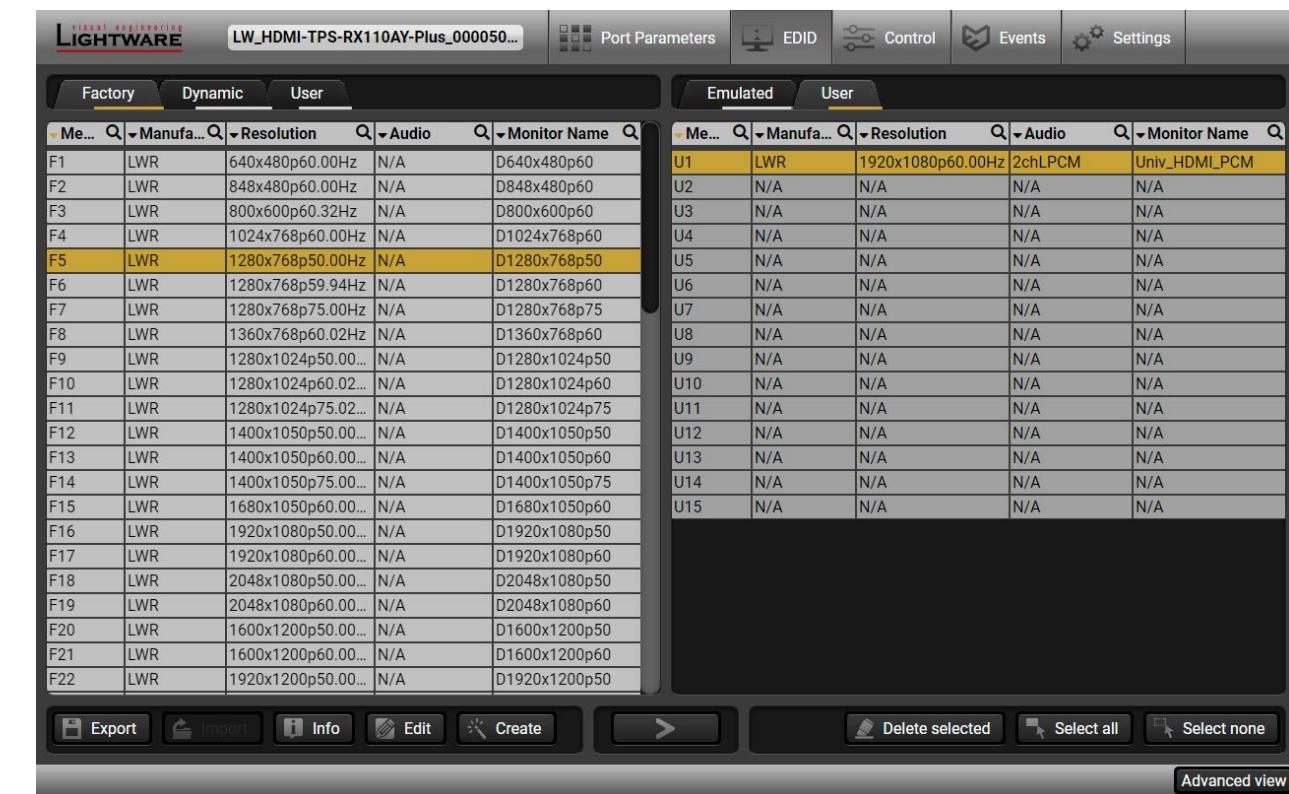

The EDID menu interface has two main panels. The left panel, titled 'Source', lists 'Factory', 'Dynamic', and 'User' EDID entries. The right panel, titled 'Destination', lists 'Emulated' and 'User' entries. Both panels include search and filter functions. At the bottom are control buttons for exporting, importing, and managing memory places.

EDID menu

Control Buttons

 Export	Exporting an EDID (save to a file)	 >	Transfer button: executing EDID emulation or copying
 Import	Importing an EDID (load from a file)	 Delete selected	Deleting EDID (from User memory)
 Info	Display EDID Summary window	 Select all	Selecting all memory places in the right panel
 Edit	Opening Advanced EDID Editor with the selected EDID	 Select none	Selecting none of the memory places in the right panel
 Create	Opening Easy EDID Creator	#edid	

5.7.1. EDID Operations

Changing Emulated EDID #edid

- Step 1. Choose the desired **EDID list** on the source panel and select an **EDID**.
- Step 2. Press the **Emulated** button on the top of the Destination panel.
- Step 3. Select the desired **port** on the right panel (one or more ports can be selected); the EDID(s) will be highlighted in yellow.
- Step 4. Press the **Transfer** button to change the emulated EDID.

Learning an EDID

The process is the same as changing the emulated EDID; the only difference is the Destination panel: press the **User** button. Thus, one or more EDIDs can be copied into the user memory either from the factory memory or from a connected sink (Dynamic).

Exporting an EDID

ATTENTION! This function is working on Windows and macOS operating systems and under Firefox or Chrome web browsers only.

Source EDID can be downloaded as a file (*.bin, *.dat or *.edid) to the computer.

- Step 1. Select the desired **EDID** from the Source panel (line will be highlighted in yellow).
- Step 2. Press the **Export** button to open the dialog box and save the file to the computer.

Importing an EDID

Previously saved EDID (*.bin, *.dat or *.edid file) can be uploaded to the user memory:

Step 1. Press the **User** button on the top of the Source panel and select a **memory** slot.

Step 2. Press the **Import** button below the Source panel.

Step 3. Browse the file in the opening window, then press the **Open** button. The browsed EDID is imported into the selected User memory.

ATTENTION! The imported EDID overwrites the selected memory place even if it is not empty.

Deleting EDID(s)

The EDID(s) from User memory can be deleted as follows:

- Step 1. Press the **User** button on the top of the Destination panel.
- Step 2. Select the desired **memory** slot(s); one or more can be selected ("Select All" and "Select None" buttons can be used). The EDID(s) will be highlighted in yellow.
- Step 3. Press the **Delete selected** button to delete the EDID(s).



5.7.2. EDID Summary Window

Select an EDID from the Source panel and press the **Info** button to display the EDID summary.



General	
Power Management	
Gamma / Colors	
Established Timings	
Standard Timings	
Preferred Timing Mode	
2nd Descriptor Field	
3rd Descriptor Field	
4th Descriptor Field	
CEA General	
CEA Video	
CEA Audio	
CEA Speaker Allocation	
CEA HDMI VSDB	
CEA HDMI Forum VSDB	
CEA YCbCr 4:2:0 VDB	
CEA YCbCr 4:2:0 Capability Map	
CEA Colorimetry	
CEA High Dynamic Range	
CEA Detailed Timing Descriptors	
DisplayID General	
DisplayID Product ID	
DisplayID Type I Timing #1	
DisplayID Type I Timing #2	
DisplayID Type I Timing #3	
DisplayID Tiled Display Topology	
DisplayID Unknown Blocks	



General	
EDID version:	1
EDID revision:	3
Manufacturer ID:	LWR (Lightware Visual Engineering)
Product ID:	0000
Monitor serial number:	Not present
Year of manufacture:	2010
Week of manufacture:	Not Used
Signal interface:	Digital
Separate Sync H&V:	-
Composite sync on H:	-
Sync on green:	-
Serration on VS:	-
Color depth:	Undefined
Interface standard:	Not defined
Color spaces:	RGB 4:4:4
Aspect ratio:	0
Display size:	0 cm X 0 cm

EDID summary window

5.7.3. Editing an EDID

Select an EDID from the Source panel and press the **Edit** button to display the Advanced EDID Editor window. The editor can read and write all descriptors that are defined in the standards, including the additional CEA extensions. Any EDID from the device's memory or a saved EDID file can be loaded into the editor. The software resolves the raw EDID and displays it as readable information to the user. All descriptors can be edited, saved in an EDID file, or uploaded to the User memory. For more details about EDID Editor, please visit our website (www.lightware.com) and download the **EDID Editor Application note**.


#edid

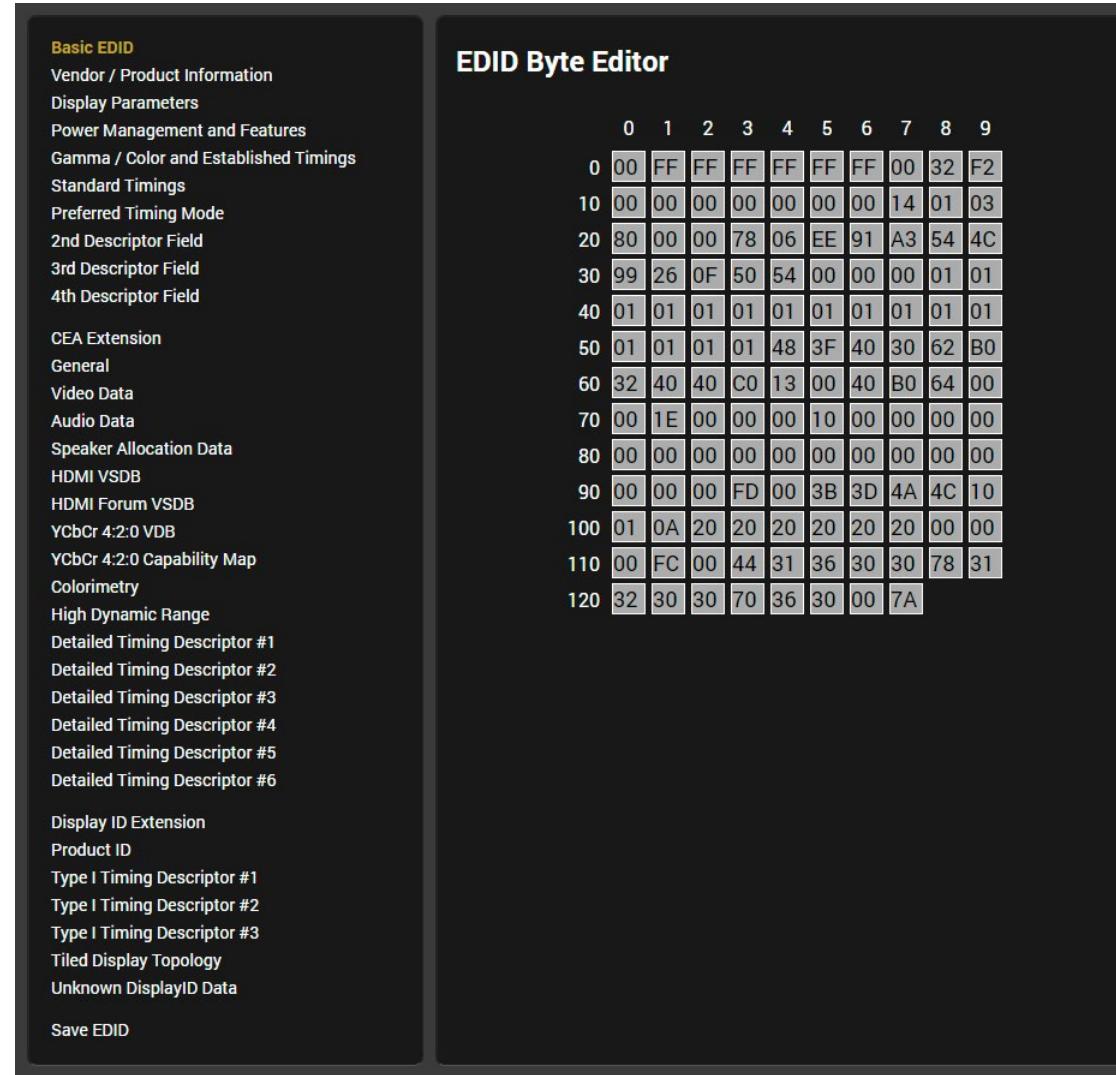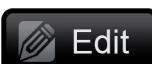

EDID Editor window

5.7.4. Creating an EDID - Easy EDID Creator


Since the Advanced EDID Editor mentioned above needs more complex knowledge about EDID, Lightware introduced a wizard-like interface for fast and easy EDID creation. With Easy EDID Creator, it is possible to create custom EDIDs in four simple steps. By clicking on the **Create** button below the Source panel, the **Easy EDID Creator** is opened in a new window. For more details about EDID Editor, please visit our website (www.lightware.com) and download the **EDID Editor Application note**.

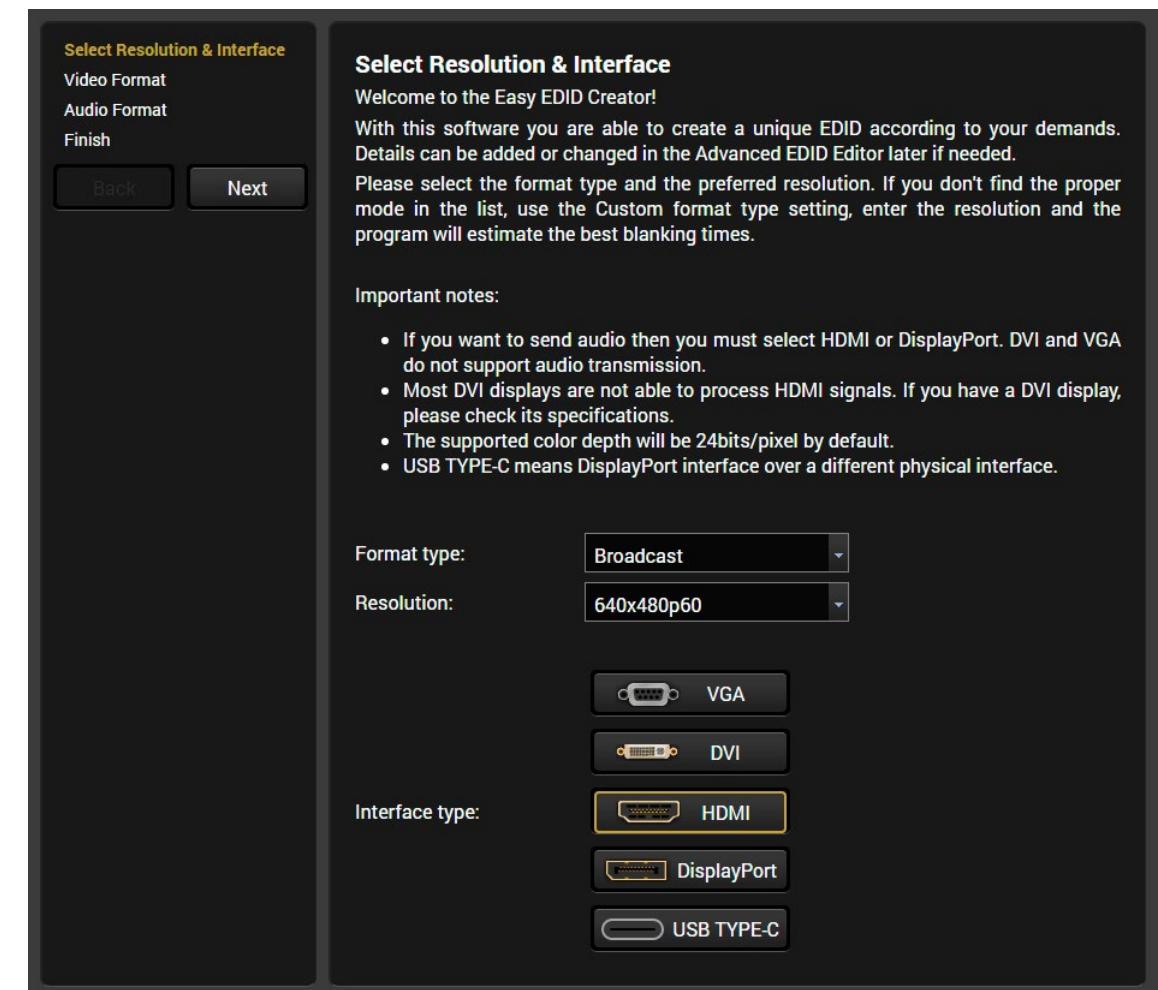

EDID Creator Window

5.7.5. Control Menu

5.7.6. RS-232

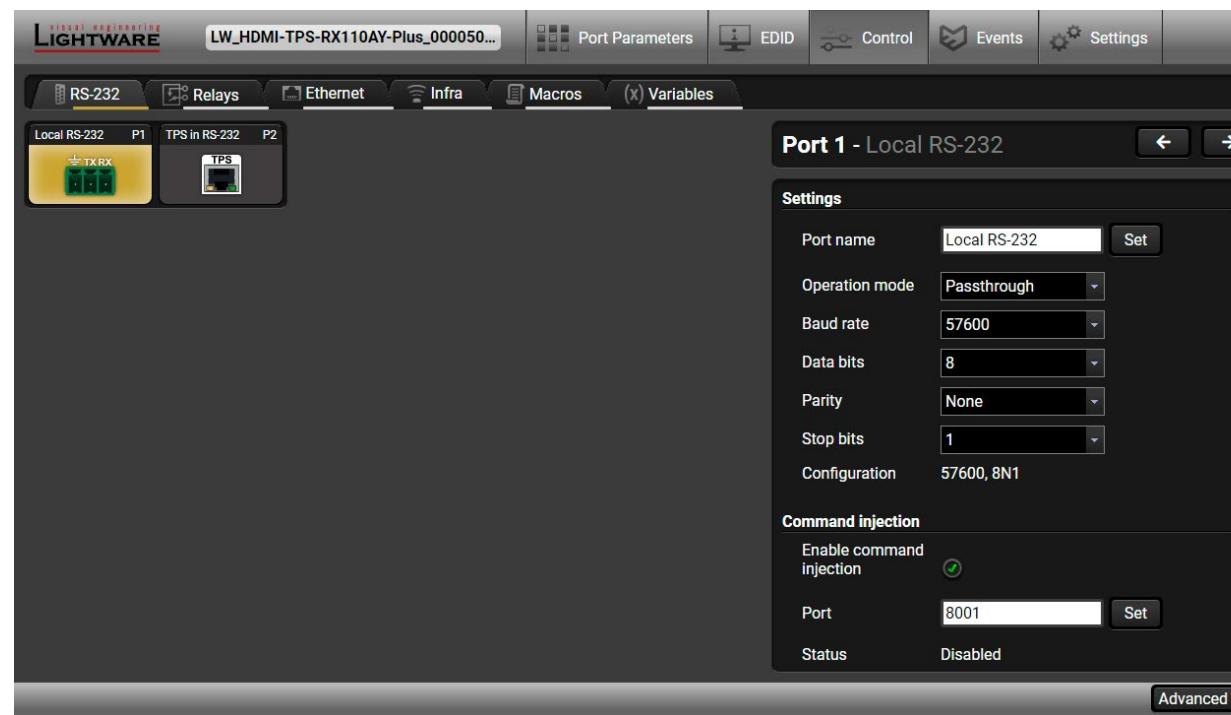

RS-232 tab in Control menu

The following settings and functions are available (both on local and TPS serial ports):

- Operation mode: Pass-through, Control, or Command Injection (for more details about serial interface modes, see the [Serial Interface](#) section);
- Baud rate: 4800, 7200, 9600, 14400, 19200, 38400, 57600, 115200;
- Data bits: 8 or 9;
- Parity: None, Odd, or Even;
- Stop bits: 1, 1.5, or 2;
- Command injection: enable or disable;
- Command injection port number;
- Control protocol: LW2 or LW3;
- Message sending via serial port;
- Reloading factory defaults (see factory default settings in the [Factory Default Settings](#) section).

ATTENTION! Operation mode of the local and TPS serial ports can be set together only. It means if you set the local RS-232 port to Control mode, the TPS serial link will be changed to Control mode automatically as well.

ATTENTION! If the receiver is connected to a TPS2 output board of a matrix frame, the RS-232 configuration settings (baud rate, data bits, e.t.c.) will not be changeable on the receiver side.

Message Recognizer

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model.

The HDMI-TPS-RX110AY-Plus model can analyze and store the received serial data. For more information, see the [RS-232 Recognizer](#) section.

Check the **Enable message recognizer on this port** option to switch the recognizer on.

Delimiter sequence text box is for setting the delimiter string in hex format. When this string is detected in the incoming serial data, the device saves the RS-232 message data from the first bit until the delimiter (or the data between the two delimiters).

INFO: 0D0A is the factory default value, this is the hexadecimal code of Carriage Return and Line Feed. LW3 protocol commands end with this formula, so the default value support the recognition of the LW3 commands and the stored changes automatically.

If the **Timeout** is enabled and set, the received data is saved when the timeout has passed after the last received message.

The **Received messages** box shows the last received and stored message in Text (RECOGNIZER.Rx), Hex (RECOGNIZER.RxHex), and Hash (RECOGNIZER.Hash) format. The Hex and Hash contains the delimiter.


Press the **Clear** button to erase this storage.

Clicking on **Reload** restores the [Factory Default Settings](#) of the recognizer.

ATTENTION! The Message recognizer settings are mirrored on the Local and TPS in serial ports.

INFO: Message recognizer operates independently of the RS-232 mode.

#recognizer #rs232recognizer #rs-232recognizer

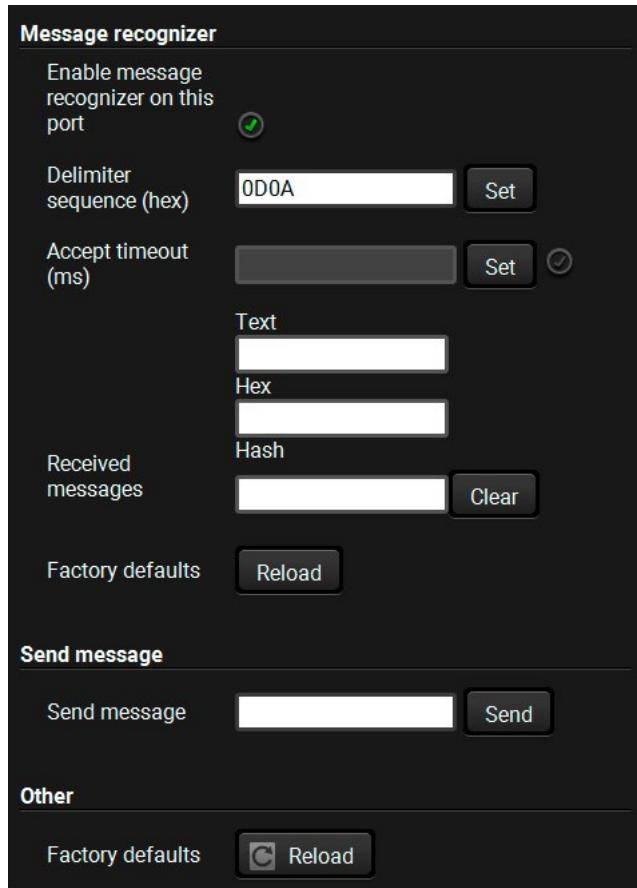

Configuration Example for the Message Recognizer

The detailed description below shows how to configure the message recognizer in the [RS-232 Recognizer](#) section.

When the HDMI-TPS-RX110AY-Plus has an active video signal, the switcher logs into the VC codec automatically. The signal presence triggers a bi-directional communication with the VC codec via RS-232:

Step 1. Turn on the recognizer: Enable it on the P1 serial port.

Step 2. Set the delimiter (in hex format). In this case, the delimiter character is ':', which is '3a' in hex format.

When the delimiter string is detected in the incoming serial data, the serial message is stored in string (in Rx and ActiveRx property), hex (in RxHex and ActiveHex property) and hash (in Hash and ActiveHash property) format. These stored contents can be set as a condition in the event manager.

... Password : **Login name** : ...

↓ ↓

Delimiter (hex format: 3A)
Stored string

INFO: The stored content is the incoming data that arrives **before** the delimiter or **between** the two delimiters.

Step 3. Set the Active timeout to 100. This property is responsible for erasing the temporary storage (ActiveRx, ActiveRxHex, ActiveHash) after the time has passed. In the example below it can be seen how the recognizer properties change during the communication:

▶ HDMI-TPS-RX110AY-Plus: PING

Rx	RxHex	Hash	ActiveRx	ActiveRxHex	ActiveHash

◀ VC codec: Login:

Rx	RxHex	Hash	ActiveRx	ActiveRxHex	ActiveHash
Login:	4C6F67696E3A	2D8A5E38	Login:	4C6F67696E3A	2D8A5E38

▶ HDMI-TPS-RX110AY-Plus: Admin

Active timeout has passed, so the values of the Active- prefixed properties are deleted.

Rx	RxHex	Hash	ActiveRx	ActiveRxHex	ActiveHash
Login:	4C6F67696E3A	2D8A5E38			

◀ VC codec: Password:


Rx	RxHex	Hash	ActiveRx	ActiveRxHex	ActiveHash
Password:	50617373776F72643A	79059B26	Password:	50617373776F72643A	79059B26

▶ HDMI-TPS-RX110AY-Plus: Admin

Active timeout has passed, so the values of the Active- prefixed properties are deleted.

Rx	RxHex	Hash	ActiveRx	ActiveRxHex	ActiveHash
Password:	50617373776F72643A	79059B26			

5.7.7. Relays

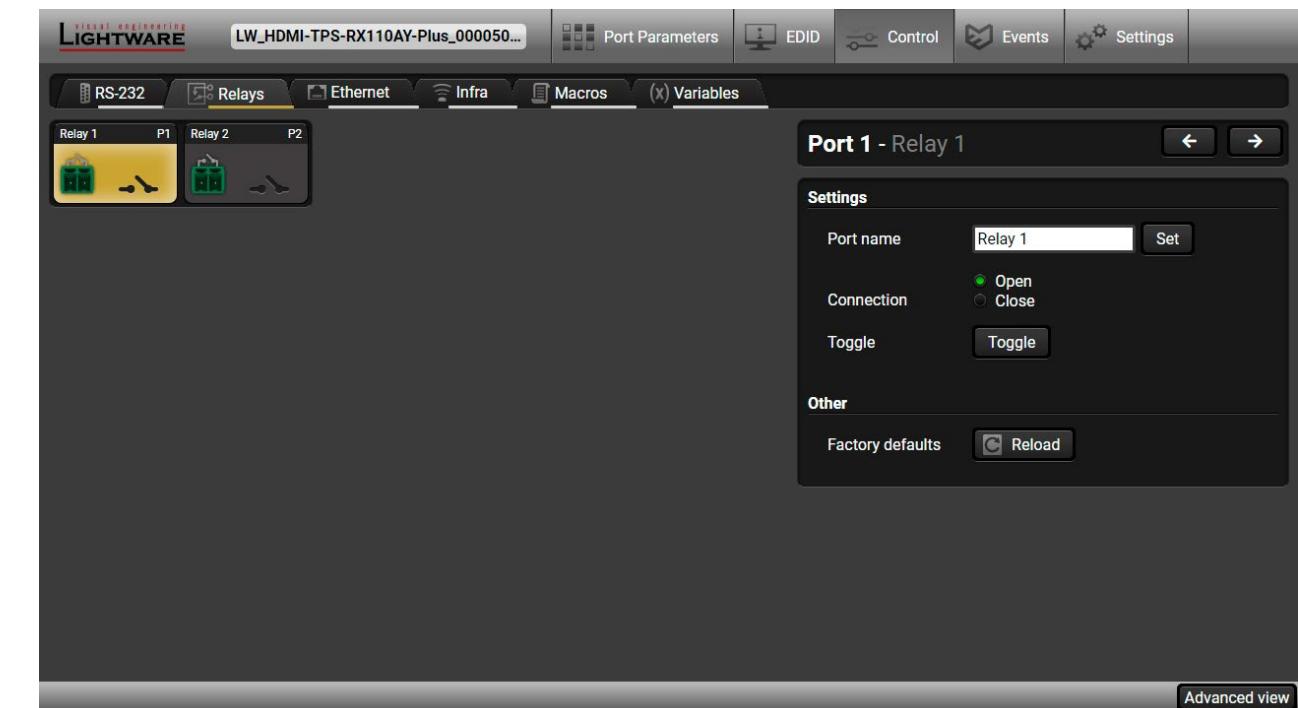

Relays tab in Control menu


Two relays are built into the HDMI-TPS-RX110AY receiver. The following settings are available for both relay ports:

- Connection state: Open or Close;
- Toggle;
- Reloading factory defaults (see factory default settings in the [Factory Default Settings](#) section).

#relay

5.7.8. Ethernet

Ports

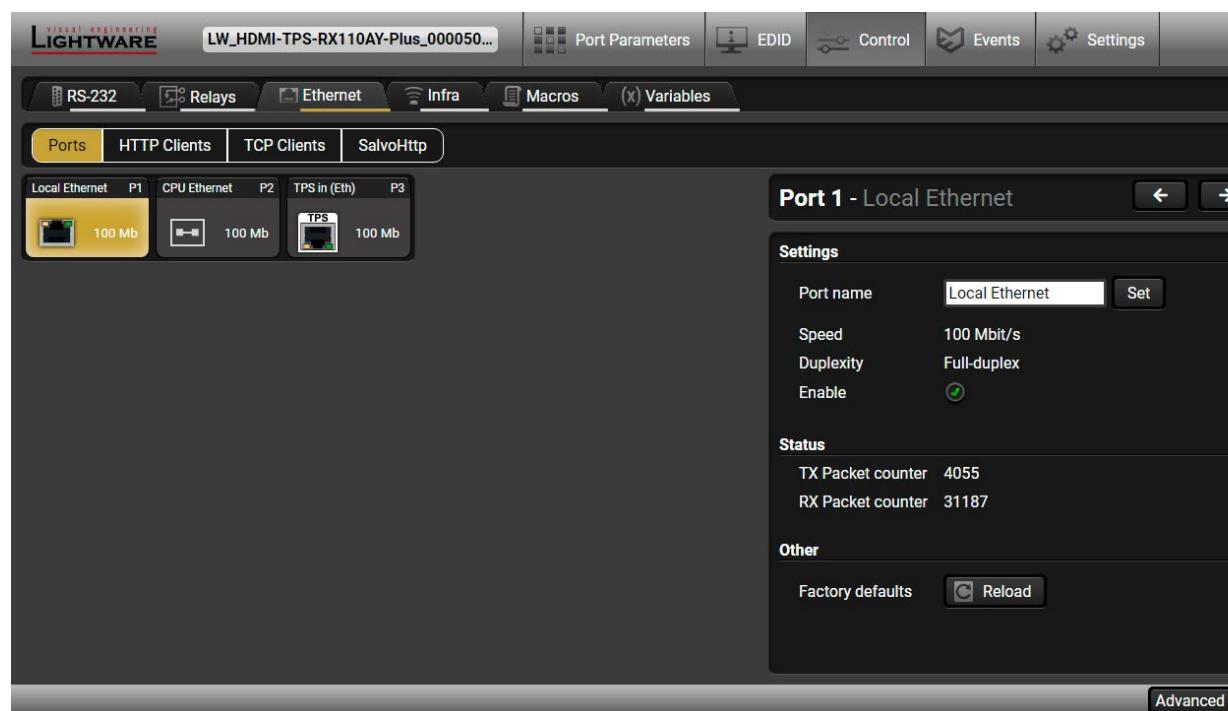

Ethernet Tab in the Control Menu

Two ports are displayed in the Ethernet settings: Local, CPU, and TPS. You can check the status of the Ethernet line by each port: the speed and the duplexity of the connection.

The following settings are available for the local port:

- Enable / disable the port;
- Reloading factory defaults.

ATTENTION! If the Ethernet port is set to disabled, this may break the connection with the device.

INFO: The CPU Ethernet port cannot be disabled.


HTTP Clients (HTTP Post and Put Message Sending)

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

ATTENTION! This feature means posting or putting **HTTP** messages from the Lightware device to another device. Encrypted transmission (**HTTPS**) is not supported.

The HTTP Clients tab allows sending HTTP post and put messages to the desired server IP:port no. Control commands can be sent to the target device, but it is not suitable for processing the response (e.g. querying a parameter/status), since the response is just an acknowledge (ACK). [#http](#)

The feature is available also via LW3 commands, see the [HTTP Messaging](#) section.

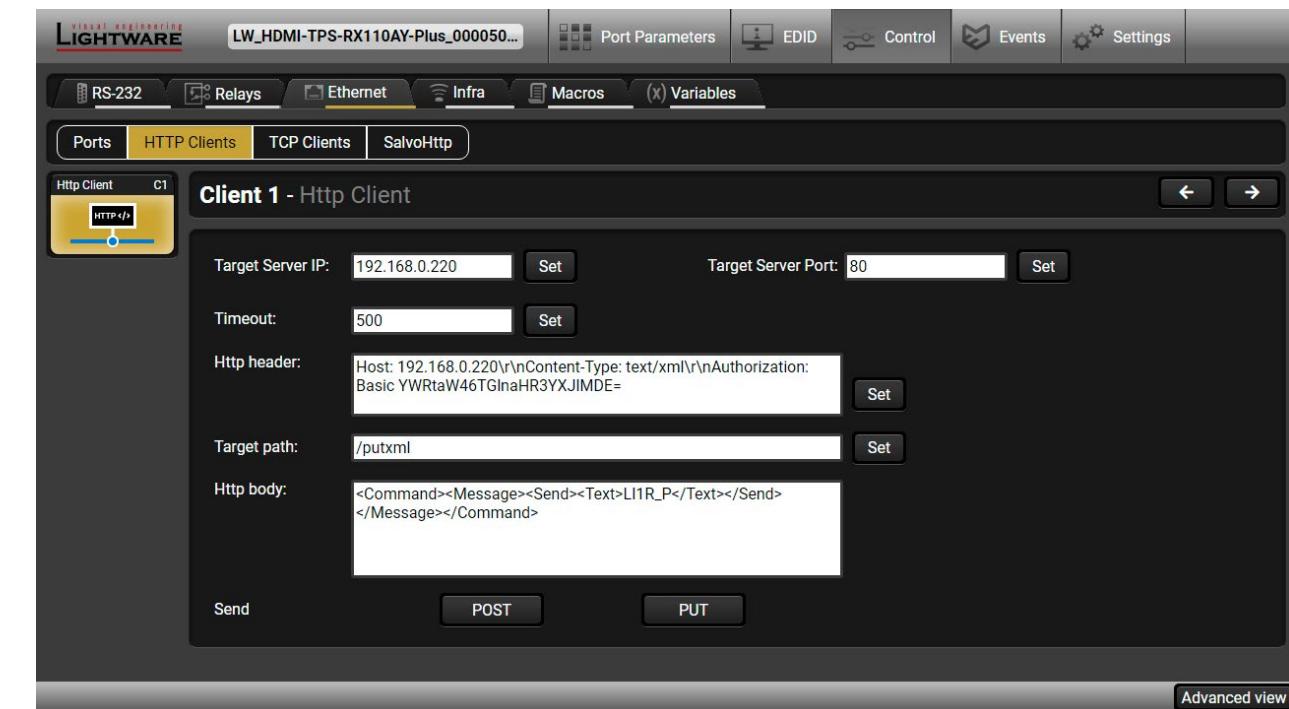


HTTP Clients tab in the Control/Ethernet menu

When you press the enter in the **Http header** or **Http body** text box, the \r\n is added automatically.

TCP Clients (TCP Message Recognizer)

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

This tab is the preparing and monitoring interface for the TCP recognizer, which may trigger Event Manager Actions. A simple example can be seen in the [TCP Recognizer](#) section.

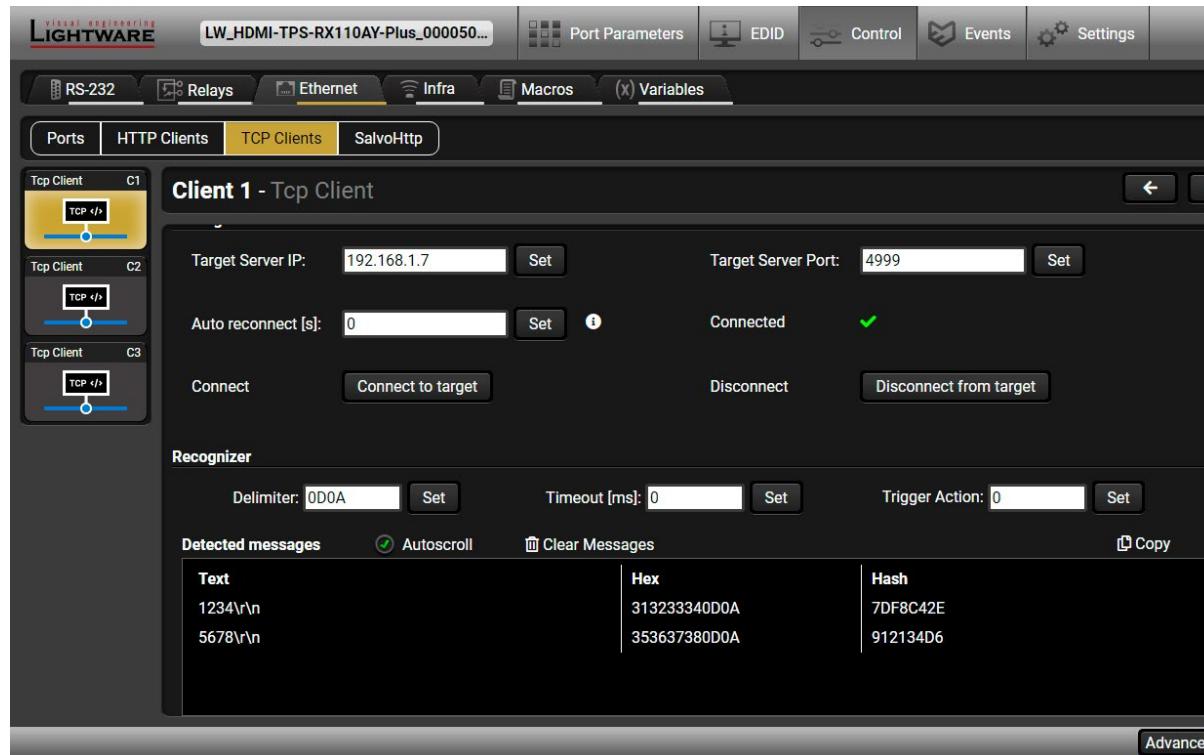

TCP Clients tab in the Control/Ethernet menu

The target device has to be set as a TCP client (three clients can be set):

Step 1. Type and set the **Target IP address**.

Step 2. Type and set the **TCP port number**.

Step 3. Make sure the same **TCP port is opened** and **Enabled** in the target device.

Step 4. Press the **Connect to target** button.

Step 5. Make the target device send a message and check it in the Detected messages list.

- **Auto reconnect:** Numeric value; sets the time (seconds) between the automatic reconnections.
- **Delimiter:** When the delimiter hex string is detected in the incoming data, the message is saved from the first bit until the delimiter (or the data between the two delimiters).
- **Timeout:** If there is no response within the set time interval (milliseconds), the data that is received from the last delimiter will be accepted.
- **Trigger Action:** If data is received that is closed with the recognized delimiter, an Action can be run. Type the number of the Event (without the letter 'E'). `#tcprecognizer #message`

SalvoHttp Status Page (Receiving HTTP Message)


DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

ATTENTION! This feature means sending **HTTP** messages from an external device to the Lightware device. Encrypted transmission (**HTTPS**) is not supported.

In this case, a batch of commands can be sent over HTTP to the Lightware device for processing. Post the commands to the `<IP_address>/protocol.lw3` address, and the commands are processed immediately and sequentially. `#http`

Control commands can be sent to the Lightware device, but it is not suitable for querying a parameter/status, since the LW3 responses are not sent back to the sender.

ATTENTION! If the [Cleartext Login \(Login Settings\)](#) is enabled in the device, the login has to be the first command. No commands will be processed without a successful login. See the syntax in the [Cleartext Login Protection](#) section.

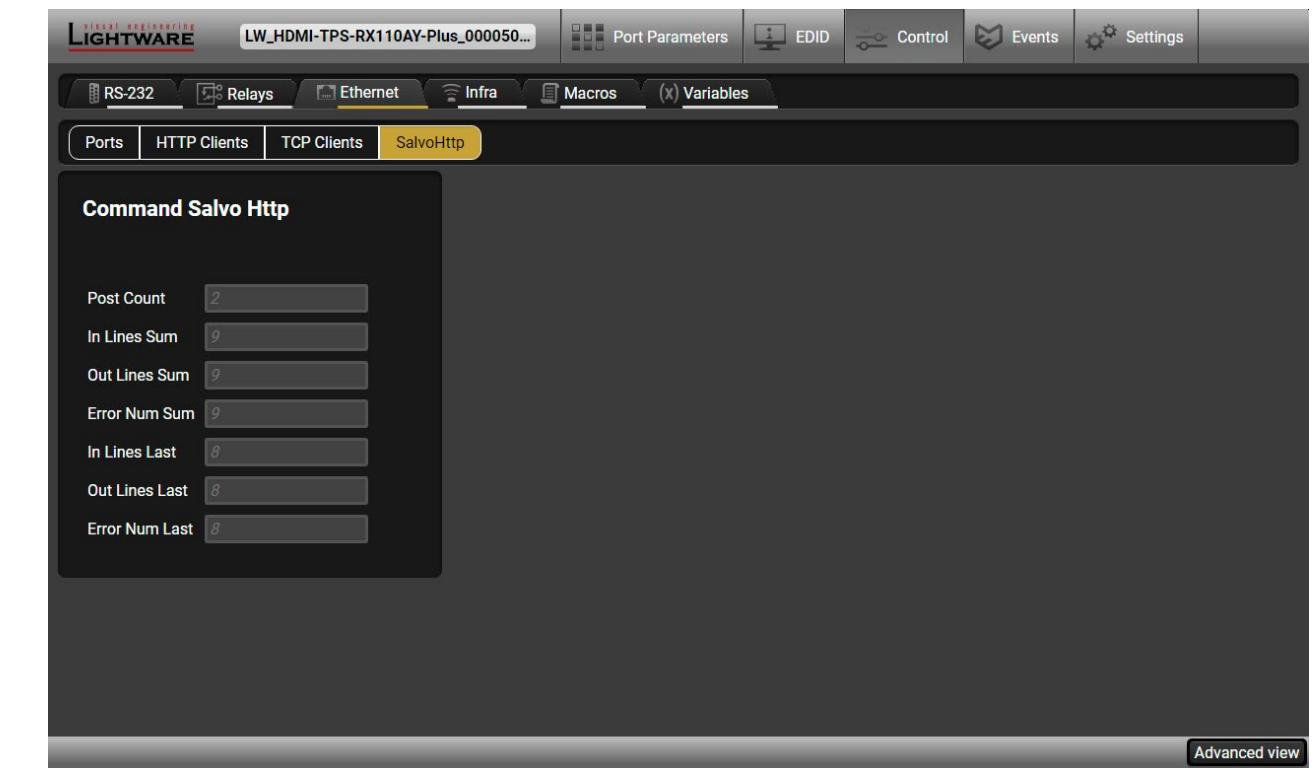

SalvoHttp tab in the Control/Ethernet menu


5.7.9. Infra

ATTENTION! The device has no built-in Infrared receiver and transmitter. For the complete usage attach an IR emitter unit to the IR OUT and an IR detector unit to the IR IN connectors.

Infrared (IR) receiver and transmitter options can be found on this tab. There are three submenus available under it: **IR codes**, **Ports**, and **Clear all IR codes**.

IR Codes

The user can set the name of the IR code, the fingerprint (hash), and the repeat timeout in ms, and actions can also be ordered to each IR code.

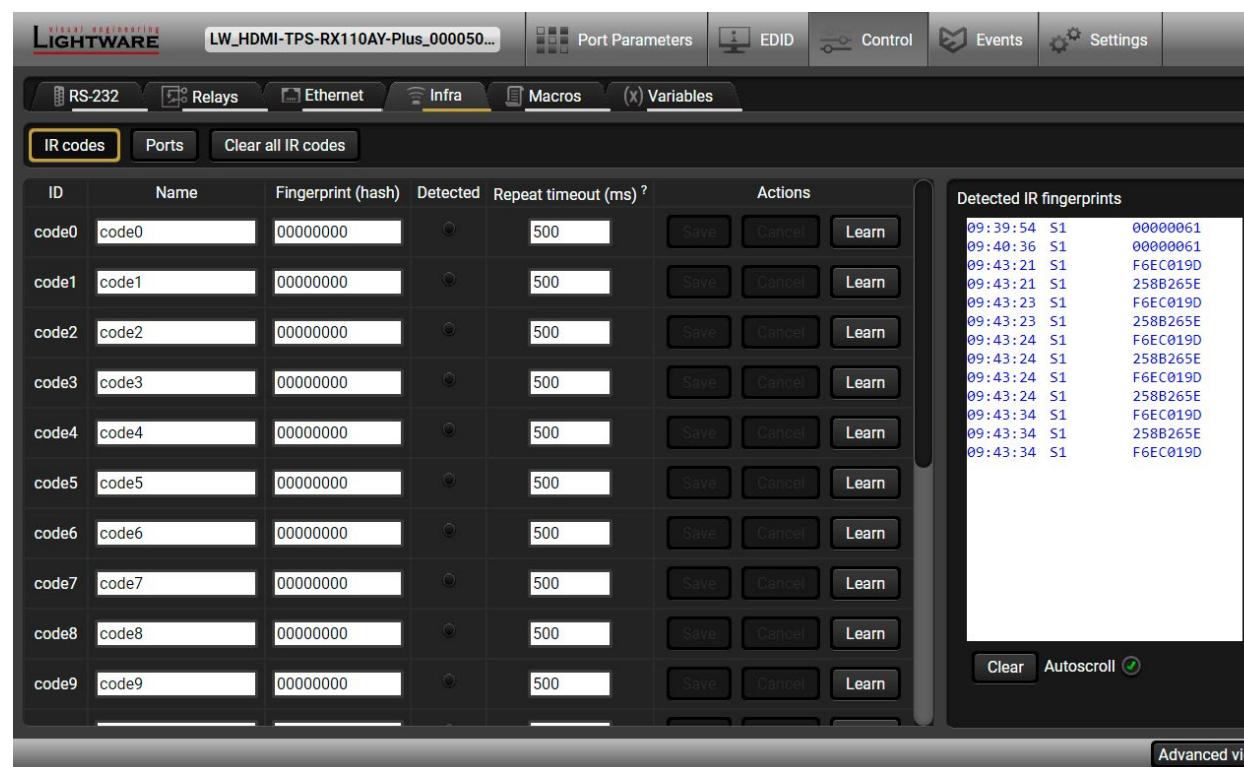

IR codes window in Control menu

Description	Function
ID	Code number.
Name	You can give an unique name for the desired code.
Fingerprint (hash)	Fingerprint code in pronto hexa format.
Detected	Indicator gives feedback whether the given IR code is detected currently.
Repeat timeout (ms)	You can set a timeout to avoid the involuntary code recurrence.
Actions	Action buttons for the desired IR code: Save : saving the fingerprint. Cancel : canceling the fingerprint. Learn : learning the detected IR code.
Detected IR fingerprints	You can check the detected IR codes in this panel. Pressing the Clear button deletes all current fingerprints and automatic scrolling can be switched on or off by checking the Autoscroll option.

20 fingerprints can be stored in the device at the same time. Each of them can be ordered to an action in Event Manager. For more details about events, see the [Event Manager](#) section.

Learning IR Codes

- Step 1.** Connect an IR detector unit to the IR IN port of the receiver.
- Step 2.** Click on the **Learn** button.
- Step 3.** Turn the remote controller to the IR detector. A pop-up window appears in LDC - press your remote button to learn.
- Step 4.** Once the code is received, a new window pops up in LDC - learning completed. Click on **OK** to continue.
- Step 5.** Optionally type a unique name for the code in the **Name** text box. The default name is **code#**, e.g. **code0**.

#infra #infrared

Ports Section for the HDMI-TPS-RX110AY Model

User can set the name and command injection port for each source and destination. For more details about the IR interface, see the [IR Interface](#) section.

ID	Name	Command injection port	Actions
Source1	IR in	9001	Save Cancel
Destination1	IR out	9002	Save Cancel
Source2	TPS out IR in	9003	Save Cancel
Destination2	TPS out IR out	9004	Save Cancel

Infra tab - Ports window

Clear all IR codes

Clicking on the button deletes all stored IR fingerprints.

Ports Section for the HDMI-TPS-RX110AY-Plus Model

IR in	S1	TPS out IR in	S2	IR out	D1	TPS out IR out	D2
-------	----	---------------	----	--------	----	----------------	----

Source 1 - IR in

Settings

- Port name: IR in
- Enable command injection:
- Command injection port: 9001
- Actual command injection port: 9001

Other

- Factory defaults
- Reload

Infra tab - Ports window for the HDMI-TPS-RX110AY-Plus model

The user can set the name and command injection port for each source and destination. For more details about the IR interface, see the [IR Interface](#) section.

The following settings are also available:

- Port name;
- Enable / disable the port;
- Port number;
- Enable / disable command injection;
- Message sending function (little-endian pronto hex code). For more details, see the next section;
- Reload [Factory Default Settings](#).

Sending pronto hex codes (Little-endian format)

Copy the raw, little endian-format IR code into the **Send Pronto Hex** entry field and click on the **Send** button.

The maximum length of the code can be 765 characters (765 bytes). For more details about the accepted IR code formats, see the [Sending Pronto Hex Codes in Little-endian Format via IR Port](#) section.

This entry field does not store the code. The code can be saved into an action in the event manager with the following parameters: **Category**: Infra; **Expression**: Send pronto hex; **Port**: D1; **Pronto hex**: <custom_code>

In the Event Manager, the maximum length of the code can be 184 characters (184 bytes). `#message`

INFO: Sending bigger endian-format code is available with an LW3 protocol command, see the [Sending Pronto Hex Codes in Big-endian Format via IR Port](#) section.

Clear all IR codes

Clicking on the button deletes all stored IR fingerprints.

5.7.10. Macros

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

DEFINITION: A macro is a batch of pre-defined commands stored in the device. `#macro`

You can create your custom macros in a file, upload them to the device and run at any time. The number of the macros depends on the device type, the device can handle up to 50 macros.

Important Notes about Macros

- The macros are stored in the internal device presets.
- The commands of a macro are executed sequentially (even if error happens at a command).
- Macros allow long commands, which is suitable for e.g. infra code sending.
- Macros cannot be edited in the device.
- Macros are not saved when backup is created. See the [Saving the Macros](#) section.

Macro File Structure

Format:

```
;<preset_name>
;Begin <macro1_name>
<LW3_commands>
;End <macro1_name>
;Begin <macro2_name>
<LW3_commands>
;End <macro2_name>
```

Example:

```
;myDeviceMacros
;Begin myMacro1
CALL /MEDIA/VIDEO/XP:unmuteSource(I3)
CALL /MEDIA/VIDEO/XP:switch(I3:01;I3:02)
;End myMacro1
;Begin myMacro2
CALL /MEDIA/VIDEO/XP:unmuteSource(I4)
CALL /MEDIA/VIDEO/XP:switch(I4:01;I4:02)
;End myMacro2
```

`<preset_name>`: it will be displayed in the Settings/Backup submenu (device configurations list).

`<macro_name>`: each Macro must have a unique name.

`<LW3_commands>`: LW3 SET and CALL commands. Syntax is not checked, error is not reported.

ATTENTION! If you use the same name for a new macro, the existing one will be deleted.

Open a simple text editor and save the file with 'LW3' extension.

Uploading New Macros into the Internal Device Configuration Preset

The uploading steps are the following:


Step 1. Create the **file** with macros according to the macro file structure and save it.

Step 2. Navigate to the **Settings/Backup** submenu.

Step 3. Select the device configuration **preset** at the bottom of the page.

Step 4. Press the **Upload** button, browse the LW3 file and press **Open**.

ATTENTION! The preset and the macros of the selected slot will be erased. If there is a macro with the same name already in the device, it will be removed and the new one will be available.

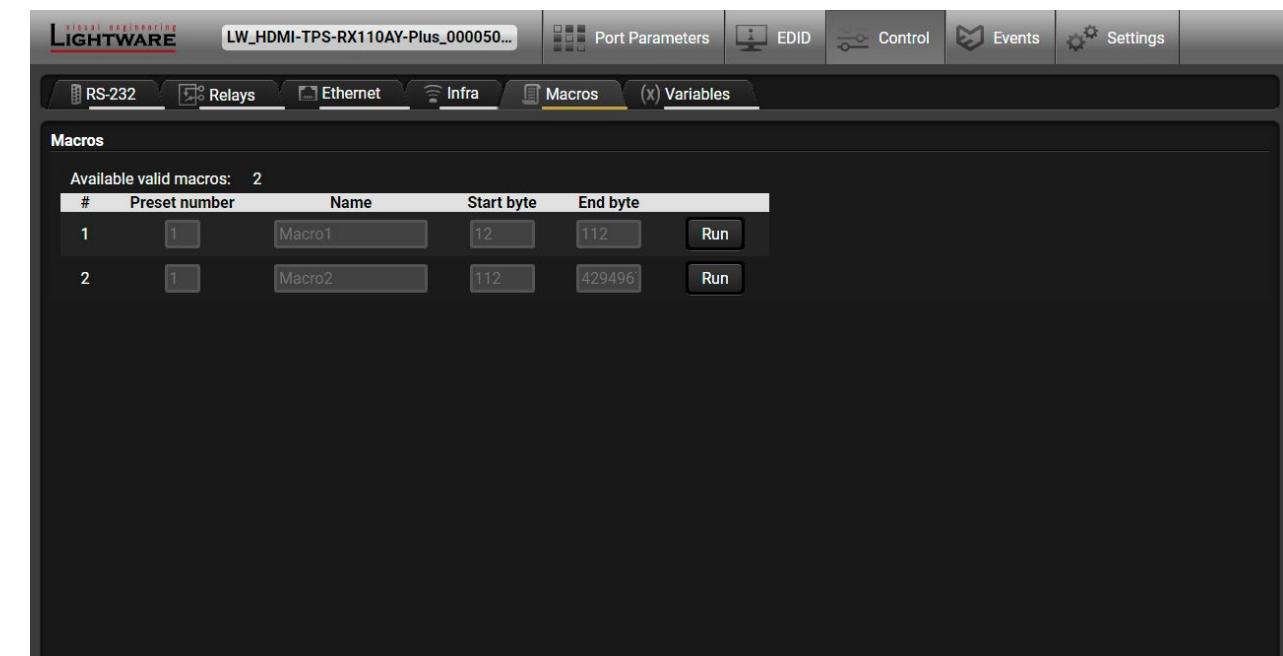

Discovered Macros in the device shown under Control/Macros submenu

Adding Macros by Preserving the Current Preset and Macros

If you follow the steps below, the existing macros of the selected preset will be preserved. But if there is a macro with the same name already in the device, it will be removed and the new will be available.

Step 1. Navigate to the **Settings/Backup** submenu.

Step 2. Select the device configuration **preset** at the bottom of the page.

Step 3. Press the **Download** button and click on **Save** in the pop-up window.

Step 4. Open the **file** with a simple text editor and add the desired macros to the bottom of the commands between the `;Begin <macro_name>` and `;End <macro_name>` labels.

Step 5. Save the file and navigate to the **Settings/Backup** submenu.

Step 6. Select the device configuration **preset**.

Step 7. Press the **Upload** button, browse the LW3 file and press **Open**.

Saving the Macros

When you make a backup of the device, the macros are not saved in that file. Sometimes, it is necessary to save the macros into a file and for example apply them in another (same type of) device. Follow these steps:

Step 1. Navigate to the **Settings/Backup** submenu.

Step 2. Select the device configuration **preset** at the bottom of the page.

Step 3. Press the **Download** button and click on **Save** in the pop-up window.


5.7.11. Variables

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

You can create custom variables in number or text format, which can be used in the Event Manager. The variables can have the following properties/methods: `#variables`

- Numeric (integer) type with min/max value setting, or string-type (determined automatically)
- Increment/step the numeric value,
- Value-dependent case operations,
- Reading and storing the values of LW3 properties into string or numeric variables.
- The max length of a string variable can be 15 characters. Numeric variable is defined between -2147483648 and 2147483647.

The defined variables are stored in a non-volatile memory and the value is kept in case of a reboot.

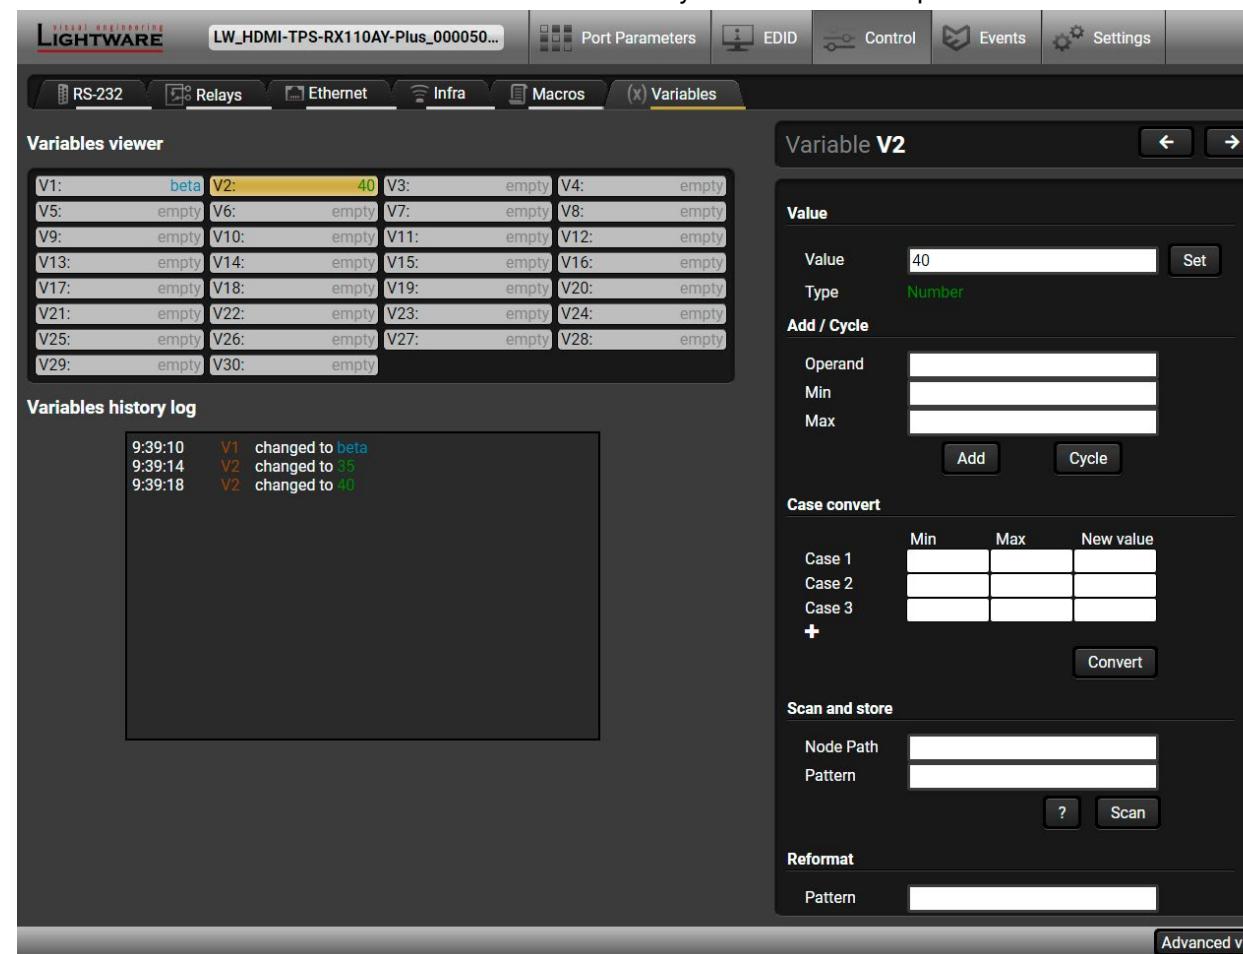

Variables tab in the Control menu

Value Section

You can set the value of the variable by the field. The type of the variable is determined automatically based on its value (numeric/string).

Add / Cycle Section


This section can be used for numeric types.

- **Operand:** the increment, the number that will be added to the current value (negative value is accepted).
- **Min (optional):** the lowest allowed value
- **Max (optional):** the highest allowed value
- **Add button:** the operand will be added to the current value. If the result would be higher than the max setting, the max will be valid; if the result would be lower than the min setting, the min will be valid
- **Cycle button:** the operand will be added to the current value. If the result would be beyond the limit (min/max), the value will be stepped to the other end of the interval.

Examples

The following shows the difference between the **Add** and the **Cycle** options. The input values are the same in both cases:

- **Min:** 1
- **Max:** 5
- **Operand:** 1

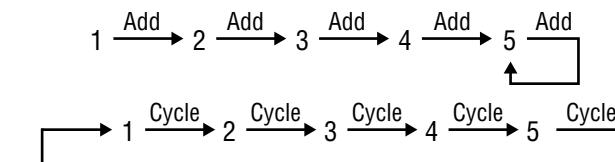

In **Add** case: when the value hits the limit (max), the operand will not increase the value any more.

In **Cycle** case: when the value hits the limit (max), the value will be stepped to the other end of the interval.

Similar case happens vice versa: when the operand is a negative number and the value hits the min value.

TIPS AND TRICKS: Set min=1, max=2, operand=1 and use the **cycle** method. Thus, the value of the variable can be toggled, which can be linked to a property with two states (e.g. low/high level) in the Event manager.

Case Convert

This tool can be used to change the value of a variable if it fits in any of the defined intervals. The check and the change will be performed only if you press the **Convert** button. A typical example is when two different ranges of values have to meet:

Incoming values: between 0 and 255 (e.g. the slider of a controller can have these values).

Outgoing values: between 0 and 100 (e.g. the controlled device accepts these values).

Defined cases:

	Min	Max	New value
Case 1	1	25	10
Case 2	26	50	20
Case 3	51	75	30
Case 4	76	100	40
Case 5	101	125	50
Case 6	126	150	60
Case 7	151	175	70
Case 8	176	200	80
Case 9	201	225	90
Case 10	226	255	100

Scan and Store

This tool can be used to get the value (or a part) of an LW3 property. The defined path will be checked according to the pattern and the result will be saved into the variable (number or string type). Press the **?** button to open the pattern options:

Pattern	Pattern description
%s	String of characters stopping at the first whitespace character
%<number>s	The next <number> of characters (string) stopping at the first whitespace
%c	One character
%<number>c	The next <number> of characters
%[<characters>]	Defined character set, specified between brackets
%[^<characters>]	Negated character set that will be skipped, specified between brackets
%*	Ignored part
<custom_text>	User-defined text

Examples

Node Path ¹	Property Value	Pattern ¹	Scanned result
/MANAGEMENT/STATUS.CpuTemperature	32 C; 0;75; 0;79;21;34;	%s	32
/MANAGEMENT/STATUS.CpuFirmware	1.3.0b0 r1	%12s	1.3.0b0
/MEDIA/VIDEO/I6.Resolution	640x480p60	%3c	640
/MEDIA/UART/P1.Rs232Configuration	57600, 8N1	%*[^], %s	8N1
/MEDIA/AUDIO/XP.SourcePortStatus	T000A;T000A;T0008;T000A;T000C	%*6c%5c	T000A
/MEDIA/VIDEO/I6.Resolution	640x480p60	%[^b]*%	640
/MANAGEMENT-NETWORK.HostName	lightware-00005031	lightware-	00005031

¹ defined by the user

Reformat

The value of the variable can be changed by adding text as prefix and/or postfix. Type **%s** to indicate where to insert the original value.

Example

- **Original value:** 3
- **Pattern:** input%s
- **Modified value:** input3


5.8. Event Manager

The feature means that the device can sense changes on its ports and is able to react according to the pre-defined settings. The development idea of the Event manager is based on users' feedbacks. In many cases internal events (such as signal present or HDCP active) are necessary for displaying, but it is not easy when the device is hard to access (e.g. built under the desk). For more details and examples about Event Manager, please visit our website (www.lightware.com) and download **Event Manager user's guide** in the Downloads section.

The Event manager can be configured to perform an action if a condition has been detected. E.g. the desired setup is that after a certain type of signal has been detected on I1 port, the port has to be switched to O1. The settings can be done via the LDC in the Events menu, or by LW3 protocol commands. The number of configurable events depends on the device that you are currently using.

Numerous new ideas and requests have been received in connection with the features and settings of the Event manager since the first release. Therefore, the user interface has been re-designed and many new functions have been implemented. The Event editor can be opened by pressing the Edit button at each Event.

There is a **grey bar** on the left of the Event panel in each line. If a condition and an action are set and the Event is enabled, the bar is displayed in **green**.

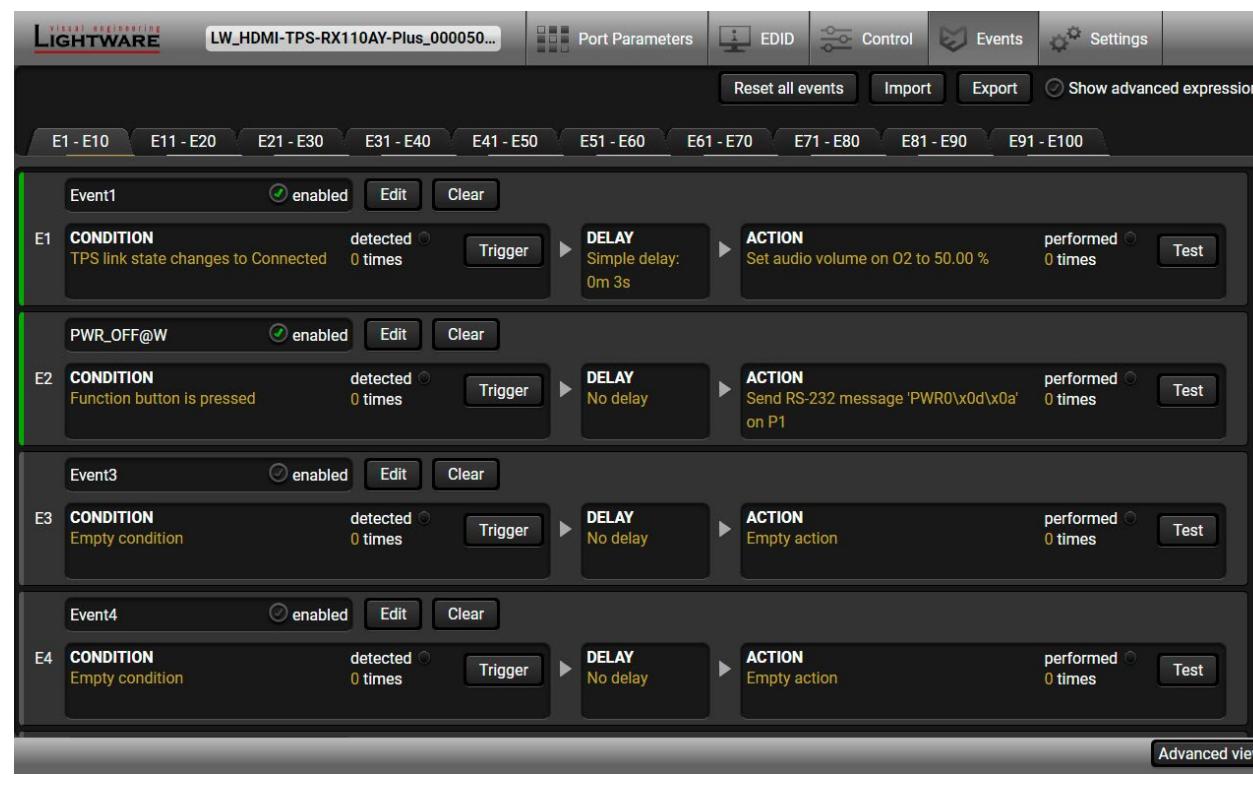


#eventmanager



5.8.1. The Event Editor

Press the **Edit** button in the desired Event line to open the Event editor window.

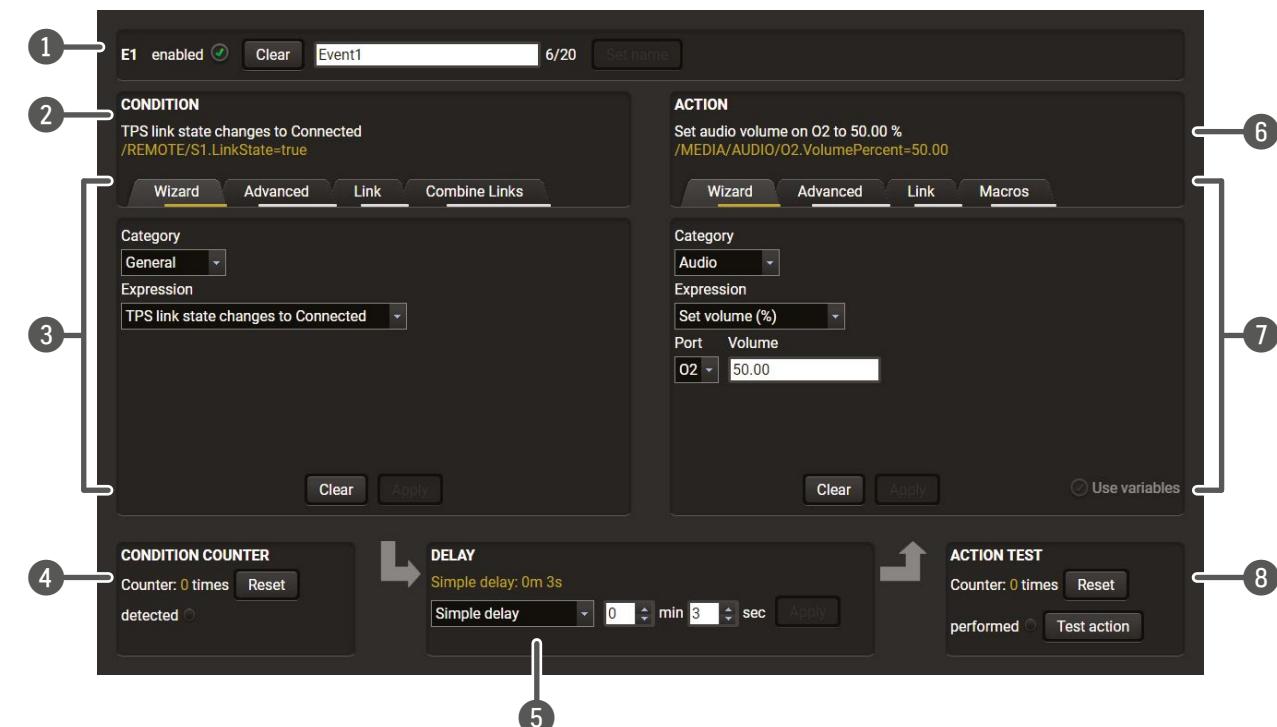

1 Event header

The name of the Event is displayed. Type the desired name and press the Set name button. The Event can be cleared by the Clear button. Use the tick mark to enable/disable the Event.

2 Condition header

If the condition is set, the description (white colored text) and the exact LW3 protocol expression (yellow colored text) can be seen. If the advanced mode was used the description is "Custom condition".

3 Condition panel

Different tools are available at the tabs for setting the desired Condition. The parameters and settings are displayed below the buttons.

4 Condition counter

The set condition can be tested to see the working method in the practice.

5 Delay settings

The action can be scheduled to follow the condition after the set time value.

6 Action header

If the action is set, the description (white colored text) and the exact LW3 protocol expression (yellow colored text) can be seen. If the advanced mode was used the description is "Custom action".

7 Action panel

Different tools are available at the tabs for setting the desired Condition. The parameters and settings are displayed below the buttons.

8 Action test

The set action can be tested to see the working method in the practice.

5.8.2. Create or Modify an Event

Wizard Mode

The wizard mode lists the most common conditions and actions, so the user does not have to look for LW3 nodes and properties.


Step 1. Click on the **Edit** button of the desired Event; the **Event editor** is displayed.

Step 2. The wizard mode is displayed as default. Select the desired **Category** first (e.g. Audio or Video).

Step 3. Select the desired **Expression** from the drop-down menu. If any other parameter is necessary to set, it is going to be displayed.

Step 4. Press the **Apply** button to store the settings of the Condition.

INFO: This mode is also available for setting the **Action**.

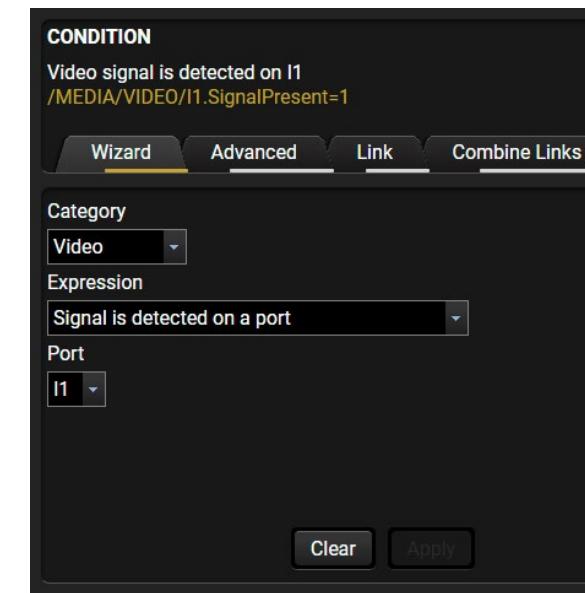

Advanced Mode

The goal of this mode is the same as of the wizard: set the properties and methods for conditions and actions. The difference is the number of the available and usable properties and methods of the LW3 protocol. Advanced mode allows almost all of it.


Step 1. Click on the **Edit** button of the desired Event; the **Event editor** is displayed.

Step 2. The wizard mode is the default, press the **Advanced** button. The LW3 protocol tree is displayed showing the list of the properties in the drop-down menu. Navigate to the desired node.

Step 3. Select the desired **Property** from the menu. The **manual** of the property is displayed below to help to select the necessary property and to set the value.

Step 4. Set the desired **value** and **operator**, then press the **Apply** button to store settings.

INFO: This mode is also available for setting the **Action**.

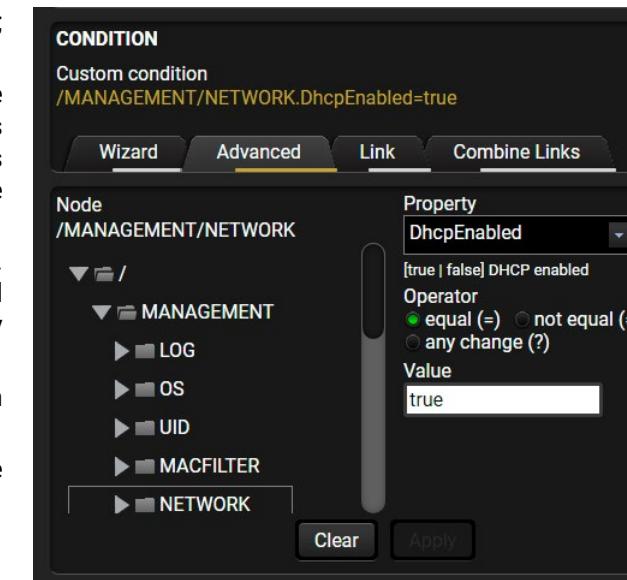

The Link Tool

The new interface allows creating more actions for the same condition. In that case, a condition can trigger more actions. To set such an Event, the **Link tool** has been introduced.


Step 1. Click on the **Edit** button of the desired Event; the **Event editor** is displayed.

Step 2. The wizard mode is displayed as default, press the **Link** button.

Step 3. All the saved Events are analyzed and the **conditions** are listed (it takes some seconds to finish). The **Show advanced expressions** option allows showing the exact path and set the value of the given property.

Step 4. Select the desired **Condition** and press the **Apply** button to store the settings.

INFO: This mode is also available for setting the **Action**.

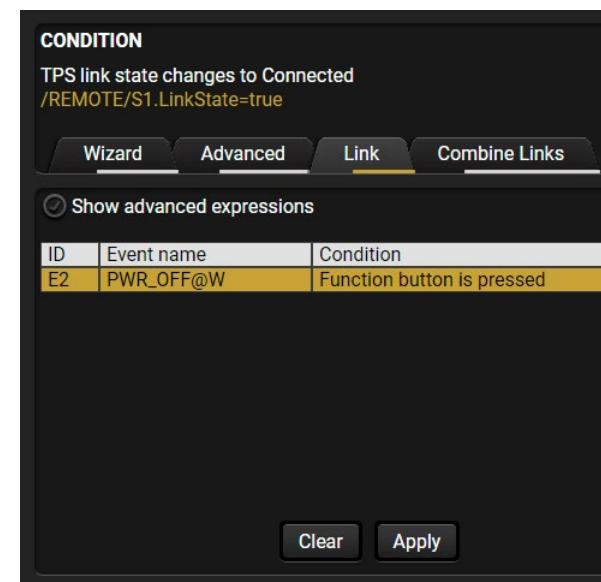

Combine Links

DIFFERENCE: This feature is available from FW package v1.5.0b3.

The first generation of the Event Manager is able to sense a change (one condition) but in some cases that is not enough. The practical experience has shown there is a need to examine more conditions as follows: if one of the set conditions becomes true (while the other conditions are fulfilled), then the set Action is launched. The **Combine Links** tool allows setting these Conditions. Follow the steps below:


Step 1. Create individual **Conditions** in separate Events.

Step 2. Create a new Event and navigate to the **Combine Links** tab in the Editor.

Step 3. Select up to four **Conditions** in the left panel.

Step 4. Set the desired **Action** (and do not forget to **enable** the Events).

INFO: This mode is available for setting the **Condition only**.

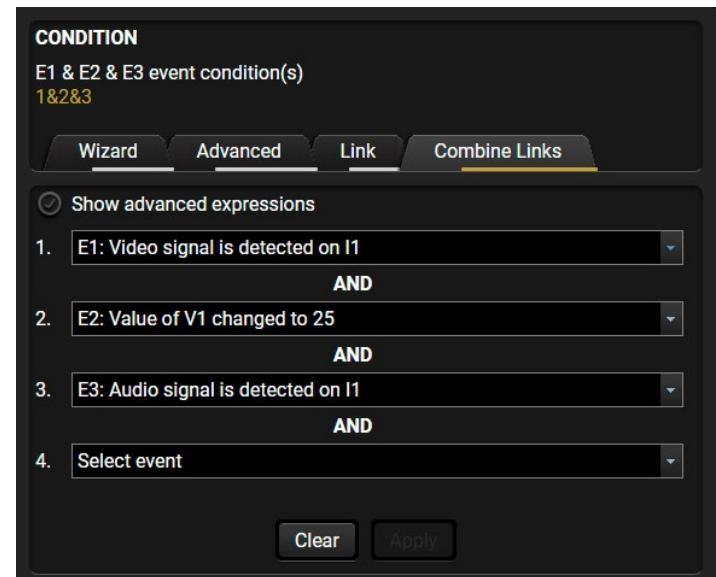

Linking a Macro (Action)

DIFFERENCE: This feature is available only in HDMI-TPS-RX110AY-Plus model from FW package v1.5.0b3.

Macros stored in the device can be run as Actions. Thus, a lot of commands can be run by using only one Event. The commands will be processed one-by-one after each other.

#macro


Step 1. Click on the **Edit** button of the desired Event; the **Event editor** is displayed.

Step 2. The wizard mode is the default, press the **Macros** button in the **Action** panel.

Step 3. Select the desired **Macro** from the list then press the **Apply** button to store settings.

If the **Use variables** option is enabled, you can link a variable by the \$ character. If you do so (e.g. \$1), the device will handle it as the V1 variable. You can send the value of the variable e.g. as a TCP message.

See more information about the Macro settings in the [Macros](#) section.

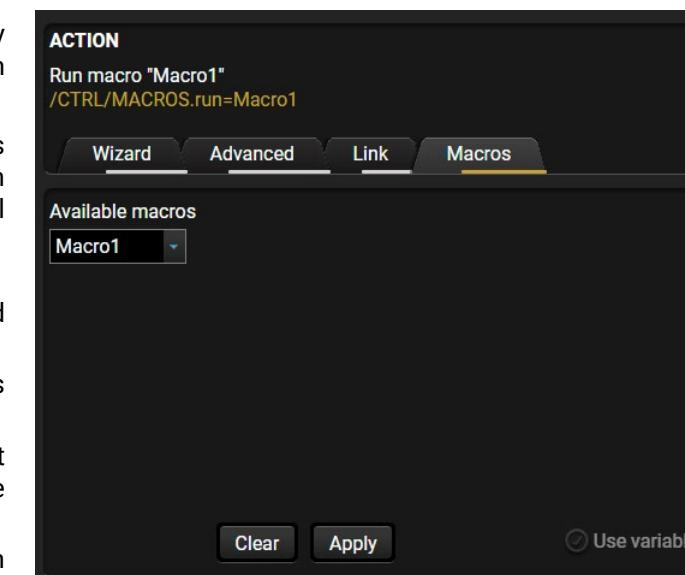

5.8.3. Special Tools and Accessories

The Name of the Event

The name of a port can be changed by typing the new name and clicking the **Set** button. The following characters are allowed when naming:

Letters (A-Z) and (a-z), numbers (0-9), special characters: hyphen (-), underscore (_), and space ().

Enable or Disable an Event

The set Event can be enabled or disabled in the Event list, or directly in the Event editor window by setting the **tick mark** beside the name.

Testing the Condition

When the desired Condition is arranged, the setting can be tested. The Event list and the Event editor contains a small panel that shows if the set condition is detected and how many times. The **Counter** can be reset by the button in Event editor. If the Condition is true, the **detected** mark turns green for two seconds and the **Counter** is increased.

Testing the Action


The method is the same as testing the Condition, but in this case, the Action can be triggered manually by pressing the **Test** button.

TIPS AND TRICKS: The Test button is also placed on the Action panel in the Event list. Thus, you can check the Actions without opening the Event editor.

Delay the Action

In most cases the Action is performed immediately after the Condition is detected. But sometimes a delay is necessary between the Condition and the Action. Therefore, the new Event manager contains the Delay panel which allows that feature with below settings:

- **No delay:** when the Condition is detected, the Action is launched.
- **Simple delay:** when the Condition is detected, the Action is launched after the set time interval.
- **Still true after:** when the Condition is detected, the Action is launched after the set time interval only if the Condition still exists.
- **Continuously true:** when the Condition is detected, the Action is launched after the set time interval only if the Condition has been existing continuously.

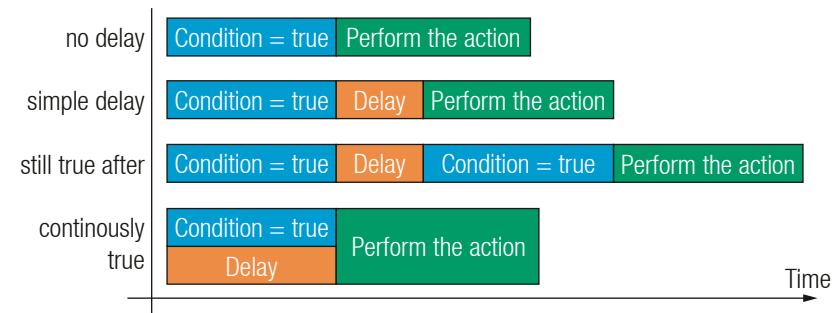

TIPS AND TRICKS: [Show advanced expressions](#) option is a useful tool when you look for the path or value of a property but just the expression is displayed. The option is available in the Event list window or when Link tool is used.

Variables

DIFFERENCE: This feature is available only in HDMI-TPS-RX110AY-Plus model from FW package v1.5.0b3.

The variables and the tools (shown in the Control/Variables tab) can be used in the Event Manager.

Condition Wizard #variables

The desired variable can be checked if its value is changed to a specific value.

Action Wizard

The value of a variable can be set/changed by the same methods as in the Control/Variables tab:


- Setting the exact value
- Increasing the value with/without limits
- Converting the value (e.g. interval change)
- Scanning and storing, or reformatting a property/parameter

If the **Use variables** option is enabled, you can link a variable by the \$ character. If you do so (e.g. \$1), the device will handle it as the V1 variable. You can send the value of the variable e.g. as a TCP message.

Condition Triggering

DIFFERENCE: This feature is available only in HDMI-TPS-RX110AY-Plus model from FW package v1.5.0b3.

This improvement works as if a condition is detected. When a complex control system is built, a Condition may trigger numerous Actions. A typical example is when a system is powered on and the 'ready-to-use' state has to be loaded. In this case, there could be many actions which are based on the same condition. In order to reduce the number of the commands, you can trigger one 'key' condition, which could start the whole process.

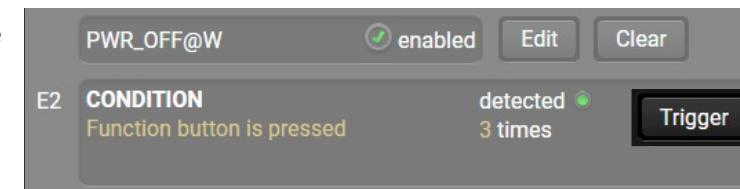

5.8.4. Clear One or More Event(s)

Clear an Event

Press the **Clear** button in the Event list or in the header section in the Event editor.

Clear all Events

When all the Events must be cleared press the **Load factory defaults** button above the Event list. You will be prompted to confirm the process.

5.8.5. Export and Import Events

The feature allows saving all the Events. The backup file can be uploaded to another HDMI-TPS-RX110AY receiver.

Export all the Events

Step 1. Press the **Export** button above the Event list.

Step 2. The Save as dialog box will appear. Set the desired folder and file name, then press the **Save** button.

The generated file is a simple text file which contains LW3 protocol commands. The file can be viewed by a simple text editor, e.g. Notepad.

ATTENTION! Editing the file is recommended only for expert users.

Import all the Events

Step 1. Press the **Import** button above the Event list.

Step 2. The Open dialog box will appear. Select the desired folder and file, then press the **Open** button.


5.8.6. Event Creating - Example

The following example shows you on a real-life situation how to set up an Event.

The Concept

The HDMI-TPS-RX110AY receiver is connected to a projector by the HDMI output port. The receiver is also connected to the projector by the RS-232 port and can send commands via the serial line.

The task is to turn on the projector when signal is detected on the HDMI output port.

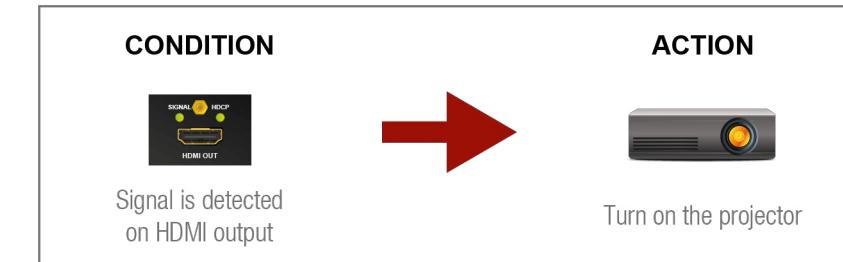

RS-232 Settings

Make sure that the serial line is established between the receiver and the projector. Check that the RS-232 settings of the receiver is set exactly the same which required for the projector: baud rate, data bits, parity, stop bits. The receiver needs to be set to: Control protocol: LW3; and RS-232 mode: Pass-through. See the relevant LDC settings in the [RS-232](#) section.

Setting the Event


You can create the Event in the Wizard in few simple steps:

Step 1. Set the condition.

Select the required parameters to set the condition:

- **Category:** Video;
- **Expression:** Signal is detected on a port;
- **Port:** 01.

Click on the **Apply** button to complete the procedure. When it is done, the condition appears on the upper side in textual and LW3 command format as well.

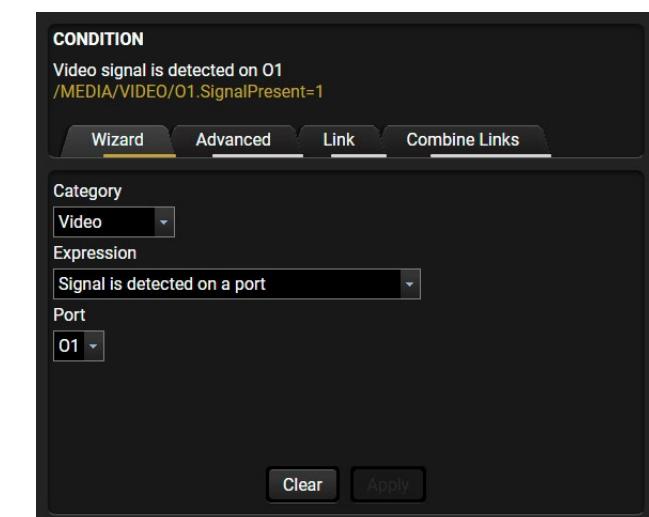

Step 2. Set the action.

If the condition is fulfilled, the following action needs to be launched: the receiver sends a command to the projector over the serial line:

- **Power on** - the required command which is accepted by the projector: PWR0<CR><LF>


For this instance the command has to be closed with the <CR><LF> characters so they need to be escaped. You can use the following format for escaping:

```
<command1><\x0d\x0a><command2><\x0d\x0a>...
...<commandn><\x0d\x0a>
```

In the current case the command is: PWR0\x0d\x0a


Select the required parameters to set the action:

- **Category:** RS-232;
- **Expression:** Send RS-232 message;
- **Port:** P1;
- **Message:** PWR0\x0d\x0a

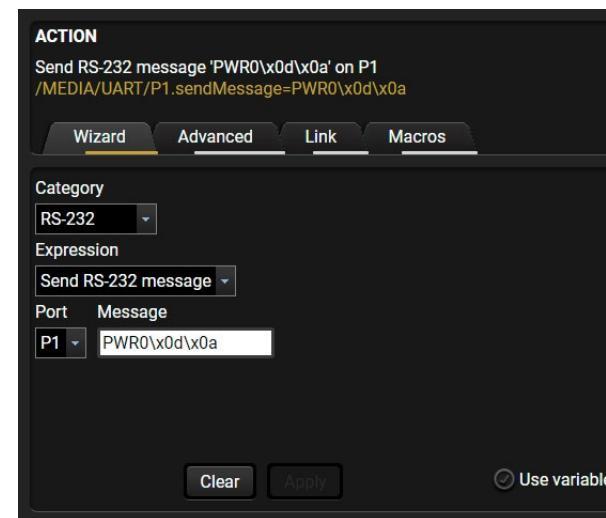

Step 3. Enable the Event.


Select the **E1 enabled** pipe in upper left corner to set the Event as launched.

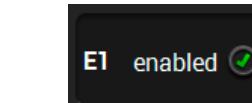

INFO: If you do not find the required category/expression/etc what you need, choose the Advanced mode in the Wizard where the entire LW3 structure tree is available. For example instead of signal detection you can set a specified resolution or color range either as a condition.

5.9. Settings Menu

5.9.1. Status

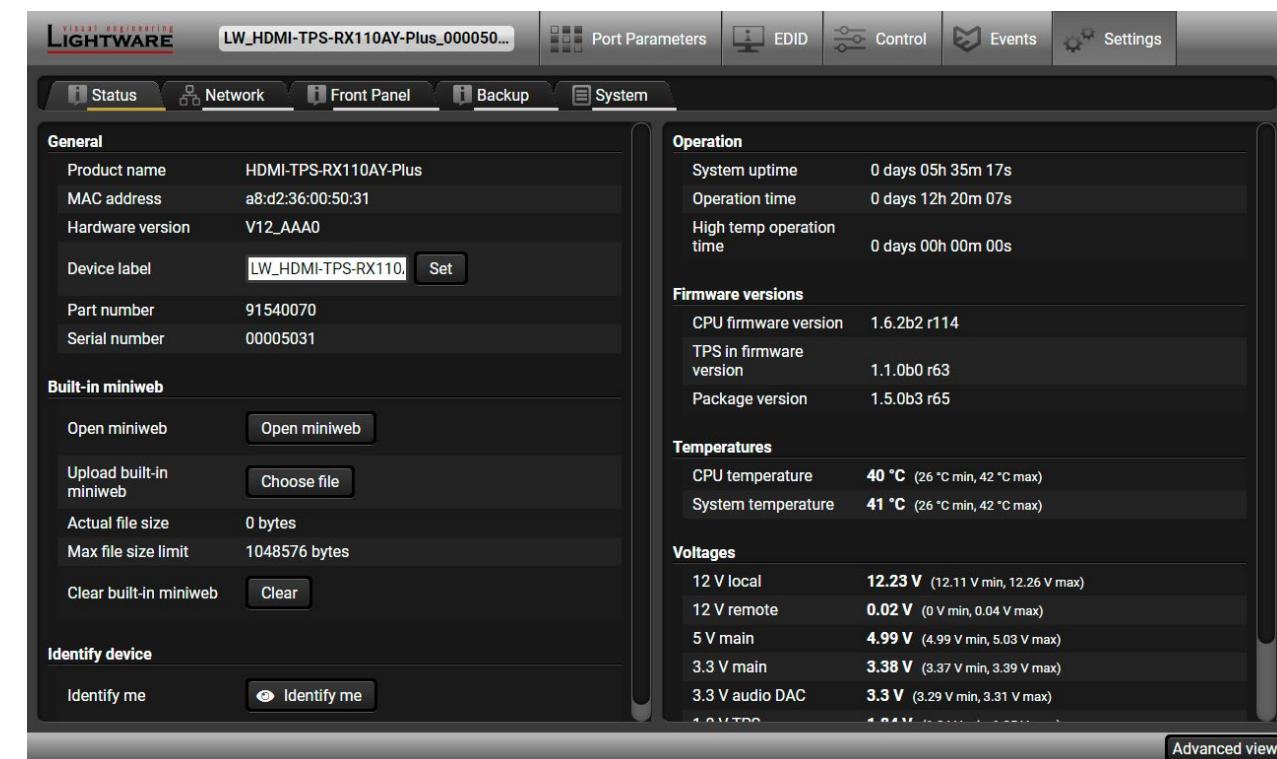

Status tab in Settings menu


The most important hardware and software related information can be found on this tab: hardware and firmware version, serial numbers, temperatures, operation time, and voltage information. Device label can be changed to unique description by the **Set** button. [#label #devicelabel #status #firmwareversion #producttype #serialnumber #miniweb #builtinweb #web](#)

INFO: The **Device label** is a user-editable name displayed next to the main menu. The **Product name** is a read-only property.

Please note that the **Miniweb**-related descriptions can be found in [The Built-in Miniweb](#) section.

Identify Me Feature

Clicking on the **Identify me** button results the status LEDs blinking in green for 10 seconds. The feature helps identifying the device itself in the rack shelf. [#identifyme](#)

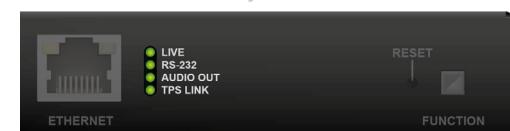

5.9.2. Network

Network tab in Settings menu

General
Current IP address: 192.168.1.13
Current subnet mask: 255.255.255.0
Current gateway address: 192.168.1.1
Obtain IP address automatically (DHCP, AutoIP):
Static IP address: 192.168.0.100
Static subnet mask: 255.255.255.0
Static gateway address: 192.168.0.1
Apply changes Cancel

TCP/IP ports and services
LW3 control port: 6107
LW2 control port enable: 10001
HTTP port enable: 80
HTTP POST commands enable:
LMDMP enable:
Factory defaults

MAC filter allowlist
Currently connected device's MAC address: 3C:7C:3F:EC:D4:2A
Enable MAC address filtering:
Advanced view

MAC Filter Allowlist

DIFFERENCE: This feature is available only in HDMI-TPS-RX110AY-Plus model from FW package v1.5.0b3.
Another level of the security is the MAC Filtering tool. You can create a list of network devices based on the MAC address which are allowed: `#macfilter`

- Controlling the device (Send option), or
- Querying parameters (Receive option) to/from the Lightware device.

Do not forget to press the **Apply changes** button to store the new settings.

ATTENTION! The first three lines are factory default values and they are necessary for the proper working.

ATTENTION! If the device is installed in a network where it gets IP address from a DHCP server and you plan to use the MAC filtering, make sure the MAC address of the DHCP server is added to the white list. Otherwise, the device will not get IP address and will be unreachable.

5.9.3. Front Panel

Front panel tab in Settings menu

Front panel settings
Lock front panel:
Dark mode enable:
Enable default function for Function button:
Advanced view

General

IP address and DHCP settings can be set on this tab. Always press the **Apply settings** button to save changes.
Factory defaults settings can be recalled with a dedicated button.

TCP/IP Ports and Services

DIFFERENCE: This feature is available only in HDMI-TPS-RX110AY-Plus model from FW package v1.5.0b3.

The IP Port Block feature is an additional protection for the Cleartext login, see the [Cleartext Login \(Login Settings\)](#) section. There are TCP/IP ports in Lightware devices which are not protected by the login, so you can disable them if necessary. For example, due to the working method of the LW2 communication, the Cleartext login does not provide protection when LW2 command is sent to the device, that is why the TCP port no.10001 shall be blocked manually. `#dhcp #ipaddress #network #portblock`


Available settings:

- **Lock front panel:** the Function button functionally can be disabled with the option is marked.
- **Dark mode enable:** when dark mode is enabled, all status LEDs are switched off after one minute, if no button pressed. Pressing the Function button brings back status info on the LEDs without performing the function of the button itself.
- **Enable default function for Function button:** enabling the option results the default function of the Function button is enabled. `#buttonlock #lockbutton #darkmode`

5.9.4. Backup

Details about this function can be found in the [Configuration Cloning \(Backup Tab\)](#) section.

5.9.5. System

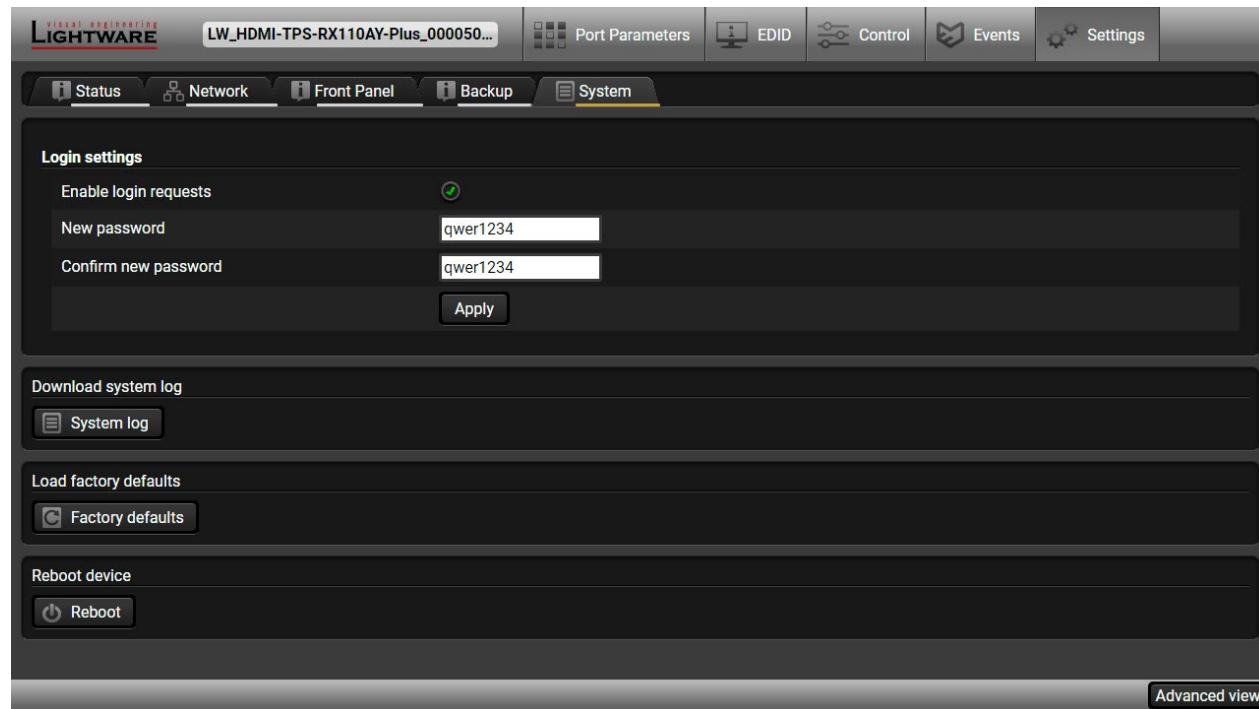

System tab in Settings menu

Cleartext Login (Login Settings)

DIFFERENCE: This feature is available only in HDMI-TPS-RX110AY-Plus model from FW package v1.5.0b3.

This cleartext login tool allows setting a password, thus, the device will not accept any command coming from a control interface (RS-232, Ethernet, etc...) without login. The device will be visible in the Device Discovery window (as the device type and the serial number can be queried without login) but connection can be established only after successful login. The login is valid until a TCP socket break in case of Ethernet connection. [#login](#)

ATTENTION! If the login is enabled, the password will be asked when opening [The Built-in Miniweb](#).

INFO: The login password is erased and the login is disabled when restoring the factory default values.

Three functions are available under System tab:

[#log](#) [#systemlog](#) [#factory](#) [#restart](#) [#reboot](#)

- **Download system log** - saving the file of the device.
- **Load factory defaults** - recalling factory defaults settings and values. All factory default settings are listed in the [Factory Default Settings](#) section.
- **Reboot** - rebooting the system.


5.10. The Built-in Miniweb

DEFINITION: The miniweb is a dedicated location in the memory where an HTML file can be uploaded to. If the `http://<IP_address>/index.html` page or the `http://<host_name>/index.html` is opened in a web browser, the file is displayed.

ATTENTION! The Miniweb is available from FW package v1.1.5b1. The default control page can be installed in the device during the first firmware update process by the user if the necessary parameter is enabled. See the [Step 3. Check the update parameters](#) section.

The default control page allows the following:

- **Source selection:** This block can be used to select an input or enable/disable the Autoselect remotely e.g. from a mobile device.
- **Action triggers:** The action trigger buttons can be used to perform a configured Event Action without waiting for the condition to occur. This can be done remotely from a mobile device, too.

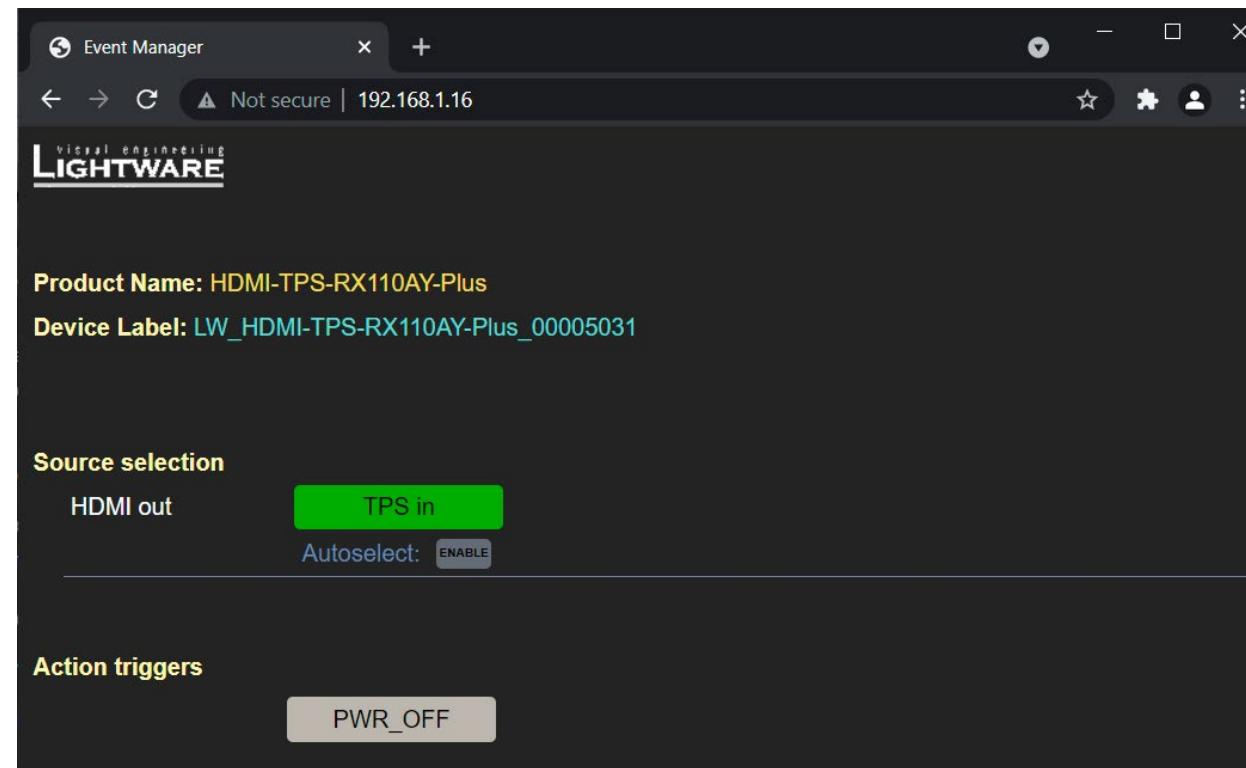

The Control Page Displayed in a Desktop Browser (with Action Trigger Buttons)


#miniweb #builtinweb #web

5.10.1. Opening the Miniweb

The Miniweb is available via:

- Opening a **web browser** and typing the `http://<IP_address>.index.html` or the `http://<IP_address>` in the address line, or
- Launching the **LDC**, connecting to the device, navigating to **Settings/Status** and pressing the **Open miniweb** button.


INFO: The host name can be used instead of the IP address; see the [Setting the Host Name](#) section.

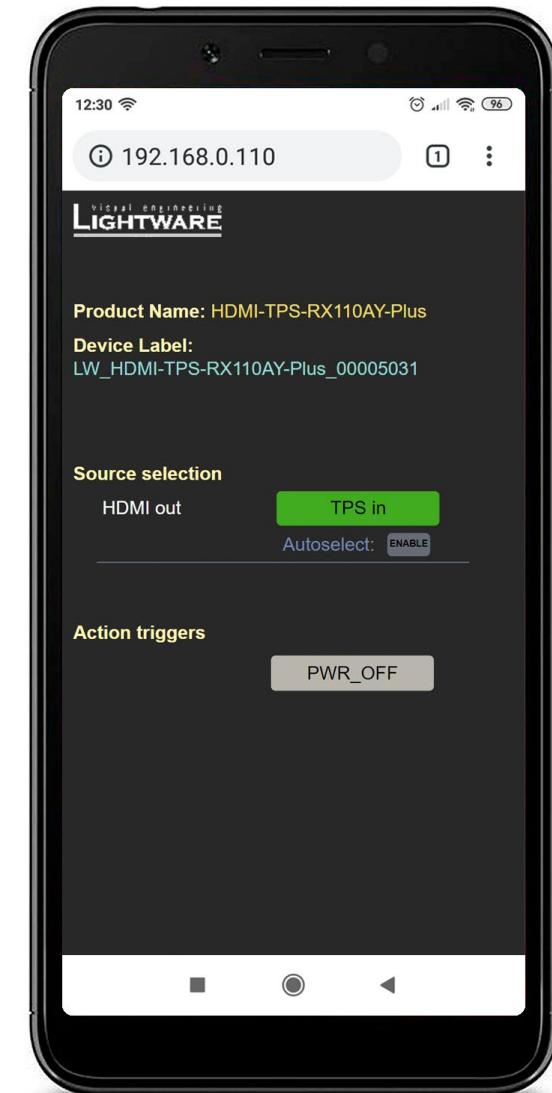

The Control Page Displayed in a Smartphone Browser

The Default Status Page

If there is no control page uploaded, the default status page will be displayed (which is also available by opening the <IP_address>/status.html address).

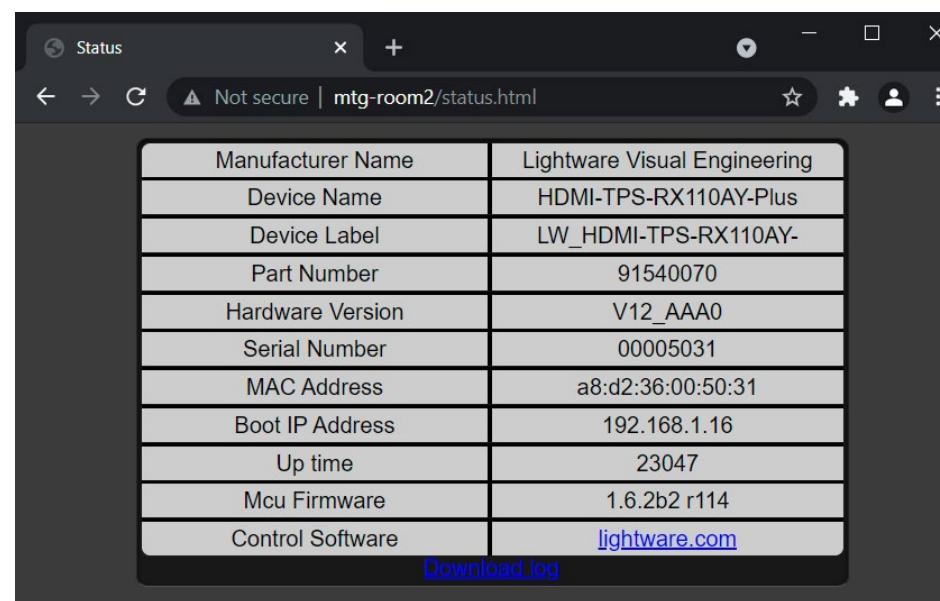


The Factory Default Status Page (status.html)

5.10.2. Miniweb Customization

The buttons of the **Action triggers** section are linked to Actions of certain Events in the Event Manager. These buttons are displayed **only** for specific events:

- Any Event that does **not** have the @W suffix in its name will **not** be displayed as a trigger button.
- The displayed trigger buttons will get a **text label** with the **event name** except the suffix.

To add the desired Action as a button, **append the name** of the desired Event with the @W characters - see below (type uppercase for 'W', as it is case-sensitive):

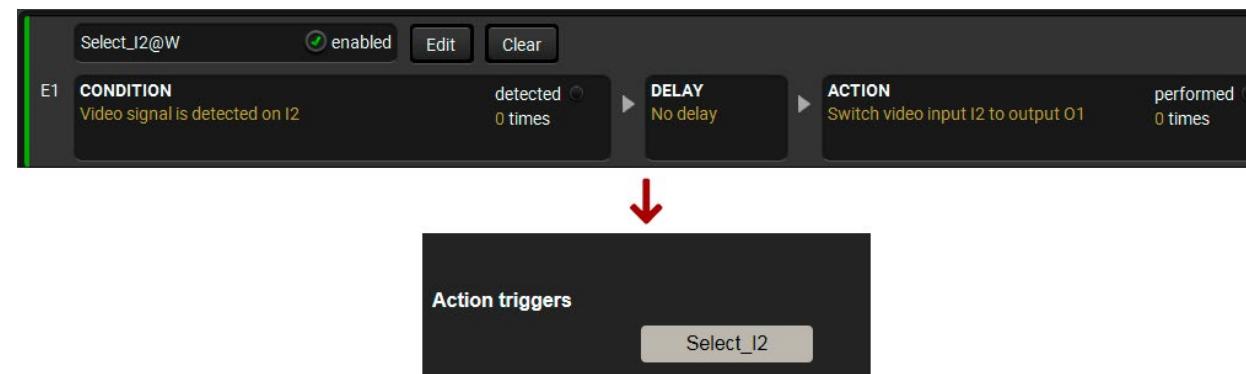


Action Trigger Button added in the Event Manager and displayed in the Control Page

Customized HTML

The default control page can be replaced in the LDC; navigate to the **Settings/Status** page. A custom HTML file can be uploaded by pressing the **Choose file** button. Pay attention to the size of the HTML file. Only one file is allowed, and the maximum file size is 10 KB.


Press the **Reset** button to remove the control page. The default control page can be restored during a firmware update process, see the [Step 3. Check the update parameters](#) section.

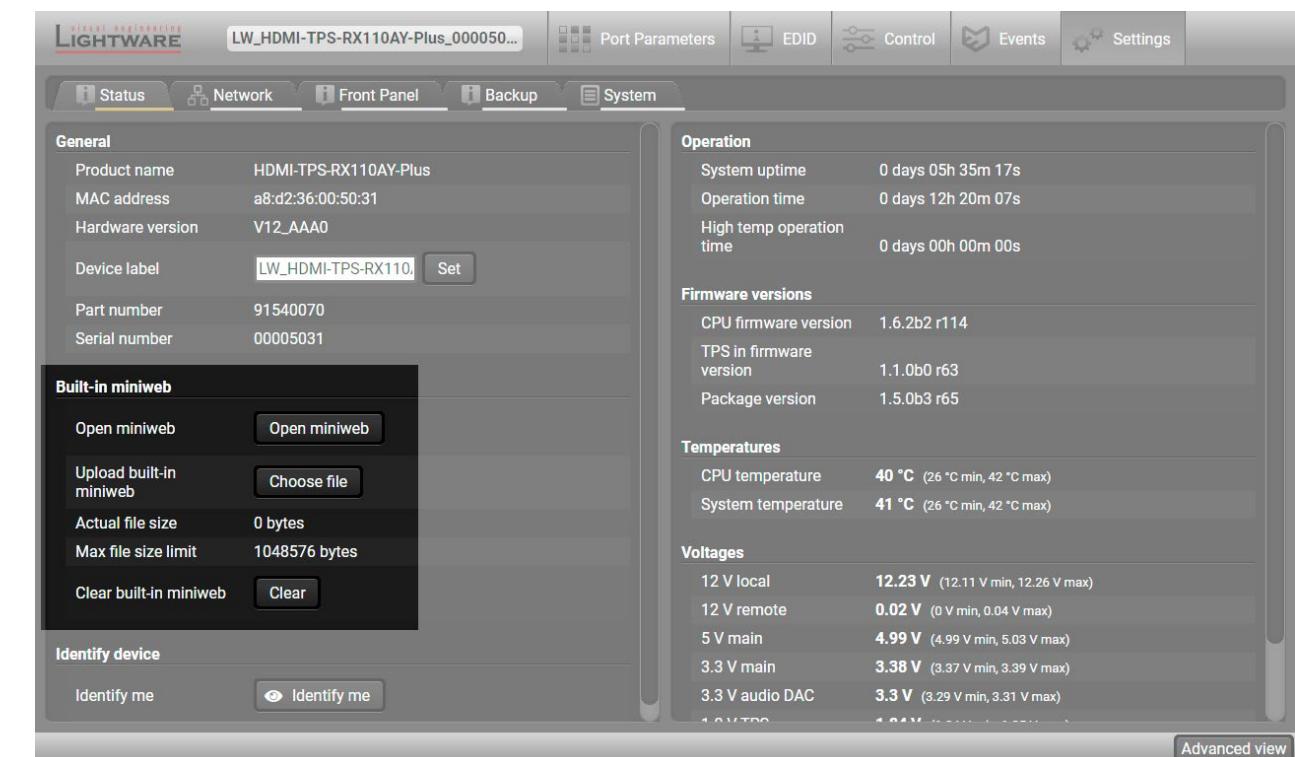

The Built-in Miniweb Section in LDC

5.11. Configuration Cloning (Backup Tab)

Configuration cloning of Lightware LW3 devices is a simple method that eliminates the need to repeatedly configure certain devices to have identical (non-factory) settings. If the devices are installed in the same type of system multiple times, then it is enough to set up only one device to fit the user's needs, and then copy those settings to the others, thus saving time and resources.

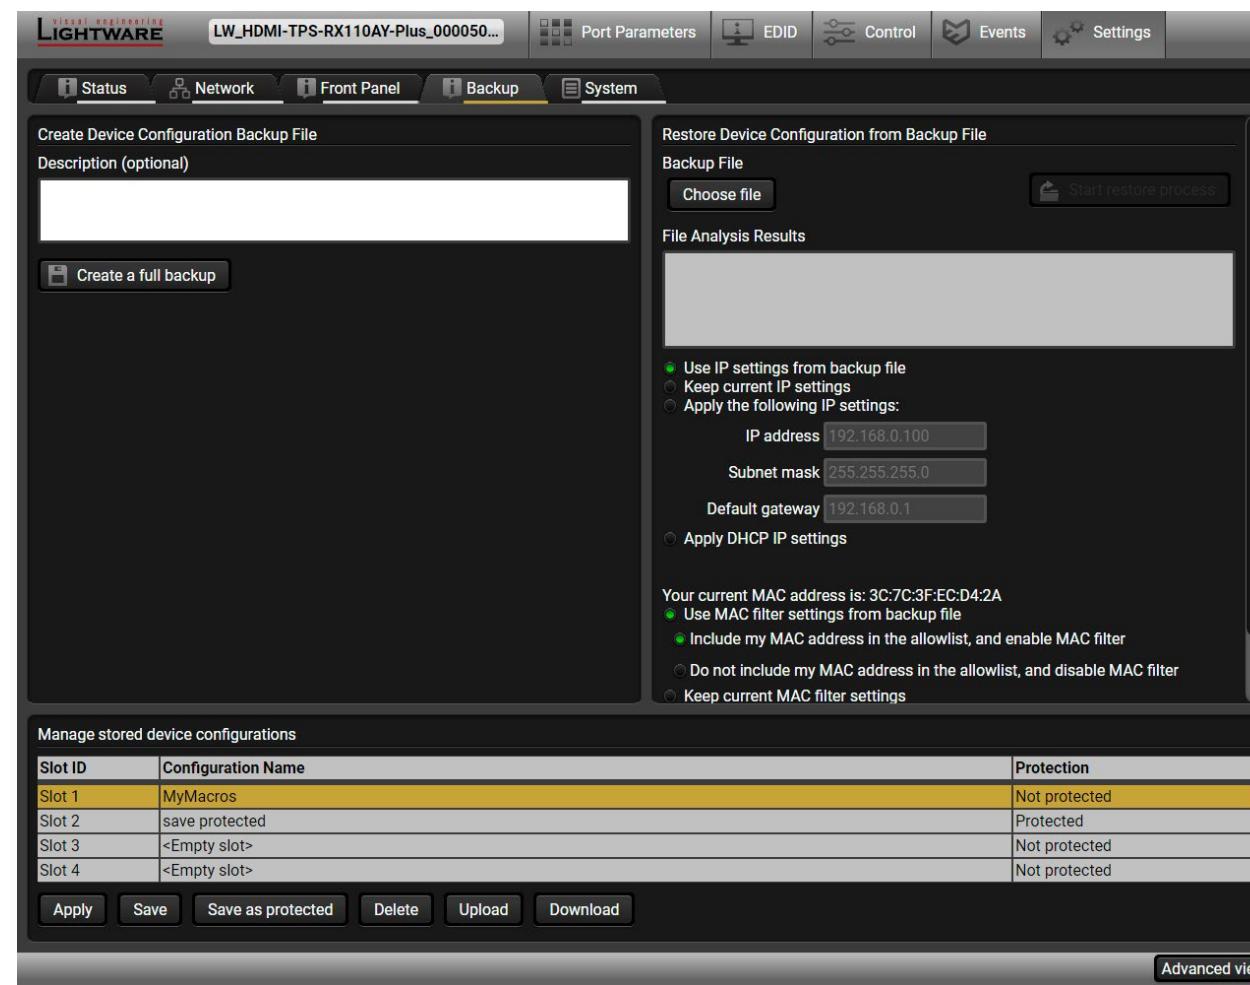

Backup tab in the Settings menu

5.11.1. Steps in a Nutshell

Installing multiple devices with the same customized configuration settings can be done in a few easy steps:

- Step 1.** Configure one device with all your desired settings using the LDC software.
- Step 2.** Backup the full configuration file to your computer.
- Step 3.** If needed, make some modifications to the configuration file using a text editor (e.g. Notepad). E.g. modifying the static IP address is necessary when DHCP is not used.
- Step 4.** Connect to the other device that needs to be configured and upload (restore) your configuration file.
- Step 5.** Done! You can have as many totally identical, customized devices as you like.

ATTENTION! Macros cannot be saved into the backup file. If you have macros stored in a Configuration slot, download it separately and upload it in the target device.

5.11.2. Save the Settings of a Device (Backup)

- Step 1.** Apply the desired settings in the device (port settings, parameters, etc.)
- Step 2.** Select the **Settings / Backup** tab from the menu.
- Step 3.** Write a short **description** in the text box on the left (optional).
- Step 4.** Press the **Create a full backup** button. You will be prompted to save the file to the computer. The default file name is the following:

BACKUP_<DEVICE_TYPE>_SN<SERIAL NUMBER>.LW3

Step 5. Set the desired **file name**, select the folder and **save** the file.

TIPS AND TRICKS: Using the exact product type in the filename is recommended, since it makes the file usage more comfortable.

About the Backup File

The backup file is a simple text file, which contains LW3 protocol commands. The first line is the description and the further lines are the commands that will be executed during the restoration process. The file can be viewed (and/or edited) by a simple text editor, e.g. Notepad.

See the entire list of saved data in the [Content of Backup File](#) section.

ATTENTION! Editing the command lines is only recommended for expert users.

5.11.3. Upload the Settings to a Device (Restore)

WARNING! Please note that the settings will be permanently overwritten with the restored parameters in the device. Withdrawal is not possible.

ATTENTION! The cloning can be successful if the backup file is downloaded from the same type of source device as the destination device.

The Restoring Process

Step 1. Select the **Settings / Backup** tab from the menu.

Step 2. Click on the **Choose file** button on the right panel and **browse** the desired file.

Step 3. The file is checked and the result will be displayed in the textbox below. If the file is correct, the settings can be restored.

Step 4. Choose the **IP settings** that you want to use after backup. You can apply settings from the backup file, keep actual settings, set it manually in a dialog box or apply DHCP.

Step 5. Select the desired **MAC filter settings** to be applied in the device. See more information about this feature in the [MAC Filter Allowlist](#) section.

Step 6. Press the **Start restore process** button and click on the **Yes** button when asked.

Step 7. Reboot the device to apply the network settings after finishing.

5.11.4. Create and Restore Backups from the Device Memory

The device can store configurations in its own memory, four internal slots are available for this purpose.

Manage stored device configurations		
Slot ID	Configuration Name	Protection
Slot 1	MyMacros	Not protected
Slot 2	save protected	Protected
Slot 3	<Empty slot>	Not protected
Slot 4	<Empty slot>	Not protected

Buttons: Apply, Save, Save as protected, Delete, Upload, Download

You can save the configuration to the internal slot:


- **without protection:** it can be easily applied/deleted, or
- **with protection:** applying or deleting a configuration may be protected by a password.

Apply	Loading the selected configuration	Delete	Deleting the selected configuration
Save	Saving the current configuration to the selected slot without protection	Upload	Loading a configuration from a file to the selected slot
Save as protected	Saving the current configuration to the selected slot with a password	Download	Saving the selected configuration as a file

The preset can be used for the macros as well, please see the [Macros](#) section.

WARNING! Loading factory default settings will erase the internal preset in the device memory!

5.12. Advanced View Window

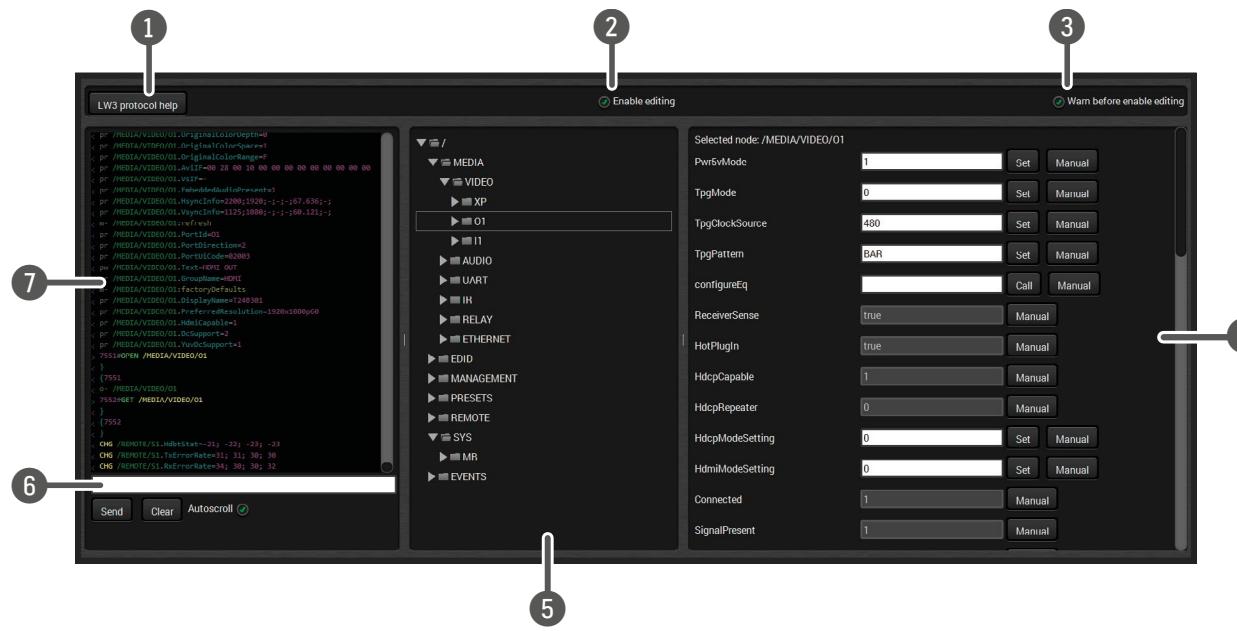

1 LW3 protocol help

Pushing the button opens a help window, which describes the most important information about LW3 protocol commands in HTML format.

2 Edit mode

The default appearance is the read-only mode. If you want to modify the values or parameters, tick the option. You will be prompted to confirm your selection.

3 Warning mode

If this is checked, a warning window pops up when you enable Edit mode.

4 Node list

Correspondent parameters and nodes are shown that are connected to the selected item in the protocol tree. The commands typed in these fields are escaped automatically

Manual button: Manual (short description) of the node can be called and displayed in the terminal window.

Set button: Saves the value/parameter typed in the textbox.

Call button: Calls the method, e.g. reloads factory default settings.

5 Protocol tree

LW3 protocol tree; select an item to see its content.

6 Command line

Type the desired command and execute it by the **Send** button. Clear all current commands and responses in the Terminal window by the **Clear** button. The commands typed in this line are not escaped automatically.

7 Terminal window

Commands and responses with time and date are listed in this window. The sent command starts with 'greater than' character, the received response starts with 'less than' character. The color of each item depends on the type of the command and response. The content of the window can be emptied by the **Clear** button. If the **Autoscroll** option is ticked, the list is scrolled automatically when a new line is added.

#terminal #advancedview

6

LW2 Programmers' Reference

The device can be controlled through a reduced command set of LW2 protocol commands to ensure the compatibility with other Lightware products. The supported LW2 commands are described in this chapter.

- ▶ [LW2 PROTOCOL DESCRIPTION](#)
- ▶ [INSTRUCTIONS FOR THE TERMINAL APPLICATION USAGE](#)
- ▶ [GENERAL LW2 COMMANDS](#)
- ▶ [PORT SETTINGS](#)
- ▶ [NETWORK CONFIGURATION](#)
- ▶ [RS-232 SETTINGS](#)
- ▶ [RELAY SETTINGS](#)
- ▶ [LW2 COMMANDS – QUICK SUMMARY](#)

6.1. LW2 Protocol Description

The device accepts commands surrounded by curly brackets - {} - and responds data surrounded by round brackets - () - only if a command was successfully executed.

Format	Explanation
<in>	Input number in 1- or 2-digit ASCII format (01, 5, 07, 16, etc.)
<out>	Output number in 1- or 2-digit ASCII format
<in ² >	Input number in 2-digit ASCII format (01, 02, 10, 12 etc.)
<out ² >	Output number in 2-digit ASCII format (01, 02, 10, 12 etc.)
<loc>	Location number in 1-, 2- or 3-digit ASCII format
<id>	ID number in 1- or 2-digit ASCII format
<id ² >	ID number in 2-digit ASCII format
CrLf	Carriage return, Line feed (0x0D, 0x0A)
.	Space character (0x20)
→	Each command issued by the controller
←	Each response received from the router

6.2. Instructions for the Terminal Application Usage

Terminal Application



The LW2 protocol commands can be applied to the receiver using a terminal application. You need to install one of them on your control device, for example Putty or CLI. [#terminal](#)

Establishing Connection

Follow the steps for establishing connection to the receiver:

- Step 1.** Connect the receiver to a LAN over Ethernet (see the details in the [Connecting Steps](#) section).
- Step 2.** Open the terminal application (e.g. Putty).
- Step 3.** Add the **IP address** of the device (default: 192.168.0.100) and the **port number** (10001).
- Step 4.** Select the **Raw** connection type, and open the connection.

Once the terminal window is opened, you can enter the LW2 protocol commands, which are listed in the following sections.

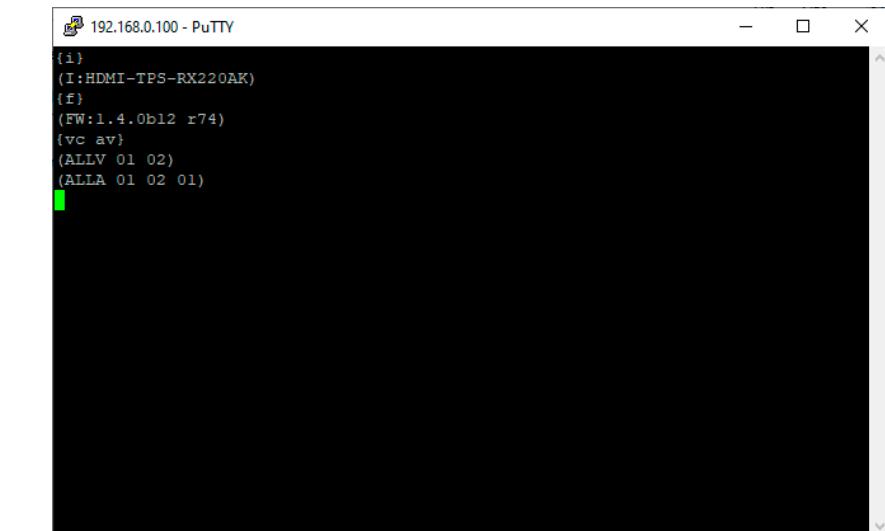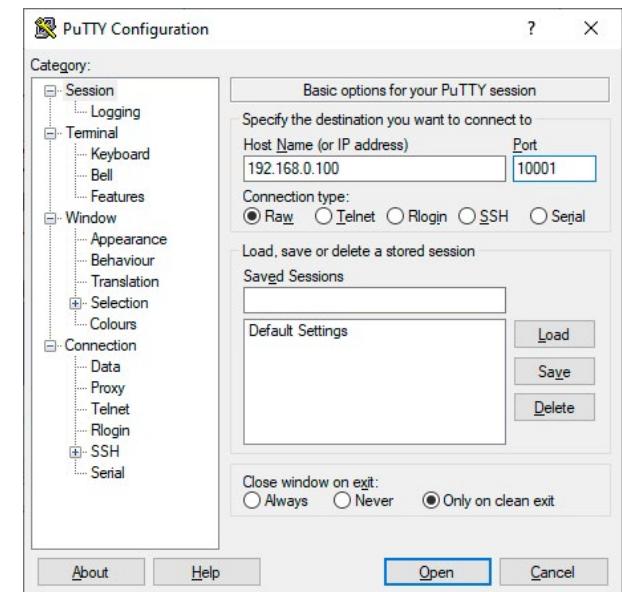

LW2 protocol command communication in a terminal window

6.3. General LW2 Commands

6.3.1. List of All Available LW2 Commands

Command and Response

```
→ {lcmd}
← (LCMD# LCMD: List all commands)CrLf
← <LW2_commands>CrLf
← (LCMD END)CrLf
```

Example

```
→ {lcmd}
← (LCMD# LCMD: List all commands)
← (LCMD# PING: Always response PONG)
← (LCMD# CT: Compile time)
← ...
← (LCMD END)
```

6.3.2. Viewing the Product Type

The device responds its name. *#producttype*

Command and Response

```
→ {i}
← (I:<product_type>)CrLf
```

Example

```
→ {i}
← (I:HDMI-TPS-RX110AY)
```

6.3.3. Querying the Control Protocol

The device can be controlled with different control protocols. This command queries the active protocol of the currently used control interface. *#protocol*

Command and Response

```
→ {p_?}
← (CURRENT_PROTOCOL·=·#<protocol>)CrLf
```

Example

```
→ {p_?}
← (CURRENT_PROTOCOL = #1)
```

Explanation

The device communicates with LW2 protocol.

6.3.4. Viewing the Firmware Version of the CPU

Command and Response *#firmwareversion*

```
→ {f}
← (FW:<firmware_version>)CrLf
```

Example

```
→ {f}
← (FW:1.4.0b12 r74)
```

6.3.5. Connection Test

Simple test to see if the connection is established successfully.

Command and Response

```
→ {ping}
← (PONG!)CrLf
```

Example

```
→ {ping}
← (PONG!)
```

6.3.6. Viewing the Serial Number

The device responds its 8-digit serial number. *#serialnumber*

Command and Response

```
→ {s}
← (SN:<serial_number>)CrLf
```

Example

```
→ {s}
← (SN:A2000274)
```

6.3.7. Compile Time

Returns the date when the CPU firmware was compiled.

Command and Response

```
→ {ct}
← (COMPILED:<date>·<time>)CrLf
```

Example

```
→ {ct}
← (Compiled: Jan 29 2020 17:16:28)
```

6.3.8. Viewing Installed Boards

Shows the hardware name and revision of the installed cards.

Command and Response

```
→ {is}
← (SL#·0·<mb_desc>)CrLf
← (SL·END)CrLf
```

Example

```
→ {is}
← (SL# 0 HDMI-TPS-RX110AY)
← (SL END)
```

6.3.9. Viewing Firmware for All Controllers

Shows the firmware versions of all installed controllers. `#firmwareversion`

Command and Response

```
→ {fc}
← (CF·<device>·<firmware_version>)CrLf
← (CF·END)CrLf
```

Example

```
→ {fc}
← (CF HDMI-TPS-RX110AY 1.4.0b12 r74)
← (CF END)
```

6.3.10. Restarting the Device

The device can be restarted without unplugging power. `#restart #reboot`

Command and Response

```
→ {rst}
←
```

Example

```
→ {rst}
←
```

6.3.11. Querying Health Status

Internal voltages and measured temperature values are shown. `#status`

Command and Response

```
→ {st}
← (ST·<health_status>)CrLf
```

Example

```
→ {st}
← (ST CPU 12.18V 5.03V 3.30V 0.01V 3.38V 1.30V 1.86V 0.99V 0.01V 53.67C 53.67C)
```

6.3.12. Restoring Factory Default Settings

All settings and parameters are reset to factory default, see the table in the [Factory Default Settings](#) section.
`#factory`

Command and Response

```
→ {factory=all}
← (FACTORY Y ALL...)CrLf
```

Example

```
→ {factory=all}
← (FACTORY ALL...)
```

6.4. Port Settings

6.4.1. Muting an Output

INFO: <A/V/AV> option usually can be skipped for legacy purposes. In this case, the devices change all (Video & Audio) layers, but using status commands, it displays information about only the Video layer.
Please use the AV option when available.

Command and Response `#mute`

→ {#<out>·<layer>}
← (1MT<out>·<layer>)CrLf

Parameters

Identifier	Parameter description	Value	Parameter value
<layer>	The layer of the HDMI signal	A	Audio layer
		V	Video layer
		AV	Audio and video layers together

Example

→ {#2 A}
← (1MT02 A)

Explanation

The audio signal of the Analog audio out (02) is muted.

ATTENTION! Muting does not change the state of the crosspoint, but disables the output itself. This way the last connection can be easily restored with an unmute command. Switching a muted output does not unmute the output.

6.4.2. Unmuting an Output

Command and Response `#unmute`

→ {+<out>·<layer>}
← (0MT<out>·<layer>)CrLf

Parameters

Identifier	Parameter description	Value	Parameter value
<layer>	The layer of the HDMI signal	A	Audio layer
		V	Video layer
		AV	Audio and video layers together

Example

→ {+1}
← (0MT01)

Explanation

The audio and video signals of the HDMI out (01) is unmuted.

INFO: Unmuting an output makes the previous connection active, as the crosspoint state has not been changed by the muting command, only the output was disabled.

6.4.3. Locking an Output

Lock an output port. The state of the output cannot be changed until unlocking.

Command and Response `#lock`

→ {#><out>·<layer>}
← (1LO<out>·<layer>)CrLf

Parameters

Identifier	Parameter description	Value	Parameter value
<layer>	The layer of the HDMI signal	A	Audio layer
		V	Video layer
		AV	Audio and video layers together

Example

→ {#>1 V}
← (1LO01 V)

Explanation

The video signal of the HDMI out (01) is locked.

6.4.4. Unlocking an Output

Command and Response `#unlock`

→ {+<out>·<layer>}
 ← (0L0<out>·<layer>)CrLf

Parameters

Identifier	Parameter description	Value	Parameter value
<layer>	The layer of the HDMI signal	A	Audio layer
		V	Video layer
		AV	Audio and video layers together

Example

→ {+<1>}
 ← (0L001)

Explanation

The audio and video signals of the HDMI out 1 (01) is unlocked.

6.4.5. Viewing the Connection State on the Outputs

Command and Response `#portstatus`

→ {VC·<layer>}
 ← (ALL<layer>·<state_letter><in>)CrLf

Parameters

Identifier	Parameter description	Value	Parameter value
<layer>	The layer of the HDMI signal	A	Audio layer
		V	Video layer
		AV	Audio and video layers together
<state_letter>	The mute and lock state of the output port.	L	The output port is locked.
		M	The output port is muted.
		U	The output port is locked and muted.

Example

→ {vc av}
 ← (ALLV 01)
 ← (ALLA 01 01)

Explanation

The 01 audio and 01 video output ports are connected to the I1 audio and I1 video input ports.

6.4.6. Viewing Crosspoint Size

Shows the physical crosspoint size.

Command and Response

→ {GETSIZE·<layer>}
 ← (SIZE=<size>·<layer>)CrLf

Parameters

Identifier	Parameter description	Value	Parameter value
<size>	The size of the crosspoint	<in>x<out>	The number of the input ports and the output ports separated with an "x".
<layer>	The layer of the HDMI signal	A	Audio layer
		V	Video layer
		AV	Audio and video layers together

Example

→ {getsize av}
 ← (SIZE=1x1 V)
 ← (SIZE=1x2 A)

Explanation

The device reports that it has a video crosspoint with 1 input and 1 output, and an audio crosspoint with 1 input and 2 outputs.

6.5. Network Configuration

6.5.1. Querying the IP Status

The network configuration of the device can be queried as follows. `#network #ipaddress #dhcp`

Command and Response

```
→ {IP_STAT=?}
← (IP_STAT=<mode>;<ip_address>;<subnet_mask>;<gateway_addr>)CrLf
```

Parameters

Identifier	Parameter description	Value	Parameter value
<mode>	Static IP address setting or DHCP (dynamic IP address)	0	Static IP address
		1	DHCP
<ip_address>	Current IP address of the device		IP address (four decimal octets separated by dots).
<subnet_mask>	Current subnet mask of the device		Subnet mask (four decimal octets separated by dots).
<gateway_address>	Current gateway address of the device		Gateway address (four decimal octets separated by dots).

Example

```
→ {ip_stat=?}
← (IP_STAT=0;192.168.0.75;255.255.255.0;192.168.0.1)
```

Explanation

The device has a static (fix) IP address: 192.168.0.75; the subnet mask is 255.255.255.0, the gateway address is 192.168.0.1.

6.5.2. Querying the IP Address

IP address can be queried as follows.

Command and Response

```
→ {IP_ADDRESS=?}
← (IP_ADDRESS=<mode>;<ip_address>)CrLf
```

Parameters

Identifier	Parameter description	Value	Parameter value
<mode>	Static IP address setting or DHCP (dynamic IP address)	0	Static IP address
		1	DHCP
<ip_address>	Current IP address of the device		IP address (four decimal octets separated by dots).

Example

```
→ {ip_address=?}
← (IP_ADDRESS=1;192.168.2.118)
```

Explanation

The device has a DHCP (dynamic) IP address: 192.168.2.118.

6.5.3. Setting the IP Address

IP address can be set as follows.

Command and Response

```
→ {IP_ADDRESS=<mode>;<ip_address>}
← (IP_ADDRESS=<mode>;<ip_address>)CrLf
```

Parameters

Identifier	Parameter description	Value	Parameter value
<mode>	Static IP address setting or DHCP (dynamic IP address)	0	Static IP address
		1	DHCP
<ip_address>	IP address of the device		IP address (four decimal octets separated by dots).

Example

```
→ {ip_address=1;}
← (IP_ADDRESS=1;192.168.2.118)
```

Explanation

The device is set to DHCP (dynamic) IP address and got 192.168.2.118.

6.5.4. Querying the Subnet Mask

IP address can be queried as follows.

Command and Response

```
→ {IP_NETMASK=?}
← (IP_NETMASK=<subnet_mask>)CrLf
```

Parameters

Identifier	Parameter description	Value	Parameter value
<subnet_mask>	Current subnet mask of the device		Subnet mask (four decimal octets separated by dots).

Example

```
→ {ip_netmask=?}
← (IP_NETMASK=255.255.255.0)
```

6.5.5. Setting the Subnet Mask

IP address can be set as follows.

Command and Response

```
→ {IP_NETMASK=<subnet_mask>}
← (IP_NETMASK=<subnet_mask>)CrLf
```

Parameters

Identifier	Parameter description	Value	Parameter value
<subnet_mask>	Subnet mask of the device		Subnet mask (four decimal octets separated by dots).

Example

```
→ {ip_netmask=255.255.0.0}
← (IP_NETMASK=255.255.0.0)
```

6.5.6. Querying the Gateway Address

Gateway address can be queried as follows.

Command and Response

```
→ {IP_GATEWAY=?}
← (IP_GATEWAY=<gateway_address>)CrLf
```

Parameters

Identifier	Parameter description	Value	Parameter value
<gateway_address>	Current gateway address of the device		Gateway address (four decimal octets separated by dots).

Example

```
→ {ip_gateway=?}
← (IP_GATEWAY=192.168.0.1)
```

6.5.7. Setting the Gateway Address

Gateway address can be set as follows.

Command and Response

```
→ {IP_GATEWAY=<gateway_address>}
← (IP_GATEWAY=<gateway_address>)CrLf
```

Parameters

Identifier	Parameter description	Value	Parameter value
<gateway_address>	Current gateway address of the device		Gateway address (four decimal octets separated by dots).

Example

```
→ {ip_gateway=192.168.0.1}
← (IP_GATEWAY=192.168.0.1)
```

6.5.8. Applying Network Settings

Applying the network settings and restarting the network interface.

ATTENTION! The command is always required as the last step for applying the modified network settings.

Command and Response

```
→ {IP_APPLY}
← (IP_APPLY)CrLf
```

Example

```
→ {ip_apply}
← (IP_APPLY)
```

6.6. RS-232 Settings

6.6.1. Setting the RS-232 Mode

RS-232 mode can be set as follows. See more details about RS-232 modes in the [Serial Interface](#) section.

```
#rs232 #rs-232 #serial #commandinjection #protocol
```

Command and Response

→ {RS232=<mode>}

← (RS232=<mode>)CrLf

Parameters

Identifier	Parameter description	Value	Parameter value
<mode>	RS-232 operation mode	CONTROL	Control mode
		CI	Command injection mode
		PASS	Pass-through mode

Example

→ {rs232=control}

← (RS232=CONTROL)

INFO: The current RS-232 mode can be queried by the {RS232=?} command.

6.6.2. Setting the Local RS-232 Parameters

The parameters of local RS-232 port can be set as follows.

Command and Response

→ {RS232_LOCAL_FORMAT=<BaudRate>;<DataBit>;<Parity>;<StopBit>}

← (RS232_LOCAL_FORMAT=<BaudRate>;<DataBit>;<Parity>;<StopBit>)CrLf

Parameters

Identifier	Parameter description	Value	Parameter value
<BaudRate>	Baud rate	X	No change
		4800	4800
		7200	7200
		9600	9600
		14400	14400
		19200	19200
		38400	38400
		57600	57600
		115200	115200
		X	No change
<DataBit>	Data bit	8	8
		9	9
		X	No change
<Parity>	Parity	N	None
		E	Even
		O	Odd
		X	No change
<StopBit>	Stop Bit	1	1
		1,5	1,5
		2	2

Example

→ {rs232_local_format=9600;8;O;X}

← (RS232_LOCAL_FORMAT=9600;8;O;X)

Explanation

Local RS-232 port is set as the following: the baud rate to 9600, data bit to 8, parity to odd, and stop bit is not changed, remained 1.

INFO: The current local RS-232 parameters can be queried by the {RS232_LOCAL_FORMAT=?} command.

6.6.3. Setting the Link RS-232 Parameters

The parameters of link RS-232 (TPS) port can be set as follows.

Command and Response

→ {RS232_LINK_FORMAT=<BaudRate>;<DataBit>;<Parity>;<StopBit>}
 ← (RS232_LINK_FORMAT=<BaudRate>;<DataBit>;<Parity>;<StopBit>)CrLf

Parameters

Identifier	Parameter description	Value	Parameter value
<BaudRate>	Baud rate	X	No change
		4800	4800
		7200	7200
		9600	9600
		14400	14400
		19200	19200
		38400	38400
		57600	57600
		115200	115200
<DataBit>	Data bit	X	No change
		8	8
		9	9
<Parity>	Parity	X	No change
		N	None
		E	Even
		O	Odd
<StopBit>	Stop Bit	X	No change
		1	1
		1,5	1,5
		2	2

Example

→ {rs232_link_format=9600;8;O;X}
 ← (RS232_LINK_FORMAT=9600;8;O;X)

Explanation

Link RS-232 port is set as the following: the baud rate to 9600, data bit to 8, parity to odd, and stop bit is not changed, remained 1.

INFO: The current link RS-232 parameters can be queried by the {RS232_LINK_FORMAT=?} command.

6.6.4. Setting the Local RS-232 Control Protocol

The control protocol of local RS-232 port can be set as follows.

Command and Response

→ {RS232_LOCAL_PROT=<protocol>}
 ← (RS232_LOCAL_PROT=<protocol>)CrLf

Parameters

Identifier	Parameter description	Value	Parameter value
<protocol>	RS-232 control protocol	LW2	LW2 control protocol
		LW3	LW3 control protocol

Example

→ {rs232_local_prot=lw2}
 ← (RS232_LOCAL_PROT=LW2)

INFO: The current local RS-232 parameters can be queried by the {RS232_LOCAL_PROT=?} command.

6.6.5. Setting the Link RS-232 Control Protocol

The control protocol of link RS-232 (TPS) port can be set as follows.

Command and Response

→ {RS232_LINK_PROT=<protocol>}
 ← (RS232_LINK_PROT=<protocol>)CrLf

Parameters

Identifier	Parameter description	Value	Parameter value
<protocol>	RS-232 control protocol	LW2	LW2 control protocol
		LW3	LW3 control protocol

Example

→ {rs232_link_prot=lw2}
 ← (RS232_LINK_PROT=LW2)

INFO: The current local RS-232 parameters can be queried by the {RS232_LINK_PROT=?} command.

6.7. Relay Settings

6.7.1. Querying the Relay Connection State

Current relay connection state can be queried. `#relay`

Command and Response

→ {RELAY<port_nr>=?}
 ← (RELAY<port_nr>=<direction>;<state>)CrLf

Parameters

Identifier	Parameter description	Value	Parameter value
<direction>	Direction of the relay (input/output)	O	Output (it is always O as Output)
<state>	State of the connection	C	Closed
		O	Opened

Example

→ {relay1=?}
 ← (RELAY1=O;O)

Explanation

Relay1 is opened now.

6.7.2. Setting the Relay Connection State

Command and Response

→ {RELAY<port_nr>=<direction>;<state>}
 ← (RELAY<port_nr>=<direction>;<state>)CrLf

Parameters

Identifier	Parameter description	Value	Parameter value
<direction>	Direction of the relay (input/output)	O	Output (it is always O as Output)
<state>	State of the connection	C	Closed
		O	Opened

Example

→ {relay1=O;C}
 ← (RELAY1=O;C)

Explanation

Relay1 is closed now.

6.8. LW2 Commands – Quick Summary

General LW2 Commands

List of All Available LW2 Commands

→ {lcmd}

Viewing the Product Type

→ {i}

Querying the Control Protocol

→ {p_?}

Viewing the Firmware Version of the CPU

→ {f}

Connection Test

→ {ping}

Viewing the Serial Number

→ {s}

Compile Time

→ {ct}

Viewing Installed Boards

→ {is}

Viewing Firmware for All Controllers

→ {fc}

Restarting the Device

→ {rst}

Querying Health Status

→ {st}

Restoring Factory Default Settings

→ {factory=all}

Port Settings

Muting an Output

→ {#<out>·<layer>}

Unmuting an Output

→ {+<out>·<layer>}

Locking an Output

→ {#><out>·<layer>}

Unlocking an Output

→ {+<<out>·<layer>}

Viewing the Connection State on the Outputs

→ {VC·<layer>}

Viewing Crosspoint Size

→ {GETSIZE·<layer>}

Network Configuration

Querying the IP Status

→ {IP_STAT=?}

Querying the IP Address

→ {IP_ADDRESS=?}

Setting the IP Address

→ {IP_ADDRESS=<mode>;<ip_address>}

Querying the Subnet Mask

→ {IP_NETMASK=?}

Setting the Subnet Mask

→ {IP_NETMASK=<subnet_mask>}

Querying the Gateway Address

→ {IP_GATEWAY=?}

Setting the Gateway Address

→ {IP_GATEWAY=<gateway_address>}

Applying Network Settings

→ {IP_APPLY}

RS-232 Settings

Setting the RS-232 Mode

→ {RS232=<mode>}

Setting the Local RS-232 Parameters

→ {RS232_LOCAL_FORMAT=<BaudRate>;<DataBit>;<Parity>;<StopBit>}

Setting the Link RS-232 Parameters

→ {RS232_LINK_FORMAT=<BaudRate>;<DataBit>;<Parity>;<StopBit>}

Setting the Local RS-232 Control Protocol

→ {RS232_LOCAL_PROT=<protocol>}

Setting the Link RS-232 Control Protocol

→ {RS232_LINK_PROT=<protocol>}

Relay Settings

Querying the Relay Connection State

→ {RELAY<port_nr>=?}

Setting the Relay Connection State

→ {RELAY<port_nr>=<direction>;<state>}

7

LW3 Programmers' Reference

The device can be controlled through Lightware 3 (LW3) protocol commands to ensure the compatibility with other Lightware products. The supported LW3 commands are described in this chapter

- ▶ [OVERVIEW](#)
- ▶ [INSTRUCTIONS FOR THE TERMINAL APPLICATION USAGE](#)
- ▶ [PROTOCOL RULES](#)
- ▶ [SYSTEM COMMANDS](#)
- ▶ [CLEARTEXT LOGIN PROTECTION](#)
- ▶ [VIDEO PORT SETTINGS](#)
- ▶ [AUDIO PORT SETTINGS](#)
- ▶ [ANALOG AUDIO OUTPUT SETTINGS](#)
- ▶ [EVENT MANAGER BASICS](#)
- ▶ [EVENT MANAGER TOOL KIT](#)
- ▶ [VARIABLE-MANAGEMENT](#)
- ▶ [ETHERNET PORT CONFIGURATION](#)
- ▶ [ETHERNET TOOL KIT](#)
- ▶ [ETHERNET MESSAGE SENDING](#)
- ▶ [HTTP MESSAGING](#)
- ▶ [TCP MESSAGE RECOGNIZER](#)
- ▶ [RS-232 PORT CONFIGURATION](#)
- ▶ [RS-232 MESSAGE SENDING](#)
- ▶ [RS-232 MESSAGE RECOGNIZER](#)
- ▶ [SENDING CEC COMMANDS](#)
- ▶ [INFRARED PORT CONFIGURATION](#)
- ▶ [INFRARED MESSAGE SENDING](#)
- ▶ [RELAY PORT SETTINGS](#)
- ▶ [EDID MANAGEMENT](#)
- ▶ [LW3 COMMANDS - QUICK SUMMARY](#)

7.1. Overview

The Lightware Protocol #3 (LW3) is implemented in almost all new Lightware devices (matrix switchers, signal extenders and distribution amplifiers) since 2012. The protocol is ASCII-based and all commands are terminated with a carriage return (Cr, '\r') and line feed (Lf, '\n') pair. It is organized as a tree structure that provides outstanding flexibility and user-friendly handling with 'nodes', 'properties' and 'methods'. The **Advanced View** of the Lightware Device Controller software is the perfect tool for browsing and learning how the LW3 protocol can be used in practice.

7.2. Instructions for the Terminal Application Usage

Terminal Application


The LW3 protocol commands can be applied to the receiver using a terminal application. You need to install one of them on your control device, for example **Putty** or **CLI**. [#terminal](#)

Establishing Connection

Follow the steps for establishing connection to the receiver:

- Step 1.** Connect the receiver to a LAN over Ethernet (see the details in the [Connecting Steps](#) section).
- Step 2.** Open the terminal application (e.g. Putty).
- Step 3.** Add the **IP address** of the device (default: 192.168.0.100) and the **port number** (6107).
- Step 4.** Select the **Raw** connection type, and open the connection.

Once the terminal window is opened, you can enter the LW3 protocol commands, which are listed in the following sections.


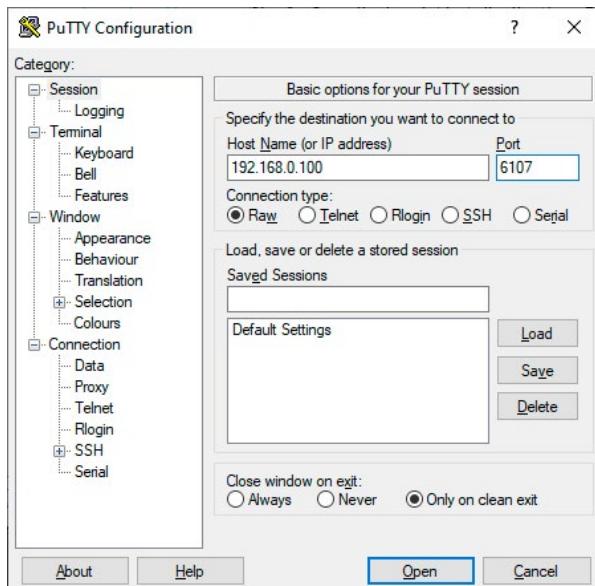


```
192.168.0.100 - PuTTY
GET /MEDIA/VIDEO/XP.SourcePortStatus
pr /MEDIA/VIDEO/XP.SourcePortStatus=T00AA;T00AA
CALL /MEDIA/VIDEO/XP:switch(I1:O2)
mO /MEDIA/VIDEO/XP:switch
1700#GET /EDID.-
(1700
pr /EDID.EdidStatus=F47:E1;F47:E2
m- /EDID:copy
m- /EDID:delete
m- /EDID:reset
m- /EDID:switch
m- /EDID:switchAll
}
```

LW3 protocol command communication in a terminal window

7.3. Protocol Rules

7.3.1. LW3 Tree Structure and Command Structure (examples)

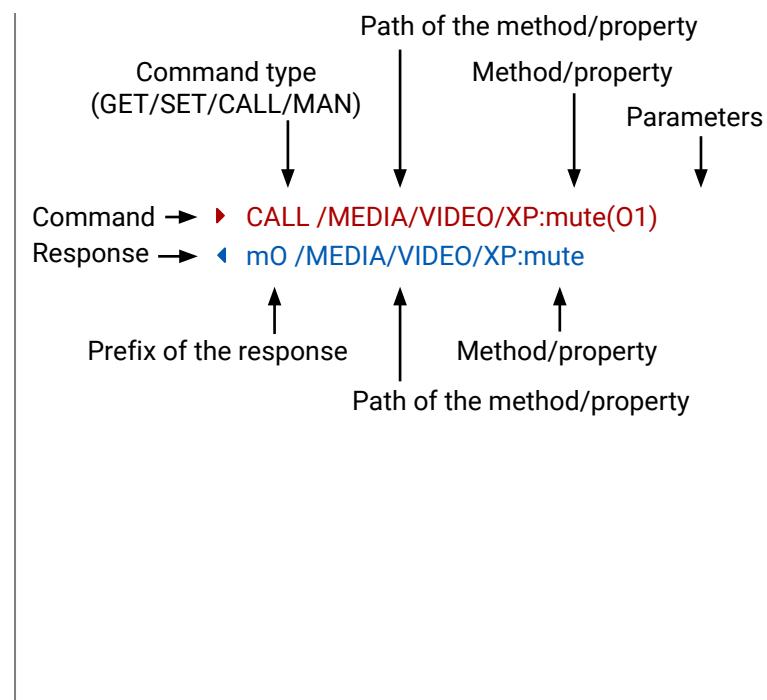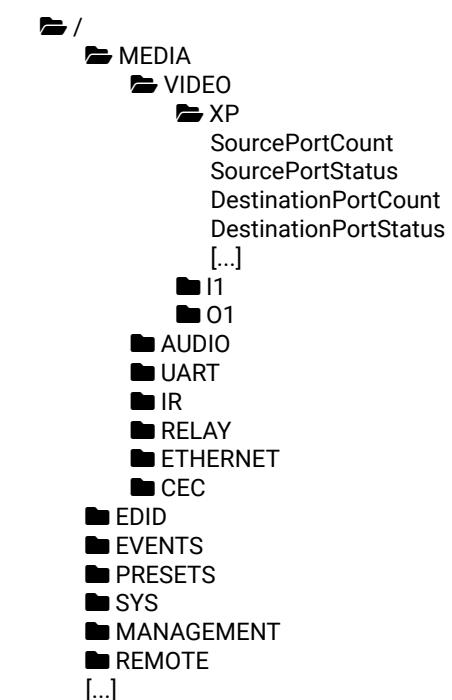

7.3.2. General Rules

- All names and parameters are **case-sensitive**.
- The nodes are separated by a slash ('/') character.
- The node name can contain the elements of the English alphabet and numbers.
- The **length of a line** (command/response, command type / prefix, path, method/property and parameters together) can be **max. 800 bytes**.
- The command lines have to be closed by **Carriage return and Line Feed** (CrLf).
- Use the **TCP port no. 6107** when using LW3 protocol over Ethernet.
- When a command is issued by the device, the received response cannot be processed by the CPU.
- The node paths describe the exact location of the node, listing each parent node up to the root.

7.3.3. Command Types

GET command

The **GET** command can be used to get the child nodes, properties and methods of a specific node. It can also be used to get the value of a property. Use the dot character (.) when addressing a property:

- ▶ **GET** /.SerialNumber
- ◀ **pr** /.SerialNumber=87654321

GETALL command

The **GETALL** command can be used to get all child nodes, properties and methods of a node with one command.

- ▶ **GETALL** /MEDIA/UART
- ◀ **ns** /MEDIA/UART/RECOGNIZER
- ◀ **ns** /MEDIA/UART/P1
- ◀ **ns** /MEDIA/UART/P2
- ◀ **pr** /MEDIA/UART.PortCount=2
- ◀ **pr** /MEDIA/UART.PortUi=P1:12209;P2:12224
- ◀ **pr** /MEDIA/UART.P1=Local RS-232
- ◀ **pr** /MEDIA/UART.P2=TPS in RS-232

SET command

The **SET** command can be used to modify the value of a property. Use the dot character (.) when addressing the property:

- ▶ **SET** /MEDIA/VIDEO/01.TpgPattern=CYCLE
- ◀ **pw** /MEDIA/VIDEO/01.TpgPattern=CYCLE

CALL command

A method can be invoked by the **CALL** command. Use the colon character (:) when addressing the method:

- ▶ **CALL** /MEDIA/RELAY/P1:toggle(P1)
- ◀ **m0** /MEDIA/RELAY/P1:toggle

MAN command

The manual is a human readable text that describes the syntax and provides a hint for how to use the primitives. For every node, property and method in the tree there is a manual; type the **MAN** command to get the manual:

- ▶ **MAN** /MEDIA/VIDEO/01.Pwr5vMode
- ◀ **pm** /MEDIA/VIDEO/01.Pwr5vMode ["0" | "1" | "2"] 0 - Auto, 1 - Always On, 2 - Always Off

7.3.4. Prefix Summary

DEFINITION: The prefix is a 2-character long code that describes the type of the response.

The following prefixes are defined in the LW3 protocol:

Prefix	Description
n-	a node
nE	an error for a node
nm	a manual for a node
ns	symlink node
nv	virtual node
nr	remote node
pr	a read-only property
pw	read-write property
pm	a manual for the property
m-	a method
m0	a response after a success method execution
mF	a response after a failed method execution
mE	an error for a method
mm	a manual for a method
pE	an error for the property

7.3.5. Error Messages

There are several error messages defined in the LW3 protocol, all of them have a unique error number.

- ▶ **CALL** /MEDIA/VIDEO/XP:lock(IA)
- ◀ **mE** /MEDIA/VIDEO/XP:lock %E002:Not exist

7.3.6. Escaping

DEFINITION: An escape sequence is a sequence of characters that does not represent itself when used inside a character or string literal, but is translated into another character or a sequence of characters.

Property values and method parameters can contain characters that are used as control characters in the protocol. They must be escaped. The escape character is the backslash ('\') and escaping means injecting a backslash before the character that should be escaped (like in C language).

Control characters are the following: \{ \} # % () \r \n \t

The **original** message: **CALL** /MEDIA/UART/P1:sendMessage(Set(01))

The **escaped** message: **CALL** /MEDIA/UART/P1:sendMessage(Set\(01\))

7.3.7. Signature

DEFINITION: The signature is a four-digit-long hexadecimal value that can be optionally placed before every command to keep a command and the corresponding responses together as a group.

Each line is terminated with carriage return (Cr, '\r') and line feed (Lf, '\n') characters. In several cases the number of the lines in the response cannot be determined in advance, e.g. the client intends to receive the whole response and also wants to be sure that the received lines belong together and to the same command. In these cases a special feature, the 'signature' can be used. The response to that particular command will also be preceded by the signature, and the corresponding lines will be between brackets:

```
▶ 1700#GET /EDID.*
◀ {1700
◀ pr /EDID.EdidStatus=D1:E1
◀ m- /EDID:copy
◀ m- /EDID:delete
◀ m- /EDID:reset
◀ m- /EDID:switch
◀ m- /EDID:switchAll
◀ }
```

INFO: The lines of the signature are also Cr and Lf terminated.

7.3.8. Subscription

DEFINITION: Subscription to a node means that the user will get a notification if a property of the node changes.

A user can subscribe to any node. These notifications are asynchronous messages and are useful to keep the client application up to date, without having to periodically poll the node to detect a changed property. When the user does not want to be informed about the changes anymore, he can simply unsubscribe from the node.

ATTENTION! The subscriptions are handled separately for connections. Hence, if the connection is terminated, all registered subscriptions are deleted. After reopening a connection all subscribe commands have to be sent in order to get the notifications of the changes on that connection.

Subscribe to a Node

```
▶ OPEN /MEDIA/VIDEO
◀ o- /MEDIA/VIDEO
```

Subscribe to Multiple Nodes

```
▶ OPEN /MEDIA/VIDEO/*
◀ o- /MEDIA/VIDEO/*
```

Unsubscribe from a Node

```
▶ CLOSE /MEDIA/VIDEO
◀ c- /MEDIA/VIDEO
```

Get the Active Subscriptions

```
▶ OPEN
◀ o- /MEDIA/VIDEO
◀ o- /EDID
◀ o- /DISCOVERY
```

Unsubscribe from Multiple Nodes

```
▶ CLOSE /MEDIA/VIDEO/*
◀ c- /MEDIA/VIDEO/*
```

7.3.9. Notifications about the Changes of the Properties

When the value of a property is changed and the user is subscribed to the node that the property belongs to, an asynchronous notification is generated. This notification is called the 'change message'. The format of such a message is very similar to the response for the **GET** command:

```
◀ CHG /EDID.EdidStatus=F48:E1
```

A Short Example of How to Use the Subscription

There are two independent users controlling the device through two independent connections (**Connection #1** and **Connection #2**). The events in the rows occur after each other.

▶ OPEN /MEDIA/AUDIO/02	connection #1
◀ o- /MEDIA/AUDIO/02	
▶ GET /MEDIA/AUDIO/02.VolumePercent	connection #2
◀ pw /MEDIA/AUDIO/02.VolumePercent=100.00	
▶ GET /MEDIA/AUDIO/02.VolumePercent	
◀ pw /MEDIA/AUDIO/02.VolumePercent=100.00	
◀ SET /MEDIA/AUDIO/02.VolumePercent=50.00	
◀ pw /MEDIA/AUDIO/02.VolumePercent=50.00	
◀ CHG /MEDIA/AUDIO/02.VolumePercent=50.00	connection #1

Explanation: The first user (**Connection #1**) set a subscription to a node. Later the other user (**Connection #2**) made a change, and thanks to the subscription, the first user got a notification about the change.

7.3.10. Legend for the Control Commands

Format	Description
<in>	Input port number
<out>	Output port number
<port>	Input or output port number
<loc>	Location number
<parameter>	Specific property, which is defined and described in the command
<expression>	Batched parameters: the underline means that more expressions or parameters can be placed by using a semicolon, e.g. 01;02 or F27:U1;F47:U2
▶	Sent command
◀	Received response
.	Space character

7.4. System Commands

7.4.1. Querying the Product Name

The name of the product is a read-only parameter and cannot be modified.

Command and Response

- ▶ GET ./ProductName
- ◀ pr ./ProductName=<Product_name>

Example

- ▶ GET ./ProductName
- ◀ pr ./ProductName=HDMI-TPS-RX110AY-Plus

7.4.2. Setting the Device Label

ATTENTION! The device label can be changed to a custom text in the [Status](#) tab of the LDC software. This writable parameter is not the same as the ProductName parameter. [#devicelabel](#)

The default format of the device label is: LW_<product_name>_<serial_no>

Command and Response [#devicelabel #label](#)

- ▶ SET ./MANAGEMENT/UID/DeviceLabel=<Custom_name>
- ◀ pw ./MANAGEMENT/UID/DeviceLabel=<Custom_name>

The Device Label can be 39 character length and ASCII characters are allowed. Longer names are truncated.

Example

- ▶ SET ./MANAGEMENT/UID.DeviceLabel=RX110_Conference1
- ◀ pw ./MANAGEMENT/UID.DeviceLabel=RX110_Conference1

7.4.3. Querying the Serial Number

Command and Response

- ▶ GET ./SerialNumber
- ◀ pr ./SerialNumber=<serial_nr>

Example

- ▶ GET ./SerialNumber
- ◀ pr ./SerialNumber=87654321

7.4.4. Querying the Firmware Version

Command and Response [#firmwareversion](#)

- ▶ GET ./SYS/MB.FirmwareVersion
- ◀ pr ./SYS/MB.FirmwareVersion=<firmware_version>

Example

- ▶ GET ./SYS/MB.FirmwareVersion
- ◀ pr ./SYS/MB.FirmwareVersion=1.4.0b14

7.4.5. Identifying the Device

Calling the method results the blinking of the status LEDs for 10 seconds. The feature helps to identify the device itself in the rack shelf.

Command and Response [#identifyme](#)

- ▶ CALL ./MANAGEMENT/UI:identifyMe()
- ◀ m0 ./MANAGEMENT/UI:identifyMe=

Example

- ▶ CALL ./MANAGEMENT/UI:identifyMe()
- ◀ m0 ./MANAGEMENT/UI:identifyMe

7.4.6. Dark Mode

This command turns the LEDs on/off on the device.

Command and Response [#darkmode](#)

- ▶ SET ./MANAGEMENT/UI/DARKMODE.DarkModeEnable=<status>
- ◀ pw ./MANAGEMENT/UI/DARKMODE.DarkModeEnable=<status>

Parameters

Identifier	Parameter description	Value	Explanation
<status>	Status of the dark mode	true	Dark mode is enabled.
		false	Dark mode is disabled.

Example

- ▶ SET ./MANAGEMENT/UI/DARKMODE.DarkModeEnable=true
- ◀ pw ./MANAGEMENT/UI/DARKMODE.DarkModeEnable=true

7.4.7. Restarting the Device

The receiver can be restarted – the current connections (LAN, RS-232, USB) will be terminated.

Command and Response `#restart #reboot`

- ▶ CALL·/SYS:reset()
- ◀ m0·/SYS:reset=

Example

- ▶ CALL /SYS:reset()
- ◀ m0 /SYS:reset=

7.4.8. Restoring the Factory Default Settings

Command and Response `#factory`

- ▶ CALL·/SYS:factoryDefaults()
- ◀ m0·/SYS:factoryDefaults=

Example

- ▶ CALL /SYS:factoryDefaults()
- ◀ m0 /SYS:factoryDefaults=

The device is restarted, current connections are terminated, and the default settings are restored. See the complete list in the [Factory Default Settings](#) section.

7.4.9. Running a Macro

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

DEFINITION: A macro is a batch of pre-defined commands stored in the device. `#macro`

You can create your custom macros in a file, upload them to the device and run at any time. The uploading can be done over LDC, see the [Uploading New Macros into the Internal Device Configuration Preset](#) section. The following LW3 command is suitable only for running a macro.

Command and Response

- ▶ CALL·/CTRL/MACROS:run(<macro_name>)
- ◀ m0·/CTRL/MACROS:run

Example

- ▶ CALL /CTRL/MACROS:run(Macro1)
- ◀ m0 /CTRL/MACROS:run

7.5. Cleartext Login Protection

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

The cleartext login tool allows setting a password for login, thus any change in the device can be performed only after a successful login – coming from any control interface (RS-232, Ethernet, etc...). The login is valid until a TCP socket break in case of Ethernet connection. `#login`

ATTENTION! If the login is enabled, the miniweb is not available.

INFO: The login password is erased and the login is disabled when restoring the factory default values.

The following can be queried without login:

- ProductName
- PartNumber
- SerialNumber
- FirmwareVersion
- PackageVersion
- MacAddress

7.5.1. Setting the Login Password

Command and Response

- ▶ CALL·/LOGIN:setPassword(<password>)
- ◀ m0·/LOGIN:setPassword

Example

- ▶ CALL /LOGIN:setPassword(pr0t3ctED)
- ◀ m0 /LOGIN:setPassword

7.5.2. Logging into the Device

Command and Response

- ▶ CALL·/LOGIN:login(<password>)
- ◀ m0·/LOGIN:login

Example

- ▶ CALL /LOGIN:login(pr0t3ctED)
- ◀ m0 /LOGIN:login

After a successful login, the **LoggedIn** property becomes **true** and the LW3 tree is available.

7.5.3. Logging out of the Device

Command and Response

- ▶ CALL-/LOGIN:logout(<password>)
- ◀ m0-/LOGIN:logout

Example

- ▶ CALL /LOGIN:logout(pr0t3ctED)
- ◀ m0 /LOGIN:logout

After a successful logout, the **LoggedIn** property becomes **false** and the LW3 tree is protected.

7.5.4. Enabling/Disabling the Cleartext Login Function

ATTENTION! This property can be changed only, if the **LoggedIn** property is **true**.

Command and Response

- ▶ SET-/LOGIN:LoginEnable=<login_state>
- ◀ pw-/LOGIN.LoginEnable=<login_state>

Parameters

If the **<login_state>** parameter is **true** (or 1), the Cleartext login function is **enabled**, if the parameter is **false** (or 0), the function is **disabled**. Please note that the function can be enabled without setting a password by the **setPassword** method.

Example

- ▶ SET /LOGIN.LoginEnable=true
- ◀ pw /LOGIN.LoginEnable=true

7.6. Video Port Settings

INFO: Video port numbering can be found in the [Input/Output Port Numbering](#) section.

7.6.1. Querying the Status of Source Ports

Command and Response *#portstatus*

- ▶ GET·/MEDIA/VIDEO/XP.SourcePortStatus
- ◀ pr·/MEDIA/VIDEO/XP.SourcePortStatus=<in_state>


The response contains 5 ASCII characters for each port. The first character indicates the mute/lock state, the next four characters represent a 2-byte HEX code, showing the current state of the input ports.

Example

- ▶ GET /MEDIA/VIDEO/XP.SourcePortStatus
- ◀ pr /MEDIA/VIDEO/XP.SourcePortStatus=M00A

Parameters

Letter (Character 1)		
	Mute state	Lock state
T	Unmuted	Unlocked
L	Unmuted	Locked
M	Muted	Unlocked
U	Muted	Locked

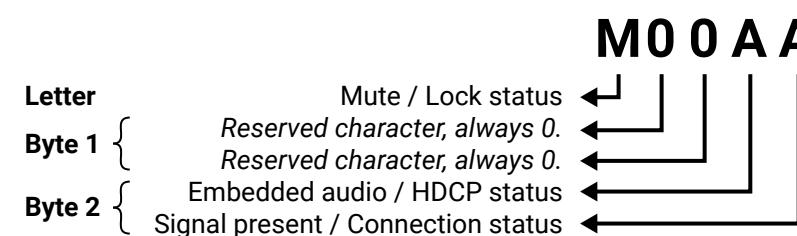

	Byte 1				Byte 2			
	Character 2		Character 3		Character 4		Character 5	
	BIT 7-6	BIT 5-4	BIT 3-2	BIT 1-0	BIT 7-6	BIT 5-4	BIT 3-2	BIT 1-0
	Reserved	Reserved	Reserved	Reserved	Embedded audio status	HDCP status	Signal present status	Connection status
00	Reserved	Reserved	Reserved	Reserved	Unknown			
01					Reserved			
10					No embedded audio	Not encrypted	No signal	Not connected
11					Embedded audio presents	Encrypted	Signal presents	Connected

The Most Common Received Port Status Responses

T00AA	T	0		0		A		A	
	Unlocked, Unmuted	0 0	0 0	0 0	0 0	1 0	1 0	1 0	1 0
	Reserved	Reserved	Reserved	Reserved	No embedded audio	Not encrypted	No signal	Not connected	

T00AB	T	0		0		A		B	
	Unlocked, Unmuted	0 0	0 0	0 0	0 0	1 0	1 0	1 0	1 1
		Reserved	Reserved	Reserved	Reserved	No embedded audio	Not encrypted	No signal	Connected

T00AF	T	0		0		A		F	
	Unlocked, Unmuted	0 0	0 0	0 0	0 0	1 0	1 0	1 1	1 1
		Reserved	Reserved	Reserved	Reserved	No embedded audio	Not encrypted	Signal presents	Connected

T00EF	T	0		0		E		F	
	Unlocked, Unmuted	0 0	0 0	0 0	0 0	1 1	1 0	1 1	1 1
		Reserved	Reserved	Reserved	Reserved	Embedded audio presents	Not encrypted	Signal presents	Connected

T00BF	T	0		0		B		F	
	Unlocked, Unmuted	0 0	0 0	0 0	0 0	1 0	1 1	1 1	1 1
	Reserved	Reserved	Reserved	Reserved	No embedded audio	Encrypted	Signal presents	Connected	

TOOFF	T	0		0		F		F	
	Unlocked, Unmuted	0 0	0 0	0 0	0 0	1 1	1 1	1 1	1 1
	Reserved	Reserved	Reserved	Reserved	Embedded audio presents	Encrypted	Signal presents	Connected	

7.6.2. Querying the Status of Destination Port

Command and Response `#portstatus`

- ▶ GET·/MEDIA/VIDEO/XP:DestinationPortStatus
- ◀ pr·/MEDIA/VIDEO/XP:DestinationPortStatus=<out_state>

Parameters

<out_state>: the response contains 5 ASCII characters for each port. The first character indicates the mute/lock state, the next 2-byte long HEX code shows the current state of the output port.

Example

- ▶ GET /MEDIA/VIDEO/XP:DestinationPortStatus
- ◀ pr /MEDIA/VIDEO/XP:DestinationPortStatus=M00BF

Legend

See the previous section.

Explanation

M	0		0		B		F	
Unlocked, Muted	0 0	0 0	0 0	0 0	1 0	1 1	1 1	1 1
Reserved	Reserved	Reserved	Reserved	Reserved	No embedded audio	Encrypted	Signal presents	Connected

7.6.3. Muting an Input

Command and Response `#mute`

- ▶ CALL·/MEDIA/VIDEO/XP:muteSource(<in>)
- ◀ m0·/MEDIA/VIDEO/XP:muteSource

Example

- ▶ CALL /MEDIA/VIDEO/XP:muteSource(I1)
- ◀ m0 /MEDIA/VIDEO/XP:muteSource

7.6.4. Unmuting an Input

Command and Response `#unmute`

- ▶ CALL·/MEDIA/VIDEO/XP:unmuteSource(<in>)
- ◀ m0·/MEDIA/VIDEO/XP:unmuteSource

Example

- ▶ CALL /MEDIA/VIDEO/XP:unmuteSource(I1)
- ◀ m0 /MEDIA/VIDEO/XP:unmuteSource

7.6.5. Locking an Input

Command and Response `#lock`

- ▶ CALL·/MEDIA/VIDEO/XP:lockSource(<in>)
- ◀ m0·/MEDIA/VIDEO/XP:lockSource

Example

- ▶ CALL /MEDIA/VIDEO/XP:lockSource(I1)
- ◀ m0 /MEDIA/VIDEO/XP:lockSource

7.6.6. Unlocking an Input

Command and Response `#unlock`

- ▶ CALL·/MEDIA/VIDEO/XP:unlockSource(<in>)
- ◀ m0·/MEDIA/VIDEO/XP:unlockSource

Example

- ▶ CALL /MEDIA/VIDEO/XP:unlockSource(I1)
- ◀ m0 /MEDIA/VIDEO/XP:unlockSource

7.6.7. Muting an Output

Command and Response `#mute`

- ▶ CALL·/MEDIA/VIDEO/XP:muteDestination(<out>)
- ◀ m0·/MEDIA/VIDEO/XP:muteDestination

Example

- ▶ CALL /MEDIA/VIDEO/XP:muteDestination(O1)
- ◀ m0 /MEDIA/VIDEO/XP:muteDestination

7.6.8. Unmuting an Output

Command and Response `#unmute`

- ▶ CALL·/MEDIA/VIDEO/XP:unmuteDestination(<out>)
- ◀ m0·/MEDIA/VIDEO/XP:unmuteDestination

Example

- ▶ CALL /MEDIA/VIDEO/XP:unmuteDestination(O1)
- ◀ m0 /MEDIA/VIDEO/XP:unmuteDestination

7.6.9. Locking an Output

Command and Response #lock

- ▶ CALL·/MEDIA/VIDEO/XP:lockDestination(<out>)
- ◀ m0·/MEDIA/VIDEO/XP:lockDestination

Example

- ▶ CALL /MEDIA/VIDEO/XP:lockDestination(01)
- ◀ m0 /MEDIA/VIDEO/XP:lockDestination

7.6.10. Unlocking an Output

Command and Response #unlock

- ▶ CALL·/MEDIA/VIDEO/XP:unlockDestination(<out>)
- ◀ m0·/MEDIA/VIDEO/XP:unlockDestination

Example

- ▶ CALL /MEDIA/VIDEO/XP:unlockDestination(01)
- ◀ m0 /MEDIA/VIDEO/XP:unlockDestination

7.6.11. HDCP Setting (Input Port)

HDCP capability can be enabled/disabled on the input ports, thus non-encrypted content can be seen on a non-HDCP compliant display. See more information in the [HDCP Management](#) section.

Command and Response #hdcp

- ▶ SET·/MEDIA/VIDEO/<in>.HdcpEnable=<logical_value>
- ◀ pw·/MEDIA/VIDEO/<in>.HdcpEnable=<logical_value>

Parameters

Identifier	Parameter description	Value	Parameter value
<logical_value>	HDCP enable/disable setting	true	HDCP encryption is enabled.
		false	HDCP encryption is disabled.

Example

- ▶ SET /MEDIA/VIDEO/I1.HdcpEnable=false
- ◀ pw /MEDIA/VIDEO/I1.HdcpEnable=false

7.6.12. HDCP Setting (Output Port)

HDCP capability can be set to Auto/Always on the output ports, thus non-encrypted content can be transmitted to a non-HDCP compliant display. See more information in the [HDCP Management](#) section.

Command and Response #hdcp

- ▶ SET·/MEDIA/VIDEO/<out>.HdcpModeSetting=<HDCP_mode>
- ◀ pw·/MEDIA/VIDEO/<out>.HdcpModeSetting=<HDCP_mode>

Parameters

Identifier	Parameter description	Value	Parameter value
<HDCP_mode>	HDCP mode	0	Auto
		1	Always

Example

- ▶ SET /MEDIA/VIDEO/01.HdcpModeSetting=0
- ◀ pw /MEDIA/VIDEO/01.HdcpModeSetting=0

7.6.13. Test Pattern Generator Mode

The output port can send a special image towards the sink device for testing purposes. The setting is available on the input ports with the parameters listed below.

Command and Response #testpattern

- ▶ SET·/MEDIA/VIDEO/<out>.TpgMode=<mode>
- ◀ pw·/MEDIA/VIDEO/<out>.TpgMode=<mode>

Parameters

Identifier	Parameter description	Value	Parameter value
<mode>	Test pattern generator mode	0	Always off: the test pattern is not displayed on the output.
		1	Always on: the test pattern is displayed on the output.
		2	Auto: the test pattern is displayed if there is no signal on the input port.

Example

- ▶ SET /MEDIA/VIDEO/01.TpgMode=2
- ◀ pw /MEDIA/VIDEO/01.TpgMode=2

7.6.14. Test Pattern Generator Clock Source

Command and Response

- ▶ SET·/MEDIA/VIDEO/<out>.TpgClockSource=<clock_frequency>
- ◀ pw·/MEDIA/VIDEO/<out>.TpgClockSource=<clock_frequency>

Parameters

Identifier	Parameter description	Value	Parameter value
<clock_frequency>	Clock frequency	480	480p
		576	576p
		EXT	External clock (from actual TMDS source)


Example

- ▶ SET /MEDIA/VIDEO/01.TpgClockSource=576
- ◀ pw /MEDIA/VIDEO/01.TpgClockSource=576

7.6.15. Test Pattern Setting

Command and Response

- ▶ SET·/MEDIA/VIDEO/<out>.TpgPattern=<pattern>
- ◀ pw·/MEDIA/VIDEO/<out>.TpgPattern=<pattern>

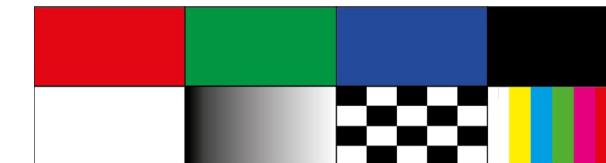

Parameters

Identifier	Parameter description	Value	Parameter value
<pattern>	The test pattern displayed on the sink device	RED	Red
		GREEN	Green
		BLUE	Blue
		BLACK	Black
		WHITE	White
		RAMP	Ramp
		CHESS	Chess
		BAR	Bar
		CYCLE	Cycle setting means all the patterns are changed sequentially approx. every 2 seconds

Example

- ▶ SET /MEDIA/VIDEO/01.TpgPattern=GREEN
- ◀ pw /MEDIA/VIDEO/01.TpgPattern=GREEN

7.6.16. HDMI Mode Settings (Output Port)

Command and Response #hdmiMode

- ▶ SET·/MEDIA/VIDEO/<out>.HdmiModeSetting=<mode>
- ◀ pw·/MEDIA/VIDEO/<out>.HdmiModeSetting=<mode>

Parameters

Identifier	Parameter description	Value	Parameter value
<mode>	HDMI mode	0	Auto
		1	DVI
		2	HDMI

Example

- ▶ SET /MEDIA/VIDEO/01.HdmiModeSetting=2
- ◀ pw /MEDIA/VIDEO/01.HdmiModeSetting=2

7.6.17. Querying the Recent TPS Mode

Command and Response #tpsMode

- ▶ GET·/REMOTE/<port>.tpsMode
- ◀ pr·/REMOTE/<port>.tpsMode=<TPS_mode>

Parameters

Identifier	Parameter description	Value	Parameter value
<TPS_mode>	TPS mode	A	Auto
		H	HDBaseT
		L	Long reach
		1	LPPF1
		2	LPPF2

Example

- ▶ GET /REMOTE/S1.tpsMode
- ◀ pr /REMOTE/S1.tpsMode=H

See more information about TPS modes in the [TPS Interface](#) section.

7.6.18. TPS Mode Settings

Command and Response

- ▶ SET /REMOTE/<port>.tpsModeSetting=<TPS_mode>
- ◀ pw /REMOTE/<port>.tpsModeSetting=<TPS_mode>

Parameters

Identifier	Parameter description	Value	Parameter value
<TPS_mode>	TPS mode	A	Auto
		H	HDBaseT
		L	Long reach
		1	LPPF1
		2	LPPF2

Example

- ▶ SET /REMOTE/S1.tpsModeSetting=A
- ◀ pw /REMOTE/S1.tpsModeSetting=A

See more information about TPS modes in the [TPS Interface](#) section.

7.7. Audio Port Settings

INFO: Audio port numbering can be found in the [Input/Output Port Numbering](#) section.

7.7.1. Query the Status of Source Ports

Command and Response `#portstatus`

- ▶ GET-/MEDIA/AUDIO/XP.SourcePortStatus
- ◀ pr-/MEDIA/AUDIO/XP.SourcePortStatus=<in_state>


The response contains 5 ASCII characters for each port. The first character indicates the mute/lock state, the next four characters represent a 2-byte HEX code, showing the current state of the input port.

Example

- ▶ GET /MEDIA/AUDIO/XP.SourcePortStatus
- ◀ pr /MEDIA/AUDIO/XP.SourcePortStatus=T000F

Legend:

Letter (Character 1)		
	Mute state	Lock state
T	Unmuted	Unlocked
L	Unmuted	Locked
M	Muted	Unlocked
U	Muted	Locked

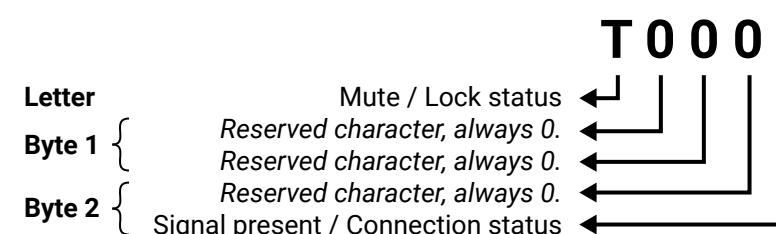

	Byte 1				Byte 2			
	Character 2		Character 3		Character 4		Character 5	
	BIT 7-6	BIT 5-4	BIT 3-2	BIT 1-0	BIT 7-6	BIT 5-4	BIT 3-2	BIT 1-0
	Reserved	Reserved	Reserved	Reserved	Reserved	Reserved	Signal present status	Connection status
00							Unknown	
01							Reserved	
10	Reserved	Reserved	Reserved	Reserved	Reserved	Reserved	No signal	Not connected
11							Signal presents	Connected

The Most Common Received Port Status Responses

T000A	T	0		0		0		A	
	Unlocked, Unmuted	0 0	0 0	0 0	0 0	0 0	0 0	1 0	1 0
		Reserved	Reserved	Reserved	Reserved	Reserved	Reserved	No signal	Not connected

T000B	T	0		0		0		B	
	Unlocked, Unmuted	0 0	0 0	0 0	0 0	0 0	0 0	1 0	1 1
		Reserved	Reserved	Reserved	Reserved	Reserved	Reserved	No signal	Connected

T000F	T	0		0		0		F	
	Unlocked, Unmuted	0 0	0 0	0 0	0 0	0 0	0 0	1 1	1 1
		Reserved	Reserved	Reserved	Reserved	Reserved	Reserved	Signal presents	Connected

Only for Phoenix audio port: Character 5 is C (11 00) which means signal is present, but the cable connection status is unknown. The explanation is that the Phoenix connector has no pin that can indicate the connection status, so this is always unknown.

T000C	T	0		0		0		C	
	Unlocked, Unmuted	0 0	0 0	0 0	0 0	0 0	0 0	1 1	0 0
		Reserved	Reserved	Reserved	Reserved	Reserved	Reserved	Signal presents	Unknown

7.7.2. Querying the Status of Destination Port

Command and Response `#portstatus`

- ▶ GET·/MEDIA/AUDIO/XP.DestinationPortStatus
- ◀ pr·/MEDIA/AUDIO/XP.DestinationPortStatus=<out1_state>;<out2_state>

The response contains 5 ASCII characters for each port. The first character indicates the mute/lock state, the next 2-byte long HEX code shows the current state of the output port.

Example

- ▶ GET /MEDIA/AUDIO/XP.DestinationPortStatus
- ◀ pr /MEDIA/AUDIO/XP.DestinationPortStatus=T000F;T000B

Legend

See the previous section.

Example and Explanation

T	0		0		0		F
Unlocked, Unmuted	0 0	0 0	0 0	0 0	0 0	1 1	1 1
Reserved	Reserved	Reserved	Reserved	Reserved	Reserved	Signal presents	Connected

7.7.3. Muting an Input

Command and Response `#mute`

- ▶ CALL·/MEDIA/AUDIO/XP:muteSource(<in>)
- ◀ m0·/MEDIA/AUDIO/XP:muteSource

Example

- ▶ CALL /MEDIA/AUDIO/XP:muteSource(I1)
- ◀ m0 /MEDIA/AUDIO/XP:muteSource

7.7.4. Unmuting an Input

Command and Response `#unmute`

- ▶ CALL·/MEDIA/AUDIO/XP:unmuteSource(<in>)
- ◀ m0·/MEDIA/AUDIO/XP:unmuteSource

Example

- ▶ CALL /MEDIA/AUDIO/XP:unmuteSource(I1)
- ◀ m0 /MEDIA/AUDIO/XP:unmuteSource

7.7.5. Locking an Input

Command and Response `#lock`

- ▶ CALL·/MEDIA/AUDIO/XP:lockSource(<in>)
- ◀ m0·/MEDIA/AUDIO/XP:lockSource

Example

- ▶ CALL /MEDIA/AUDIO/XP:lockSource(I1)
- ◀ m0 /MEDIA/AUDIO/XP:lockSource

7.7.6. Unlocking an Input

Command and Response `#unlock`

- ▶ CALL·/MEDIA/AUDIO/XP:unlockSource(<in>)
- ◀ m0·/MEDIA/AUDIO/XP:unlockSource

Example

- ▶ CALL /MEDIA/AUDIO/XP:unlockSource(I1)
- ◀ m0 /MEDIA/AUDIO/XP:unlockSource

7.7.7. Muting an Output

Command and Response `#mute`

- ▶ CALL·/MEDIA/AUDIO/XP:muteDestination(<out>)
- ◀ m0·/MEDIA/AUDIO/XP:muteDestination

Example

- ▶ CALL /MEDIA/AUDIO/XP:muteDestination(01)
- ◀ m0 /MEDIA/AUDIO/XP:muteDestination

7.7.8. Unmuting an Output

Command and Response `#unmute`

- ▶ CALL·/MEDIA/AUDIO/XP:unmuteDestination(<out>)
- ◀ m0·/MEDIA/AUDIO/XP:unmuteDestination

Example

- ▶ CALL /MEDIA/AUDIO/XP:unmuteDestination(01)
- ◀ m0 /MEDIA/AUDIO/XP:unmuteDestination

7.7.9. Locking an Output

Command and Response #lock

- ▶ CALL·/MEDIA/AUDIO/XP:lockDestination(<out>)
- ◀ m0·/MEDIA/AUDIO/XP:lockDestination

Example

- ▶ CALL /MEDIA/AUDIO/XP:lockDestination(01)
- ◀ m0 /MEDIA/AUDIO/XP:lockDestination

7.7.10. Unlocking an Output

Command and Response #unlock

- ▶ CALL·/MEDIA/AUDIO/XP:unlockDestination(<out>)
- ◀ m0·/MEDIA/AUDIO/XP:unlockDestination

Example

- ▶ CALL /MEDIA/AUDIO/XP:unlockDestination(01)
- ◀ m0 /MEDIA/AUDIO/XP:unlockDestination

7.8. Analog Audio Output Settings

7.8.1. Volume Setting (dB)

Command and Response #analogaudio #volume

- ▶ SET·/MEDIA/AUDIO/<out>.VolumedB=<level>
- ◀ pw·/MEDIA/AUDIO/<out>.VolumedB=<level>

Parameters

Identifier	Parameter description	Value	Explanation
<level>	Setting the output volume (attenuation)	between -95.625 dB and 0 dB	Step is -0.375 dB. The value is rounded up if necessary, to match with the step value.

Example

- ▶ SET /MEDIA/AUDIO/02.VolumedB=-15
- ◀ pw /MEDIA/AUDIO/02.VolumedB=-15.00

7.8.2. Volume Setting (dB) in Steps

Command and Response

- ▶ CALL·/MEDIA/AUDIO/<out>.stepVolumedB(<step>)
- ◀ m0·/MEDIA/AUDIO/<out>.stepVolumedB

Parameters

Identifier	Parameter description	Value	Explanation
<level>	Setting the output volume (attenuation)	between -95.625 dB and 0 dB	Step is -0.375 dB. The value is rounded up if necessary, to match with the step value.

Example

- ▶ CALL /MEDIA/AUDIO/02.stepVolumedB(5)
- ◀ m0 /MEDIA/AUDIO/02.stepVolumedB

7.8.3. Volume Setting (Percent)

Command and Response

- ▶ SET·/MEDIA/AUDIO/<out>.VolumePercent=<percent>
- ◀ pw·/MEDIA/AUDIO/<out>.VolumePercent=<percent>

Parameters

Identifier	Parameter description	Value	Explanation
<level>	Setting the output volume (attenuation)	between 100% and 0%	Step is 1%. The value is rounded up if necessary, to match with the step value.

Example

- ▶ SET /MEDIA/AUDIO/02.VolumePercent=50
- ◀ pw /MEDIA/AUDIO/02.VolumePercent=50

7.8.4. Volume Setting (Percent) in Steps

Command and Response

- ▶ CALL·/MEDIA/AUDIO/<out>.stepVolumePercent(<percent>)
- ◀ pw·/MEDIA/AUDIO/<out>.stepVolumePercent

Parameters

Identifier	Parameter description	Value	Explanation
<level>	Setting the output volume (attenuation)	between 100% and 0%	Step is 1%. The value is rounded up if necessary, to match with the step value.

Example

- ▶ CALL /MEDIA/AUDIO/02.stepVolumePercent(15)
- ◀ m0 /MEDIA/AUDIO/02.stepVolumePercent

7.8.5. Balance Setting

Command and Response `#balance`

- ▶ `SET·/MEDIA/AUDIO/<out>.Balance=<level>`
- ◀ `pw·/MEDIA/AUDIO/<out>.Balance=<level>`

Parameters

Identifier	Parameter description	Value	Explanation
<code><level></code>	Setting the balance	between -100. and 100	Step is 1. -100 means balanced to left, 0 is center (default), 100 means balanced to right.

Example

- ▶ `SET /MEDIA/AUDIO/02.Balance=0`
- ◀ `pw /MEDIA/AUDIO/02.Balance=0`

7.8.6. Balance Setting in Steps

Command and Response

- ▶ `CALL·/MEDIA/AUDIO/<out>.stepBalance(<level>)`
- ◀ `m0·/MEDIA/AUDIO/<out>.stepBalance`

Parameters

Identifier	Parameter description	Value	Explanation
<code><level></code>	Setting the balance	between -100. and 100	Step is 1. -100 means balanced to left, 0 is center (default), 100 means balanced to right.

Example

- ▶ `CALL /MEDIA/AUDIO/02.stepBalance(1)`
- ◀ `m0 /MEDIA/AUDIO/02.stepBalance`

7.9. Event Manager Basics

The graphical interface of the Event Manager can be found in the LDC, which allows creating any kind of Events. In certain cases, the Events have to be arranged or modified by LW3 commands from another device. These commands are detailed in the coming sections.

7.9.1. How to arrange an Event?

The following are necessary to have a successful event:

- Defining the **Condition**
- Defining the **Action**
- Setting the **Delay** (optional)
- Name the Event and set to **Enabled**. (Setting the Event to **Enabled** as the last step is recommended.)

Command and Response

- ▶ SET·/EVENTS/E<loc>.Condition=<expression>
- ◀ pw·/EVENTS/E<loc>.Condition=<expression>

Parameters

The structure of the <expression> is: <node_path>.<property>=<value>.

Example 1 – property changes to a set value

- ▶ SET /EVENTS/E1.Condition=/MEDIA/VIDEO/I1.SignalPresent=1
- ◀ pw /EVENTS/E1.Condition=/MEDIA/VIDEO/I1.SignalPresent=1

The Condition is fulfilled if the **SignalPresent** property changes to '1'.

Example 2 – property changes anything but the set value

In some cases, the opposite is necessary: when the property does **not** equal with the value. If you need so, the **ConditionInverted** property must be set to **true**:

- ▶ SET /EVENTS/E2.Condition=/MEDIA/VIDEO/O1.ConnectedSource=I1
- ◀ pw /EVENTS/E2.Condition=/MEDIA/VIDEO/O1.ConnectedSource=I1
- ▶ SET /EVENTS/E2.ConditionInverted=true
- ◀ pw /EVENTS/E2.ConditionInverted=true

The Condition is fulfilled if the **ConnectedSource** property does not equal with 'I1' (in other words: if other input port is connected to O1 than I1).

Example 3 – property changes to anything

- ▶ DIFFERENCE: This feature is available from FW package v1.5.0b3.

When it is not the property value that matters, but the change of the property value, the change can be set as a condition. In this case, put a ? character to the end of the desired property:

- ▶ SET /EVENTS/E3.Condition=/MEDIA/VIDEO/O1.ConnectedSource?
- ◀ pw /EVENTS/E3.Condition=/MEDIA/VIDEO/O1.ConnectedSource?

If the **ConnectedSource** property changes (due to a crosspoint-switch), the set Condition is fulfilled.

7.9.2. Setting a Condition by Linking Another Condition

Command and Response

- ▶ SET·/EVENTS/E<loc>.Condition=<event_nr>
- ◀ pw·/EVENTS/E<loc>.Condition=<event_nr>

Parameters

The <event_nr> means the number (location) of the linked event without letter 'E'.

Example

- ▶ SET /EVENTS/E2.Condition=1
- ◀ pw /EVENTS/E2.Condition=1

The Condition of the E2 Event is set to be the same as set at E1 Event.

7.9.3. Setting a Condition by Linking More Conditions

- ▶ DIFFERENCE: This feature is available from FW package v1.5.0b3.

The first generation of the Event Manager is able to sense a change (one condition), but in some cases that is not enough. The practical experience has shown there is a need to examine more conditions (up to four) as follows: if one of the set conditions becomes true (while the other conditions are fulfilled), then the set Action is launched.

Command and Response

- ▶ SET·/EVENTS/E<loc>.Condition=<event_nr>&<event_nr>&<event_nr>&<event_nr>
- ◀ pw·/EVENTS/E<loc>.Condition=<event_nr>&<event_nr>&<event_nr>&<event_nr>

Parameters

The <event_nr> parameters mean the numbers (locations) of the linked Events without letter 'E'. Up to four event numbers can be set.

Example

- ▶ SET /EVENTS/E4.Condition=1&2&3
- ◀ pw /EVENTS/E4.Condition=1&2&3

If two Conditions exist and the third is detected (changes to true), the Condition of E4 will be fulfilled and the Action of E4 will be launched.

TIPS AND TRICKS: You do not have to define Actions for E1, E2 and E3 Events and you can leave those **Disabled**.

7.9.4. Setting an Action by Specifying a Direct Path

Command and Response

- ▶ SET /EVENTS/E<loc>.Action=<expression>
- ◀ pw /EVENTS/E<loc>.Action=<expression>

Parameters

The structure of the <expression> is: <node_path>.<property_or_method>=<value>. Properties and methods are handled in the same way: dot (.) stands after the path in both cases, colon (:) is not used. Do not use brackets for methods. The <value> parameter is optional in case of certain methods.

Example

- ▶ SET /EVENTS/E1.Action=/MEDIA/AUDIO/02.VolumePercent=50
- ◀ pw /EVENTS/E1.Action=/MEDIA/AUDIO/02.VolumePercent=50

7.9.5. Setting an Action by Linking Another Action

Command and Response

- ▶ SET /EVENTS/E<loc>.Action=<event_nr>
- ◀ pw /EVENTS/E<loc>.Action=<event_nr>

Parameters

The <event_nr> means the number (location) of the linked event without letter 'E'.

Example

- ▶ SET /EVENTS/E2.Action=1
- ◀ pw /EVENTS/E2.Action=1

The Action of the E2 Event is set to be the same as set at E1 Event.

7.9.6. Setting an Action by Linking a Macro

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

Command and Response

- ▶ SET /EVENTS/E<loc>.Action=<macro_name>
- ◀ pw /EVENTS/E<loc>.Action=<macro_name>

Parameters

The <macro_name> means the name of the macro that can be seen in LDC (see the [Macros](#) section) or can be queried by the `GET /CTRL/MACROS .<id>` command.


Example

- ▶ SET /EVENTS/E1.Action=Macro1
- ◀ pw /EVENTS/E2.Action=Macro1

7.10. Event Manager Tool Kit

7.10.1. Setting the Delay

In most cases, the Action is performed immediately after the Condition is detected. But sometimes a delay is necessary between the Condition and the Action, thus the following delay options are defined:

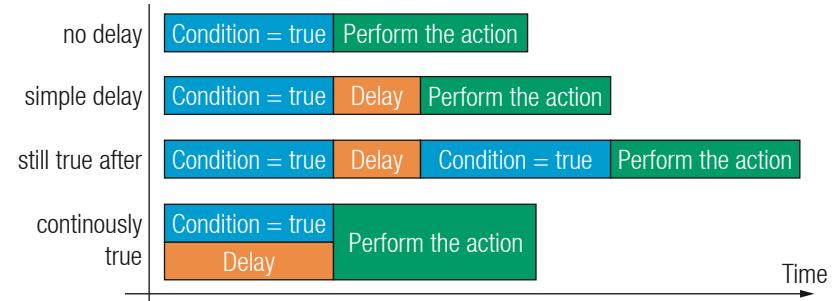

Command and Response (summary)

- ▶ SET /EVENTS/E<loc>.ConditionTimeout=<time>
- ◀ pw /EVENTS/E<loc>.ConditionTimeout=<time>
- ▶ SET /EVENTS/E<loc>.ConditionEndCheck=<true/false>
- ◀ pw /EVENTS/E<loc>.ConditionEndCheck=<true/false>
- ▶ SET /EVENTS/E<loc>.ConditionTimeoutContinuous=<true/false>
- ◀ pw /EVENTS/E<loc>.ConditionTimeoutContinuous=<true/false>

Parameters

The <time> parameter means seconds. Set the following properties for the desired delay type:

Delay type	Properties to set	Value	Result
no delay	/EVENTS/E<loc>.ConditionTimeout	0	The Action will be launched after the Condition is detected.
simple delay	/EVENTS/E<loc>.ConditionTimeout	<time>	If the Condition is detected, the action will be launched after the set time.
still true after	/EVENTS/E<loc>.ConditionTimeout	<time>	The Condition is fulfilled only if it is detected after the set time again.
	/EVENTS/E<loc>.ConditionEndCheck	true	
continuously true	/EVENTS/E<loc>.ConditionTimeout	<time>	The Condition is fulfilled only if it is existing continuously during the set time.
	/EVENTS/E<loc>.ConditionEndCheck	true	
	/EVENTS/E<loc>.ConditionTimeoutContinuous	true	

Example 1 (simple delay)

- ▶ SET /EVENTS/E1.ConditionTimeout=10
- ◀ pw /EVENTS/E1.ConditionTimeout=10

If the Condition is detected (the **ConditionDetect** property becomes **true**), the **ConditionTimeoutPending** property becomes **true**. 10 seconds later the **ConditionTimeoutPending** property becomes **false**, and the set Action is launched.

Example 2 ('still true after' delay type)

- ▶ SET /EVENTS/E1.ConditionTimeout=10
- ◀ pw /EVENTS/E1.ConditionTimeout=10
- ▶ SET /EVENTS/E1.ConditionTimeoutPending=true
- ◀ pw /EVENTS/E1.ConditionTimeoutPending=true

If the Condition is detected (the **ConditionDetect** property becomes **true**), the **ConditionTimeoutPending** property becomes **true**. 10 seconds later the Condition is checked again (the **ConditionTimeoutPending** property becomes **false**). If the Condition can be detected again (the **ConditionDetect** property becomes **true** again), the Condition is fulfilled and the set Action is launched.

Example 3 ('continuously true' delay type)

- ▶ SET /EVENTS/E1.ConditionTimeout=10
- ◀ pw /EVENTS/E1.ConditionTimeout=10
- ▶ SET /EVENTS/E1.ConditionTimeoutContinuous=true
- ◀ pw /EVENTS/E1.ConditionTimeoutContinuous=true

If the Condition is detected (the **ConditionDetect** property becomes **true**), the **ConditionTimeoutPending** property becomes **true**. If the Condition can be detected in the following 10 seconds continuously (the **ConditionDetect** property stays **true**), the Condition is fulfilled, the **ConditionTimeoutPending** property becomes **false**, and the set Action is launched.

7.10.2. Setting the Name of the Event**Command and Response**

- ▶ SET /EVENTS/E<loc>.Name=<string>
- ◀ pw /EVENTS/E<loc>.Name=<string>

Parameters

The **<string>** may contain letters (A-Z) and (a-z), numbers (0-9), special characters: hyphen (-), underscore (_), and space () up to 20 characters. Longer strings result in an error, unaccepted characters are skipped.

Example

- ▶ SET /EVENTS/E1.Name=Projector_ON
- ◀ pw /EVENTS/E1.Name=Projector_ON

7.10.3. Enabling/Disabling the Event**Command and Response**

- ▶ SET /EVENTS/E<loc>.Enabled=<true/false>
- ◀ pw /EVENTS/E<loc>.Enabled=<true/false>

Parameters

When the property value is **true** (or 1), the Action will be launched if the Condition is detected. If the property is **false** (or 0), the Action will not run, however, the Condition counter will be increased when detected.

Example

- ▶ SET /EVENTS/E1.Enabled=true
- ◀ pw /EVENTS/E1.Enabled=true

7.10.4. Triggering a Condition

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

This feature works like a condition is fulfilled. When a complex control system is built, a Condition may trigger numerous Actions. A typical example is when a system is powered on and the 'ready-to-use' state has to be loaded. In this case, there could be many actions that are based on the same condition. In order to reduce the number of the commands, you can trigger one 'key' condition, which starts the whole process.

Command and Response

- ▶ CALL /EVENTS/E<loc>:triggerCondition(1)
- ◀ m0 /EVENTS/E<loc>:triggerCondition

Example

- ▶ CALL /EVENTS/E1:triggerCondition(1)
- ◀ m0 /EVENTS/E1:triggerCondition

The Condition of Event1 is fulfilled, the set Action will be launched (after the delay if set).

7.10.5. Querying the Condition Counter

This property shows how many times the Condition has been detected and triggered altogether. The counter is reset at boot.

Command and Response

- ▶ GET /EVENTS/E<loc>.ConditionCount
- ◀ pw /EVENTS/E<loc>.ConditionCount=<num_value>

Example

- ▶ GET /EVENTS/E1.ConditionCount
- ◀ pw /EVENTS/E1.ConditionCount=5

7.10.6. Querying the Condition Trigger Counter

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

This property shows how many times the Condition has been triggered, but does not contain the number of real detections. The counter is reset at boot.

Command and Response

- ▶ GET·/EVENTS/E<loc>.ExternalConditionTriggerCount
- ◀ pw·/EVENTS/E<loc>.ExternalConditionTriggerCount=<num_value>

Example

- ▶ GET /EVENTS/E1.ExternalConditionTriggerCount
- ◀ pw /EVENTS/E1.ExternalConditionTriggerCount=2

7.10.7. Testing an Action

This tool is for launching the Action without detecting or triggering the Condition.

Command and Response

- ▶ CALL·/EVENTS/E<loc>:ActionTest(1)
- ◀ m0·/EVENTS/E<loc>:ActionTest

Example

- ▶ CALL /EVENTS/E1:ActionTest(1)
- ◀ m0 /EVENTS/E1:ActionTest

7.11. Variable-Management

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

Custom variables (up to 30 pcs.) can be defined in number or text format, which are available also in the Event Manager. The maximum length of a variable can be 15 characters and they are stored in a non-volatile memory, thus the value is kept in case of a reboot. The type of the variable (text or string) is determined automatically based on the value. If an operation cannot be performed (e.g. adding number value to a string-type variable), error will be the response. *#variables*

7.11.1. Value Assignment

Command and Response

- ▶ SET·/CTRL/VARS/V<loc>.Value=<value>
- ◀ pw·/CTRL/VARS/V<loc>.Value=<value>

Parameters

Parameter	Parameter description	Value	Value description
<loc>	The location of the variable	1-30	
<value>	The value of the variable	Custom	Length can be max 15 characters. Numeric variable is defined between -2147483648 and 2147483647.

Example

- ▶ SET /CTRL/VARS/V1.Value=120
- ◀ pw /CTRL/VARS/V1.Value=120

7.11.2. Addition and Subtraction (Add Method)

The value of a numeric variable can be increased by adding a positive value or it can be decreased by adding a negative value. Minimum and maximum values can be defined as limits.

Command and Response

- ▶ CALL·/CTRL/VARS/V<loc>.add(<operand>;<min>;<max>)
- ◀ m0·/CTRL/VARS/V<loc>.add

Parameters

Parameter	Parameter description	Value	Value description
<loc>	The location of the variable	1-30	
<operand>	The value that is added to the variable	Integer	Negative value is also accepted
<min>	The lowest allowed value (optional)	Integer	Negative value is also accepted
<max>	The highest allowed value (optional)	Integer	Negative value is also accepted

If the value of the variable is higher or equal to <max>, the new value will be <max>. Likewise, in case of <min> setting: if the value of the variable is lower or equal to <min>, the new value will be <min>.

Examples

Change messages (CHG) can be seen after each response for the better understanding, which are not part of the command, but they can be set as described in the [Subscription](#) section.

Example 1 – addition

- ▶ GET /CTRL/VARS/V1.Value
- ◀ pw /CTRL/VARS/V1.Value=6
- ▶ CALL /CTRL/VARS/V1:add(1)
- ◀ m0 /CTRL/VARS/V1:add
- ◀ CHG /CTRL/VARS/V1.Value=7
- ▶ CALL /CTRL/VARS/V1:add(1)
- ◀ m0 /CTRL/VARS/V1:add
- ◀ CHG /CTRL/VARS/V1.Value=8
- ▶ CALL /CTRL/VARS/V1:add(2)
- ◀ m0 /CTRL/VARS/V1:add
- ◀ CHG /CTRL/VARS/V1.Value=10

Example 2 – subtraction

- ▶ GET /CTRL/VARS/V1.Value
- ◀ pw /CTRL/VARS/V1.Value=10
- ▶ CALL /CTRL/VARS/V1:add(-2)
- ◀ m0 /CTRL/VARS/V1:add
- ◀ CHG /CTRL/VARS/V1.Value=8
- ▶ CALL /CTRL/VARS/V1:add(-2)
- ◀ m0 /CTRL/VARS/V1:add
- ◀ CHG /CTRL/VARS/V1.Value=6
- ▶ CALL /CTRL/VARS/V1:add(-10)
- ◀ m0 /CTRL/VARS/V1:add
- ◀ CHG /CTRL/VARS/V1.Value=-4

Example 3 – addition with 'max' value

- ▶ GET /CTRL/VARS/V1.Value
- ◀ pw /CTRL/VARS/V1.Value=16
- ▶ CALL /CTRL/VARS/V1:add(2;10;20)
- ◀ m0 /CTRL/VARS/V1:add
- ◀ CHG /CTRL/VARS/V1.Value=18
- ▶ CALL /CTRL/VARS/V1:add(2;10;20)
- ◀ m0 /CTRL/VARS/V1:add
- ◀ CHG /CTRL/VARS/V1.Value=20
- ▶ CALL /CTRL/VARS/V1:add(2;10;20)
- ◀ m0 /CTRL/VARS/V1:add
- ◀ CHG /CTRL/VARS/V1.Value=20

Example 4 – subtraction with 'min' value

- ▶ GET /CTRL/VARS/V1.Value
- ◀ pw /CTRL/VARS/V1.Value=14
- ▶ CALL /CTRL/VARS/V1:add(-2;10;20)
- ◀ m0 /CTRL/VARS/V1:add
- ◀ CHG /CTRL/VARS/V1.Value=12
- ▶ CALL /CTRL/VARS/V1:add(-2;10;20)
- ◀ m0 /CTRL/VARS/V1:add
- ◀ CHG /CTRL/VARS/V1.Value=10
- ▶ CALL /CTRL/VARS/V1:add(-2;10;20)
- ◀ m0 /CTRL/VARS/V1:add
- ◀ CHG /CTRL/VARS/V1.Value=10

7.11.3. Addition and Subtraction (Cycle Method)

The value of a numeric variable can be increased by adding a positive value or it can be decreased by adding a negative value. Minimum and maximum values can be defined as limits. This method has the feature that if the value hits the limit (min/max), the value will be stepped to the other end of the interval.

Command and Response

- ▶ CALL /CTRL/VARS/V<loc>:cycle(<operand>;<min>;<max>)
- ◀ m0 /CTRL/VARS/V<loc>:cycle

Parameters

Parameter	Parameter description	Value	Value description
<loc>	The location of the variable	1-30	
<operand>	The value that is added to the variable	Integer	Negative value is also accepted
<min>	The lowest allowed value (optional)	Integer	Negative value is also accepted
<max>	The highest allowed value (optional)	Integer	Negative value is also accepted

If the calculated value is beyond the limit (min/max), the value will be stepped to the other end of the interval.

Examples

Change messages (CHG) can be seen after each response for the better understanding, which are not part of the command, but they can be set as described in the [Subscription](#) section.

Example 1 – addition

- ▶ GET /CTRL/VARS/V1.Value
- ◀ pw /CTRL/VARS/V1.Value=18
- ▶ CALL /CTRL/VARS/V1:cycle(1;10;20)
- ◀ m0 /CTRL/VARS/V1:cycle
- ◀ CHG /CTRL/VARS/V1.Value=19
- ▶ CALL /CTRL/VARS/V1:cycle(1;10;20)
- ◀ m0 /CTRL/VARS/V1:cycle
- ◀ CHG /CTRL/VARS/V1.Value=20
- ▶ CALL /CTRL/VARS/V1:cycle(1;10;20)
- ◀ m0 /CTRL/VARS/V1:cycle
- ◀ CHG /CTRL/VARS/V1.Value=10
- ▶ CALL /CTRL/VARS/V1:cycle(1;10;20)
- ◀ m0 /CTRL/VARS/V1:cycle
- ◀ CHG /CTRL/VARS/V1.Value=10
- ▶ CALL /CTRL/VARS/V1:cycle(1;10;20)
- ◀ m0 /CTRL/VARS/V1:cycle
- ◀ CHG /CTRL/VARS/V1.Value=11

Example 2 – subtraction

- ▶ GET /CTRL/VARS/V1.Value
- ◀ pw /CTRL/VARS/V1.Value=13
- ▶ CALL /CTRL/VARS/V1:cycle(-2;10;20)
- ◀ m0 /CTRL/VARS/V1:cycle
- ◀ CHG /CTRL/VARS/V1.Value=11
- ▶ CALL /CTRL/VARS/V1:cycle(-2;10;20)
- ◀ m0 /CTRL/VARS/V1:cycle
- ◀ CHG /CTRL/VARS/V1.Value=20
- ▶ CALL /CTRL/VARS/V1:cycle(-2;10;20)
- ◀ m0 /CTRL/VARS/V1:cycle
- ◀ CHG /CTRL/VARS/V1.Value=20
- ▶ CALL /CTRL/VARS/V1:cycle(-2;10;20)
- ◀ m0 /CTRL/VARS/V1:cycle
- ◀ CHG /CTRL/VARS/V1.Value=18

7.11.4. Value Change with Intervals (Case)

This command can be used to change the value of a variable if it fits in any of the defined intervals.

Command and Response

- ▶ CALL /CTRL/VARS/V<loc>:case(<min> <max> <val>);
- ◀ m0 /CTRL/VARS/V<loc>:case

Parameters

Parameter	Parameter description	Value
<loc>	The location of the variable	1-30
<min>	The lowest value of the interval	Integer
<max>	The highest value of the interval	Integer
<val>	The new value that will be valid if the current value is in the interval	Integer

The parameters are divided by a space character, and the interval groups are divided by semicolons. Up to 16 cases can be defined.

Examples

- ▶ CALL /CTRL/VARS/V1:case(10 20 15)
- ◀ m0 /CTRL/VARS/V1:case

A typical example is when two different ranges of values have to meet:

Incoming values: between 0 and 255 (e.g. the slider of a controller can have these values).

Outgoing values: between 0 and 100 (e.g. the controlled device accepts these values).

Defined cases:

	Min	Max	New value
Case 1	1	25	10
Case 2	26	50	20
Case 3	51	75	30
Case 4	76	100	40
Case 5	101	125	50
Case 6	126	150	60
Case 7	151	175	70
Case 8	176	200	80
Case 9	201	225	90
Case 10	226	255	100

The command looks like:

- ▶ CALL /CTRL/VARS/V1:case(1 25 10;26 50 20;51 75 30;76 100 40;101 125 50;126 150 60;151 175 70;176 200 80;201 225 90;226 255 100)
- ◀ m0 /CTRL/VARS/V1:case

7.11.5. Scan and Store

This command can be used to get the value (or a part of the value) of an LW3 property. The defined path will be scanned according to the pattern and the result will be the value of the variable (number or string type).

Command and Response

- ▶ CALL /CTRL/VARS/V<loc>:scanf(<path>.<property>,<pattern>)
- ◀ m0 /CTRL/VARS/V<loc>:scanf

Parameters

Parameter	Parameter description	Value
<loc>	The location of the variable	1-30
<path>.<property>	The LW3 property with node	
<pattern>	The pattern that scans the property for the desired result	see below

Pattern options

Pattern	Pattern description
%s	String of characters stopping at the first whitespace character
%<number>s	The next <number> of characters (string) stopping at the first whitespace
%c	One character
%<number>c	The next <number> of characters
%[<characters>]	Defined character set, specified between brackets
%[^<characters>]	Negated character set that will be skipped, specified between brackets
%*	Ignored part
<custom_text>	User-defined text

The patterns can be combined to get the desired result as shown in the examples.

ATTENTION! Do not forget to escape the % character as shown in the example below.

Examples

- ▶ CALL /CTRL/VARS/V1:scanf(/MEDIA/AUDIO/XP.SourcePortStatus;\%5c)
- ◀ m0 /CTRL/VARS/V1:scanf
- ▶ GET /CTRL/VARS/V1.Value
- ◀ pw /CTRL/VARS/V1.Value=T00AA

A simple pattern has been applied: we need the first five characters from the property value.

Further Examples

<path>.<property>	Property Value	<pattern>	Scanned result
/MANAGEMENT/STATUS.CpuTemperature	42 C; 0;75; 0;7	%s	42
/MANAGEMENT/STATUS.CpuFirmware	1.3.0b3 r32	%12s	1.3.0b3
/MEDIA/VIDEO/XP.DestinationPortStatus	T00AA;T00AF	%6c	T00AA
/MEDIA/UART/P1.Rs232Configuration	57600, 8N1	%*[^], %s	8N1
/MEDIA/AUDIO/XP.SourcePortStatus	T000A;T000B;T000F	%*6c%5c	T000B
/MANAGEMENT-NETWORK.HostName	lightware-00005031	lightware-%[0-9]	00005031

7.11.6. Reformatting a Value

The value of the variable can be changed by adding text as prefix and/or suffix.

ATTENTION! Think about the length of the value: 15 characters are allowed, the others are truncated.

Command and Response

- ▶ CALL·/CTRL/VARS/V<loc>:printf(<prefix>%s<postfix>)
- ◀ m0·/CTRL/VARS/V<loc>:printf

Parameters

Parameter	Parameter description	Value	Value description
<loc>	The location of the variable	1-30	
<prefix>	The text before the original value of the property (optional)	Custom	ASCII characters
%s	The original value of the variable		
<postfix>	The text following the original value of the property (optional)	Custom	ASCII characters

Example

- ▶ GET /CTRL/VARS/V1.Value
- ▶ pw /CTRL/VARS/V1.Value=01
- ▶ CALL /CTRL/VARS/V1:printf(PWR%s)
- ◀ m0 /CTRL/VARS/V1:printf
- ▶ GET /CTRL/VARS/V1.Value
- ◀ pw /CTRL/VARS/V1.Value=PWR01

The 'PWR' string has been inserted before the original value.

7.12. Ethernet Port Configuration

7.12.1. Querying the DHCP State

Command and Response #network #ipaddress #dhcp

- ▶ GET-/MANAGEMENT/NETWORK.DhcpEnabled
- ◀ pw-/MANAGEMENT/NETWORK.DhcpEnabled=<logical_value>

Parameters

Identifier	Parameter description	Value	Parameter value
<logical_value>	DHCP (dynamic IP address) setting	true	Dynamic IP address is set.
		false	Fix IP address is set.

Example

- ▶ GET /MANAGEMENT/NETWORK.DhcpEnabled
- ◀ pw /MANAGEMENT/NETWORK.DhcpEnabled=true

7.12.2. Changing the DHCP State

Command and Response

- ▶ SET-/MANAGEMENT/NETWORK.DhcpEnabled=<logical_value>
- ◀ pw-/MANAGEMENT/NETWORK.DhcpEnabled=<logical_value>

Parameters

See the previous section.

Example

- ▶ SET /MANAGEMENT/NETWORK.DhcpEnabled=false
- ◀ pw /MANAGEMENT/NETWORK.DhcpEnabled=false

7.12.3. Querying the IP Address

Command and Response

- ▶ GET-/MANAGEMENT/NETWORK.IpAddress
- ◀ pr-/MANAGEMENT/NETWORK.IpAddress=<IP_Address>

Example

- ▶ GET /MANAGEMENT/NETWORK.IpAddress
- ◀ pr /MANAGEMENT/NETWORK.IpAddress=192.168.0.100

7.12.4. Changing the IP Address (Static)

Command and Response

- ▶ SET-/MANAGEMENT/NETWORK.StaticIpAddress=<IP_address>
- ◀ pw-/MANAGEMENT/NETWORK.StaticIpAddress=<IP_address>

Example

- ▶ SET /MANAGEMENT/NETWORK.StaticIpAddress=192.168.0.85
- ◀ pw /MANAGEMENT/NETWORK.StaticIpAddress=192.168.0.85

7.12.5. Querying the Subnet Mask

Command and Response

- ▶ GET-/MANAGEMENT/NETWORK.NetworkMask
- ◀ pr-/MANAGEMENT/NETWORK.NetworkMask=<netmask>

Example

- ▶ GET /MANAGEMENT/NETWORK.NetworkMask
- ◀ pr /MANAGEMENT/NETWORK.NetworkMask=255.255.255.0

7.12.6. Changing the Subnet Mask (Static)

Command and Response

- ▶ SET-/MANAGEMENT/NETWORK.StaticNetworkMask=<netmask>
- ◀ pw-/MANAGEMENT/NETWORK.StaticNetworkMask=<netmask>

Example

- ▶ SET /MANAGEMENT/NETWORK.StaticNetworkMask=255.255.255.0
- ◀ pw /MANAGEMENT/NETWORK.StaticNetworkMask=255.255.255.0

7.12.7. Querying the Gateway Address

Command and Response

- ▶ GET-/MANAGEMENT/NETWORK.GatewayAddress
- ◀ pr-/MANAGEMENT/NETWORK.GatewayAddress=<gw_address>

Example

- ▶ GET /MANAGEMENT/NETWORK.GatewayAddress
- ◀ pr /MANAGEMENT/NETWORK.GatewayAddress=192.168.0.1

7.12.8. Changing the Gateway Address (Static)

Command and Response

- ▶ SET /MANAGEMENT/NETWORK.StaticGatewayAddress=<gw_address>
- ◀ pw /MANAGEMENT/NETWORK.StaticGatewayAddress=<gw_address>

Example

- ▶ SET /MANAGEMENT/NETWORK.StaticGatewayAddress=192.168.0.5
- ◀ pw /MANAGEMENT/NETWORK.StaticGatewayAddress=192.168.0.5

7.12.9. Querying the MAC Address

Command and Response

- ▶ GET /MANAGEMENT/NETWORK.MacAddress
- ◀ pr /MANAGEMENT/NETWORK.MacAddress=<MAC_address>

Example

- ▶ GET /MANAGEMENT/NETWORK.MacAddress
- ◀ pr /MANAGEMENT/NETWORK.MacAddress=A8:D2:36:00:43:12

7.12.10. Applying Network Settings

Calling the method applies all network settings to the device.

Command and Response

- ▶ CALL /MANAGEMENT/NETWORK.ApplySettings()
- ◀ m0 /MANAGEMENT/NETWORK.ApplySettings

Example

- ▶ CALL /MANAGEMENT/NETWORK.ApplySettings()
- ◀ m0 /MANAGEMENT/NETWORK.ApplySettings

7.13. Ethernet Tool Kit

7.13.1. Device Filter Based on MAC Address

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

You can create a list of network devices based on the MAC address that are allowed controlling the device, or querying parameters to/from the Lightware device. `#macfilter`

ATTENTION! If the device is installed in a network where it gets IP address from a DHCP server and you plan to use the MAC filtering, make sure the MAC address of the DHCP server is added to the white list. Otherwise, the device will not get an IP address and will be unreachable.

Command and Response

- ▶ SET /MANAGEMENT/MACFILTER.MACAddress<loc>=<MAC_address>;<receive>;<send>;<name>
- ◀ pw /MANAGEMENT/MACFILTER.MACAddress<loc>=<MAC_address>;<receive>;<send>;<name>

The filter is disabled by default. Set the **FilterEnable** property to **true** as shown in the example.

Parameters

Parameter	Parameter description	Values	Value description
<loc>	Location of the address	1-8	The default values of 1, 2 and 3 ensure that address resolution and device discovery continue to work after enabling the MAC filter
<MAC_address>	The MAC address of the device	Unique value	Hex format, divided by a colon
<receive>	Enable/disable the parameter querying option	false (or 0) true (or 1)	The device is not allowed to query parameters from the LW device The device is allowed to query parameters from the LW device
<send>	Enable/disable the parameter setting option	false (or 0) true (or 1)	The device is not allowed to change parameters in the LW device The device is allowed to change parameters in the LW device
<name>	Unique name for the better identification (optional)	Any string	Up to 5 ASCII characters (longer names are truncated)

Example

- ▶ SET /MANAGEMENT/MACFILTER/MACAddress4=(04:D4:C4:4D:01:43;1;Tech)
- ◀ pw /MANAGEMENT/MACFILTER/MACAddress4=(04:D4:C4:4D:01:43;1;Tech)
- ▶ SET /MANAGEMENT/MACFILTER.FilterEnable=true
- ◀ pw /MANAGEMENT/MACFILTER.FilterEnable=true

The new MAC address is saved into the 4th property with the name 'Tech', which may query/set parameters from/in the Lightware device. The **FilterEnable** property is set to **true**, thus the filter is enabled.

7.13.2. Blocking the LW2 Control Port

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

This command is for blocking the LW2 control port; it is an additional protection for the Cleartext login function.

Command and Response `#portblock`

- ▶ `SET /MANAGEMENT/SERVICEFILTER.Lw2Enabled=<port_mode>`
- ◀ `pw /MANAGEMENT/SERVICEFILTER.Lw2Enabled=<port_mode>`

Example

- ▶ `SET /MANAGEMENT/SERVICEFILTER.Lw2Enabled=false`
- ◀ `pw /MANAGEMENT/SERVICEFILTER.Lw2Enabled=false`

7.13.3. Blocking the HTTP Port

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

This command is for blocking the HTTP port (80); it is an additional protection for the Cleartext login function.

Command and Response

- ▶ `SET /MANAGEMENT/SERVICEFILTER.HttpEnabled=<port_mode>`
- ◀ `pw /MANAGEMENT/SERVICEFILTER.HttpEnabled=<port_mode>`

Example

- ▶ `SET /MANAGEMENT/SERVICEFILTER.HttpEnabled=true`
- ◀ `pw /MANAGEMENT/SERVICEFILTER.HttpEnabled=true`

7.13.4. Blocking Reception of HTTP Posts

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

This command is for blocking HTTP posts; it is an additional protection for the Cleartext login function.

Command and Response

- ▶ `SET /MANAGEMENT/SERVICEFILTER.HttpEnabled=<port_mode>`
- ◀ `pw /MANAGEMENT/SERVICEFILTER.HttpEnabled=<port_mode>`

Example

- ▶ `SET /MANAGEMENT/SERVICEFILTER.HttpEnabled=true`
- ◀ `pw /MANAGEMENT/SERVICEFILTER.HttpEnabled=true`

7.13.5. Powering on a Computer over Ethernet (Wake-on-LAN)

DIFFERENCE: This feature is available from FW package v1.5.0b3.

The well-known wake-on-lan feature (sending a magic Packet to the target PC) is available via the following command:

Command and Response

- ▶ `CALL /MEDIA/ETHERNET:wakeOnLan(MAC_address)`
- ◀ `m0 /MEDIA/ETHERNET:wakeOnLan`

Example

- ▶ `CALL /MEDIA/ETHERNET:wakeOnLan(AA:BB:CC:22:14:FF)`
- ◀ `m0 /MEDIA/ETHERNET:wakeOnLan`

Please make sure the feature is enabled in the target PC and it is powered (but switched off).

7.13.6. Setting the Host Name

DIFFERENCE: This feature is available from FW package v1.5.0b3.

The host name is a property that can be used instead of the IP address when connecting to the device. It is also suitable for finding in the Device Discovery window of the LDC, see more details in the [Add New Favorite Device](#) section. Furthermore, it can be used to open the [The Built-in Miniweb](#). If the IP address of the device is changing, the host name can be used as a fixed property.

Command and Response

- ▶ `SET /MANAGEMENT-NETWORK.HostName=<unique_name>`
- ◀ `pw /MANAGEMENT-NETWORK.HostName=<unique_name>`

Parameters

The `<unique_name>` can be 1-64 characters long and the following are allowed for naming: the elements of the English alphabet and numbers. Hyphen (-) and dot (.) is also accepted, except as last character.

Example

- ▶ `SET /MANAGEMENT-NETWORK.HostName=my-receiver`
- ◀ `pw /MANAGEMENT-NETWORK.HostName=my-receiver`

7.14. Ethernet Message Sending

The device can be used for sending a message to a certain IP:port address. The three different commands allow controlling the connected (third-party) devices.

7.14.1. Sending a TCP Message (ASCII-format)

The command is for sending a command message in ASCII-format. This method allows escaping the control characters.

Command and Response

- ▶ CALL·/MEDIA/ETHERNET:tcpMessage(<IP_address>:<port_no>=<message>)
- ◀ m0·/MEDIA/ETHERNET:tcpMessage

Example

- ▶ CALL /MEDIA/ETHERNET:tcpMessage(192.168.0.103:6107=C00)
- ◀ m0 /MEDIA/ETHERNET:tcpMessage

The 'C00' message is sent to the indicated IP:port address.

Example with HEX codes

- ▶ CALL /MEDIA/ETHERNET:tcpMessage(192.168.0.20:5555=C00\x0a\x0d)
- ◀ m0 /MEDIA/ETHERNET:tcpMessage

The 'C00' message with CrLf (Carriage return and Line feed) is sent to the indicated IP:port address. The \x sequence indicates the HEXA code; see more information in the [Escaping](#) section.

7.14.2. Sending a TCP Text (ASCII-format)

The command is for sending a text message in ASCII-format. This method **does not allow** escaping or inserting control characters.

Command and Response

- ▶ CALL·/MEDIA/ETHERNET:tcpText(<IP_address>:<port_no>=<text>)
- ◀ m0·/MEDIA/ETHERNET:tcpText

Example

- ▶ CALL /MEDIA/ETHERNET:tcpText(192.168.0.103:6107=pwr_on)
- ◀ m0 /MEDIA/ETHERNET:tcpText

The 'pwr_on' text is sent to the indicated IP:port address.

7.14.3. Sending a TCP Binary Message (HEX-format)

The command is for sending a binary message in Hexadecimal format. This method **does not require** escaping the control and non-printable characters.

Command and Response

- ▶ CALL·/MEDIA/ETHERNET:tcpBinary(<IP_address>:<port_no>=<HEX_message>)
- ◀ m0·/MEDIA/ETHERNET:tcpBinary

Example

- ▶ CALL /MEDIA/ETHERNET:tcpBinary(192.168.0.103:6107=0100000061620000cdcc2c40)
- ◀ m0 /MEDIA/ETHERNET:tcpBinary

The '0100000061620000cdcc2c40' message is sent to the indicated IP:port address.

INFO: There is no need to insert a space or other separator characters between the binary messages.

7.14.4. Sending a UDP Message (ASCII-format)

The command is for sending a UDP message in ASCII-format. This method allows escaping the control characters.

Command and Response

- ▶ CALL·/MEDIA/ETHERNET:udpMessage(<IP_address>:<port_no>=<message>)
- ◀ m0·/MEDIA/ETHERNET:udpMessage

Example

- ▶ CALL /MEDIA/ETHERNET:udpMessage(192.168.0.103:6107=C00)
- ◀ m0 /MEDIA/ETHERNET:udpMessage

The 'C00' message is sent to the indicated IP:port address.

Example with HEX codes

- ▶ CALL /MEDIA/ETHERNET:udpMessage(192.168.0.20:9988=C00\x0a\x0d)
- ◀ m0 /MEDIA/ETHERNET:udpMessage

The 'C00' message with CrLf (Carriage return and Line feed) is sent to the indicated IP:port address. The \x sequence indicates the HEXA code; see more information in the [Escaping](#) section.

7.14.5. Sending a UDP Text (ASCII-format)

The command is for sending a text message in ASCII-format via UDP-protocol. This method **does not allow** escaping or inserting control characters.

Command and Response

- ▶ CALL·/MEDIA/ETHERNET:udpText(<IP_address>:<port_no>=<text>)
- ◀ m0·/MEDIA/ETHERNET:udpText

Example

- ▶ CALL /MEDIA/ETHERNET:udpText(192.168.0.20:9988=open)
- ◀ m0 /MEDIA/ETHERNET:udpText

The 'open' text is sent to the indicated IP:port address.

7.14.6. Sending a UDP Binary Message (HEX-format)

The command is for sending a binary message in Hexadecimal format. This method **does not require** escaping the control and non-printable characters.

Command and Response

- ▶ CALL·/MEDIA/ETHERNET:udpBinary(<IP_address>:<port_no>=<HEX_message>)
- ◀ m0·/MEDIA/ETHERNET:udpBinary

Example

- ▶ CALL /MEDIA/ETHERNET:udpBinary(192.168.0.20:9988=433030)
- ◀ m0 /MEDIA/ETHERNET:udpBinary

The '433030' message is sent to the indicated IP:port address.

INFO: There is no need to insert a space or other separator characters between the binary messages.

7.15. HTTP Messaging

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

Http **post** and **put** messages can be sent from the Lightware device for more integration with third-party devices. [#http](#)

ATTENTION! This feature means posting or putting **HTTP** messages from the Lightware device to another device. Encrypted transmission (**HTTPS**) is not supported.

7.15.1. Setting the Target IP Address

Command and Response

- ▶ SET·/CTRL/HTTP/C1.ServerIP=<IP_address>
- ◀ pw·/CTRL/HTTP/C1.ServerIP=<IP_address>

Example

- ▶ SET /CTRL/HTTP/C1.ServerIP=192.168.0.220
- ◀ pw /CTRL/HTTP/C1.ServerIP=192.168.0.220

7.15.2. Setting the TCP Port

Command and Response

- ▶ SET·/CTRL/HTTP/C1.ServerPort=<port_no>
- ◀ pw·/CTRL/HTTP/C1.ServerPort=<port_no>

Example

- ▶ SET /CTRL/HTTP/C1.ServerPort=80
- ◀ pw /CTRL/HTTP/C1.ServerIP=80

7.15.3. Setting the Target Path

This property sets the path in the target device where the post/put message is to be sent.

Command and Response

- ▶ SET·/CTRL/HTTP/C1.File=<path>
- ◀ pw·/CTRL/HTTP/C1.File=<path>

Example

- ▶ SET /CTRL/HTTP/C1.File=/putxml
- ◀ pw /CTRL/HTTP/C1.File=/putxml

7.15.4. Setting the Message Header

Command and Response

- ▶ SET /CTRL/HTTP/C1.Header=<header_text>
- ◀ pw /CTRL/HTTP/C1.Header=<header_text>

Example

- ▶ SET /CTRL/HTTP/C1.Header=Host: 192.168.0.220\r\nContent-Type: text/xml\r\nAuthorization: Basic YWRtaW46TGlnaHR3YXJIMDE=
- ◀ pw /CTRL/HTTP/C1.Header=Host: 192.168.0.220\r\nContent-Type: text/xml\r\nAuthorization: Basic YWRtaW46TGlnaHR3YXJIMDE=

7.15.5. Sending a Post Message

Command and Response

- ▶ CALL /CTRL/HTTP/C1:post(<body_text>)
- ◀ m0 /CTRL/HTTP/C1:post

Example

- ▶ CALL /CTRL/HTTP/C1:post(<Command><Message><Send><Text>LI1R_P</Text></Send></Message></Command>)
- ◀ m0 /CTRL/HTTP/C1:post

7.15.6. Sending a Put Message

Command and Response

- ▶ CALL /CTRL/HTTP/C1:put(<body_text>)
- ◀ m0 /CTRL/HTTP/C1:put

Example

- ▶ CALL /CTRL/HTTP/C1:put(<Command><Message><Send><Text>LI1R_P</Text></Send></Message></Command>)
- ◀ m0 /CTRL/HTTP/C1:put

7.16. TCP Message Recognizer

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

This tool can be used to recognize messages coming from a TCP server. You can link an immediate event Action that is run when a message is recognized, but you can also use it in Event manager.

#tcprecognizer #message


Preparation

- Step 1. Set a TCP client in the Lightware device (three TCP clients can be run at the same time), set the properties of the target TCP server.
- Step 2. Set the **DelimiterHex** and the **TimeOut** settings for the proper message processing
- Step 3. Make sure the TCP/IP port is opened in the target device (think about Firewall settings in the network).
- Step 4. Connect to the TCP server.

Working Method

A message gets recognized from the incoming data if one of the following occurs:

- The set **DelimiterHex** is detected in the message, or
- The set **TimeOut** has passed since receiving the last data bit.

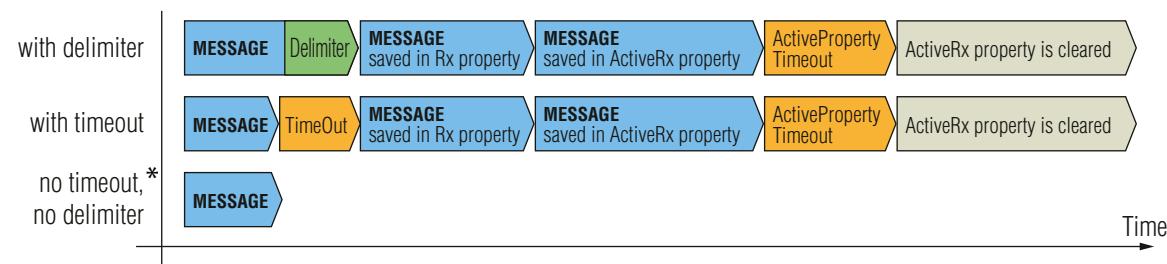

* In that case, the not-recognized data is kept in the memory (up to 128 bytes). If the **DelimiterHex** is detected later, or the **TimeOut** parameter is set in the meantime, the data appears in the **Rx**, **RxHex**, **Hash** and **ActiveRx**, **ActiveRxHex**, **ActiveRxHash** properties.

7.16.1. Setting the IP Address of the TCP Server

Command and Response

- ▶ SET /CTRL/TCP/C<loc>.ServerIP=<IP_address>
- ◀ pw /CTRL/TCP/C<loc>.ServerIP=<IP_address>

Parameters

The <loc> parameter can be 1, 2 or 3, as at most three TCP connections can be established at the same time.

Example

- ▶ SET /CTRL/TCP/C1.ServerIP=192.168.1.14
- ◀ pw /CTRL/TCP/C1.ServerIP=192.168.1.14

7.16.2. Setting the TCP/IP Port Number of the TCP Server

Command and Response

- ▶ SET·/CTRL/TCP/C<loc>.ServerPort=<port_no>
- ◀ pw·/CTRL/TCP/C<loc>.ServerPort=<port_no>

Example

- ▶ SET /CTRL/TCP/C1.ServerPort(4999)
- ◀ pw /CTRL/TCP/C1.ServerPort(4999)

7.16.3. Connecting to a TCP Server

Command and Response

- ▶ CALL·/CTRL/TCP/C<loc>:connect()
- ◀ m0·/CTRL/TCP/C<loc>:connect

Example

- ▶ CALL /CTRL/TCP/C1:connect()
- ◀ m0 /CTRL/TCP/C1:connect

7.16.4. Disconnecting from a TCP Server

Command and Response

- ▶ CALL·/CTRL/TCP/C<loc>:disconnect()
- ◀ m0·/CTRL/TCP/C<loc>:disconnect

Example

- ▶ CALL /CTRL/TCP/C1:disconnect()
- ◀ m0 /CTRL/TCP/C1:disconnect

7.16.5. Setting the Delimiter Hex

This property stores the delimiter that is between the messages (e.g. Cr, Lf, Space). The value has to be in hex format (e.g.0D, 0A, 20).

Command and Response


- ▶ SET·/CTRL/TCP/C<loc>.DelimiterHex=<delimiter>
- ◀ pw·/CTRL/TCP/C<loc>.DelimiterHex=<delimiter>

Parameters

The <delimiter> parameter can be max. 8 characters long (16 hex digits) in hex format.

Example

- ▶ SET /CTRL/TCP/C1.DelimiterHex=00
- ◀ pw /CTRL/TCP/C1.DelimiterHex=00

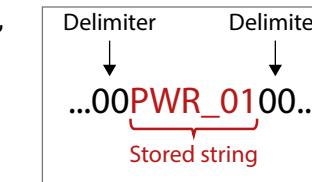

7.16.6. Setting the Timeout

When the set time has passed after the last received message and delimiter was not detected, the device saves the data into the **Rx**, **RxHex**, **Hash** properties. The timeout setting is useful if there is no special or easily defined delimiter in the incoming data, but there is a time gap between the messages.

Command and Response

- ▶ SET·/CTRL/TCP/C<loc>.TimeOut=<timeout>
- ◀ pw·/CTRL/TCP/C<loc>.TimeOut=<timeout>

Parameters

The <timeout> parameter sets the time value in milliseconds: 0 means the timeout is disabled, min. value is 10.

Example

- ▶ SET /CTRL/TCP/C1.TimeOut=20
- ◀ pw /CTRL/TCP/C1.TimeOut=20

7.16.7. Querying the Last Recognized Message (String)

The recognized message is stored as a string in the property below until the next recognized message or until the **clear()** method is called.

TIPS AND TRICKS: When this property is set as a condition in the Event Manager and the same strings follow each other, the action **will execute once**. (A Condition can be detected in Event Manager if a change happens. But if the same string is saved into the property after each other, it will not cause a change.)

Command and Response

- ▶ GET·/CTRL/TCP/C<loc>.Rx
- ◀ pr·/CTRL/TCP/C<loc>.Rx=<recognized_string>

Parameters

The <recognized_string> parameter can be max. 128 bytes long.

Example

- ▶ GET /CTRL/TCP/C1.Rx
- ◀ pr /CTRL/TCP/C1.Rx=PWR_off

7.16.8. Querying the Last Recognized Message (Hex)

The recognized message is stored as a hex message in the property below until the next recognized message or until the `clear()` method is called.

Command and Response

- ▶ GET-/CTRL/TCP/C<loc>.RxHex
- ◀ pr-/CTRL/TCP/C<loc>.RxHex=<recognized_hex_data>

Example

- ▶ GET /CTRL/TCP/C1.RxHex
- ◀ pr /CTRL/TCP/C1.RxHex=5057525F6F6666

7.16.9. Clearing the Last Recognized Stored Message

This method clears the stored recognized messages from `Rx`, `RxHex` and `Hash` properties.

Command and Response

- ▶ CALL-/CTRL/TCP/C<loc>.clear()
- ◀ m0-/CTRL/TCP/C<loc>.clear

Example

- ▶ CALL /CTRL/TCP/C1:clear()
- ◀ m0 /CTRL/TCP/C1:clear

7.16.10. Querying the Last Recognized Active Message (String)

The recognized data is stored in string in the property below **temporarily**. When the time set in the `ActiveTimeout` property has passed, the property is cleared.

TIPS AND TRICKS: When this property is set as a condition in the Event Manager, and the same strings follow each other, the action **will execute on every occasion**. (A Condition can be detected in Event Manager if a change happens. In this case, the string is stored in the property, and after the `ActiveTimeout` it will be cleared. If the same string is saved into the (empty) property, it will cause a change.)

Command and Response

- ▶ GET-/CTRL/TCP/C<loc>.ActiveRx
- ◀ pr-/CTRL/TCP/C<loc>.ActiveRx=<recognized_string>

Parameters

The `<recognized_string>` parameter is a max. 12-byte-long recognized data string.

Example

- ▶ GET /CTRL/TCP/C1.ActiveRx
- ◀ pr /CTRL/TCP/C1.ActiveRx=AudOut+

INFO: Please note that the property contains the string until the `ActivePropertyTimeout` has passed only.

7.16.11. Querying the Last Recognized Active Message (Hex)

Command and Response

- ▶ GET-/CTRL/TCP/C<loc>.ActiveRxHex
- ◀ pr-/CTRL/TCP/C<loc>.ActiveRxHex=<recognized_hex>

Parameters

The `<recognized_hex>` parameter is the recognized data in hex format.

Example

- ▶ GET /CTRL/TCP/C1.ActiveRxHex
- ◀ pr /CTRL/TCP/C1.ActiveRxHex=4175644F75742B00

INFO: Please note that the property contains the data until the `ActivePropertyTimeout` has passed only.

7.16.12. Setting the Active Timeout

This property is responsible for clearing the `ActiveRx`, `ActiveRxHex`, `ActiveHash` properties after the elapsed time. Default value is 50ms.

Command and Response

- ▶ SET-/CTRL/TCP/C<loc>.ActivePropertyTimeout=<a_timeout>
- ◀ pw-/CTRL/TCP/C<loc>.ActivePropertyTimeout=<a_timeout>

Parameters

The `<a_timeout>` parameter is the active timeout value (ms) between 0 and 255.

Example

- ▶ SET /CTRL/TCP/C1.ActivePropertyTimeout=255
- ◀ pw /CTRL/TCP/C1.ActivePropertyTimeout=255

7.16.13. Running an Immediate Event Action

When a message is recognized (DelimiterHex is detected in the message, or TimeOut has passed since receiving the last data bit) a specific Action of an Event can be run by the following command.

Command and Response

- ▶ SET-/CTRL/TCP/C<loc>.ActionTrigger=<event_nr>
- ◀ pw-/CTRL/TCP/C<loc>.ActionTrigger=<event_nr>

Parameters

The `<event_nr>` means the number (location) of the linked Event Action without letter 'E'. (There is no need to define a Condition in the linked Event.)

Example

- ▶ SET /CTRL/TCP/C1.ActionTrigger=5
- ◀ pw /CTRL/TCP/C1.ActionTrigger=5

7.17. RS-232 Port Configuration

INFO: Serial (local and link) port numbering can be found in the [Input/Output Port Numbering](#) section.

7.17.1. Setting the Protocol

Command and Response #rs232 #rs-232 #serial

- ▶ SET·/MEDIA/UART/<port>.ControlProtocol=<protocol>
- ◀ pw·/MEDIA/UART/<port>.ControlProtocol=<protocol>

Parameters

Identifier	Parameter description	Value	Parameter value
<protocol>	Control protocol which is applied on the selected serial port	0	LW2 protocol
		1	LW3 protocol

Example

- ▶ SET /MEDIA/UART/P1.ControlProtocol=1
- ◀ pw /MEDIA/UART/P1.ControlProtocol=1

7.17.2. Setting the BAUD Rate

Command and Response

- ▶ SET·/MEDIA/UART/<port>.Baudrate=<baudrate>
- ◀ pw·/MEDIA/UART/<port>.Baudrate=<baudrate>

Parameters

Identifier	Parameter description	Value	Parameter value
<baudrate>	BAUD rate value	0	4800
		1	7200
		2	9600
		3	14400
		4	19200
		5	38400
		6	57600
		7	115200

Example

- ▶ SET /MEDIA/UART/P1.Baudrate=2
- ◀ pw /MEDIA/UART/P1.Baudrate=2

7.17.3. Setting the Databits

Command and Response

- ▶ SET·/MEDIA/UART/<port>.DataBits=<databits>
- ◀ pw·/MEDIA/UART/<port>.DataBits=<databits>

Parameters

Identifier	Parameter description	Value	Parameter value
<databits>	Databits value	8	8
		9	9

Example

- ▶ SET /MEDIA/UART/P1.DataBits=8
- ◀ pw /MEDIA/UART/P1.DataBits=8

7.17.4. Setting the Stopbits

Command and Response

- ▶ SET·/MEDIA/UART/<port>.StopBits=<stopbits>
- ◀ pw·/MEDIA/UART/<port>.StopBits=<stopbits>

Parameters

Identifier	Parameter description	Value	Parameter value
<stopbits>	Stopbits value	0	1
		1	1,5
		2	2

Example

- ▶ SET /MEDIA/UART/P1.StopBits=0
- ◀ pw /MEDIA/UART/P1.StopBits=0

7.17.5. Setting the Parity

Command and Response

- ▶ SET·/MEDIA/UART/ <port>.Parity=<parity>
- ◀ pw·/MEDIA/UART/<port>.Parity=<parity>

Parameters

Identifier	Parameter description	Value	Parameter value
<parity>	Parity setting	0	None
		1	Odd
		2	Even

Example

- ▶ SET /MEDIA/UART/P1.Parity=0
- ◀ pw /MEDIA/UART/P1.Parity=0

7.17.6. RS-232 Operation Mode

Command and Response

- ▶ SET·/MEDIA/UART/<port>.Rs232Mode=<mode>
- ◀ pw·/MEDIA/UART/<port>.Rs232Mode=<mode>

Parameters

Identifier	Parameter description	Value	Parameter value
<stopbits>	Stopbits value	0	Pass-through
		1	Control
		2	Command injection

Example

- ▶ SET /MEDIA/UART/P1.Rs232Mode=1
- ◀ pw /MEDIA/UART/P1.Rs232Mode=1

7.17.7. Querying the Command Injection Mode

Command and Response

- ▶ GET·/MEDIA/UART/<port>.CommandInjectionStatus
- ◀ pr·/MEDIA/UART/<port>.CommandInjectionStatus=<logical_value>

Parameters

Identifier	Parameter description	Value	Parameter value
<logical_value>	Command injection mode status	true	Command injection mode is enabled.
		false	Command injection mode is disabled.

Example

- ▶ SET /MEDIA/UART/P1.CommandInjection=true
- ◀ pw /MEDIA/UART/P1.CommandInjectionEnable=true

7.17.8. Changing the Command Injection Mode

Command and Response

- ▶ SET·/MEDIA/UART/<port>.CommandInjectionEnable=<logical_value>
- ◀ pw·/MEDIA/UART/<port>.CommandInjectionEnable=<logical_value>

Parameters

Identifier	Parameter description	Value	Parameter value
<logical_value>	Command injection mode setting	true	Command injection mode is enabled.
		false	Command injection mode is disabled.

Example

- ▶ SET /MEDIA/UART/P1.CommandInjectionEnable=true
- ◀ pw /MEDIA/UART/P1.CommandInjectionEnable=true

ATTENTION! The local RS-232 and TPS serial link are mirrored. If you change the RS-232 mode on the P1 (local) port, P2 (TPS serial link) will also be changed.

7.18. RS-232 Message Sending

7.18.1. Sending a Message (ASCII-format) via RS-232

The command is for sending a command message in ASCII-format. This method **allows** escaping the control characters. For more information see the [Escaping](#) section.

Command and Response `#message`

- ▶ `CALL /MEDIA/UART/P1:sendMessage(<message>)`
- ◀ `m0 /MEDIA/UART/P1:sendMessage`

Example

- ▶ `CALL /MEDIA/UART/P1:sendMessage(PWR0)`
- ◀ `m0 /MEDIA/UART/P1:sendMessage`

The 'PWR0' message is sent out via the P1 serial port.

7.18.2. Sending a Text (ASCII-format) via RS-232

The command is for sending a command message in ASCII-format. This method **does not require** escaping the control and non-printable characters.

Command and Response

- ▶ `CALL /MEDIA/UART/P1:sendText(<message>)`
- ◀ `m0 /MEDIA/UART/P1:sendText`

Example

- ▶ `CALL /MEDIA/UART/P1:sendText(open)`
- ◀ `m0 /MEDIA/UART/P1:sendText`

The 'open' text is sent out via the P1 serial port.

7.18.3. Sending a Binary Message (HEX-format) via RS-232

The command is for sending a binary message in Hexadecimal format. This method **does not require** escaping the control and non-printable characters.

Command and Response

- ▶ `CALL /MEDIA/UART/P1:sendBinaryMessage(<message>)`
- ◀ `m0 /MEDIA/UART/P1:sendBinaryMessage`

Example

- ▶ `CALL /MEDIA/UART/P1:sendBinaryMessage(433030)`
- ◀ `m0 /MEDIA/UART/P1:sendBinaryMessage`

The '433030' message is sent out via the P1 serial port.

7.18.4. Using Hexadecimal Codes

Hexadecimal codes can be inserted in the ASCII message when using:

sendMessage command: `CALL /MEDIA/UART/P1:sendMessage(C00\x0D)`

tcpMessage command: `CALL /MEDIA/ETHERNET:tcpMessage(C00\x0D)`

udpMessage command: `CALL /MEDIA/ETHERNET:udpMessage(C00\x0D)`

- **C00:** the message.
- **\x:** indicates that the following is a hexadecimal code.
- **0D:** the hexadecimal code (Carriage Return)

7.19. RS-232 Message Recognizer


DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

This tool can be used to recognize messages coming from the RS-232 port. The message can be used as a Condition in Event manager and an Action can be defined for it.

Working Method

A message gets recognized from the incoming data if one of the following occurs:

- The set DelimiterHex is detected in the message, or
- The set TimeOut has been elapsed since receiving the last data bit.

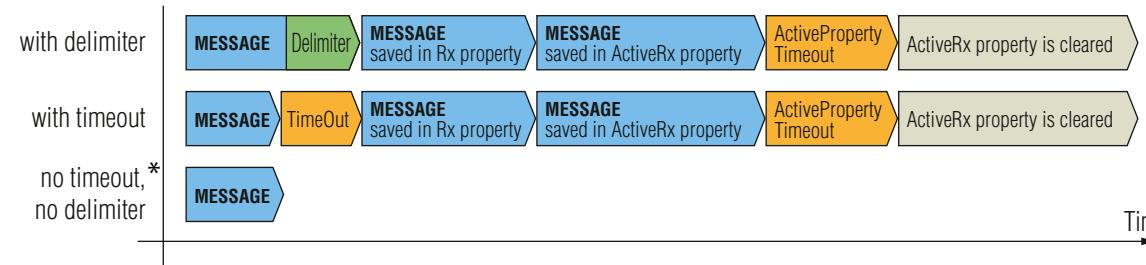

* In that case, the not-recognized data is kept in the memory (up to 128 bytes). If the **DelimiterHex** is detected later, or the **TimeOut** parameter is set meanwhile, the data appears in the **Rx**, **RxHex**, **Hash** and **ActiveRx**, **ActiveRxHex**, **ActiveRxHash** properties.

7.19.1. Enabling/Disabling the Recognizer

Command and Response

- ▶ **SET**·/MEDIA/UART/<serial_port>.RecognizerEnable=<recognizer_enable>
- ◀ **pw**·/MEDIA/UART/<serial_port>.RecognizerEnable=<recognizer_enable>

Parameters

Parameter	Parameter description	Values	Value description
<serial_port>	Serial port number	P1, P2	
<recognizer_enable>	Recognizer mode	true false	Recognizer is enabled Recognizer is disabled


Example

- ▶ **SET** /MEDIA/UART/P1.RecognizerEnable=true
- ◀ **pw** /MEDIA/UART/P1.RecognizerEnable=true

#recognizer #rs232recognizer #rs-232recognizer

7.19.2. Setting the Delimiter Hex

This property stores the delimiter that is between the messages (e.g. Cr, Lf, Space). The value has to be in hex format (e.g.0D, 0A, 20).

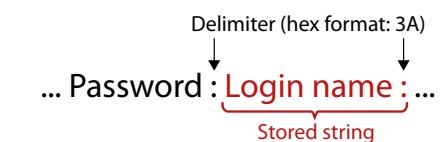

Command and Response

- ▶ **SET**·/MEDIA/UART/RECOGNIZER.DelimiterHex=<delimiter>
- ◀ **pw**·/MEDIA/UART/RECOGNIZER.DelimiterHex=<delimiter>

Parameters

The **<delimiter>** parameter can be max. 8 characters long (or 16 hex digits) in **hex** format.

Example

- ▶ **SET** /MEDIA/UART/RECOGNIZER.DelimiterHex=3a
- ◀ **pw** /MEDIA/UART/RECOGNIZER.DelimiterHex=3a

7.19.3. Setting the Timeout

When the set time has passed after the last received message and delimiter was not detected, the device saves the data into the **Rx**, **RxHex**, **Hash** properties. The timeout setting is useful if there is no special or easily defined delimiter in the incoming data, but there is a time gap between the messages.

Command and Response

- ▶ **SET**·/MEDIA/UART/RECOGNIZER.TimeOut=<timeout>
- ◀ **pw**·/MEDIA/UART/RECOGNIZER.TimeOut=<timeout>

Parameters

The **<timeout>** parameter sets the timeout value in milliseconds: 0 means the timeout is disabled, min. value is 10.

Example

- ▶ **SET** /MEDIA/UART/RECOGNIZER.TimeOut=20
- ◀ **pw** /MEDIA/UART/RECOGNIZER.TimeOut=20

7.19.4. Querying the Last Recognized Message (String)

The recognized message is stored as a string in the property below until the next recognized message or until the `RECOGNIZER.clear()` method is called.

TIPS AND TRICKS: When this property is set as a condition in the Event Manager and the same strings follow each other, the action **will execute once**. (A Condition can be detected in Event Manager if a change happens. But if the same string is saved into the property after each other, it will not cause a change.)

Command and Response

- ▶ `GET-/MEDIA/UART/RECOGNIZER.Rx`
- ◀ `pr-/MEDIA/UART/RECOGNIZER.Rx=<recognized_string>`

Parameters

The `<recognized_string>` parameter can be max. 12-byte-long recognized data string.

Example

- ▶ `GET /MEDIA/UART/RECOGNIZER.Rx`
- ◀ `pr /MEDIA/UART/RECOGNIZER.Rx=Login:`

7.19.5. Querying the Last Recognized Message(Hex)

Command and Response

- ▶ `GET-/MEDIA/UART/RECOGNIZER.RxHex`
- ◀ `pr-/MEDIA/UART/RECOGNIZER.RxHex=<recognized_hex>`

Parameters

The `<recognized_hex>` parameter is the recognized data in hex format.

Example

- ▶ `GET /MEDIA/UART/RECOGNIZER.RxHex`
- ◀ `pr /MEDIA/UART/RECOGNIZER.RxHex=FF1F4C6F67696E3A`

7.19.6. Clearing the Last Recognized Stored Message

This method deletes all stored received serial messages.

Command and Response

- ▶ `CALL-/MEDIA/UART/RECOGNIZER:clear()`
- ◀ `m0-/MEDIA/UART/RECOGNIZER:clear`

Example

- ▶ `CALL /MEDIA/UART/RECOGNIZER:clear()`
- ◀ `m0 /MEDIA/UART/RECOGNIZER:clear`

7.19.7. Querying the Last Recognized Active Message (String)

The recognized data is stored in string in the property below **temporarily**. When the time set in the `ActiveTimeout` property has passed, the property is cleared.

TIPS AND TRICKS: When this property is set as a condition in the Event Manager and the same strings follow each other, the action **will execute on every occasion**. (A Condition can be detected in Event Manager if a change happens. In this case, the string is stored in the property, and after the `ActiveTimeout` it will be cleared. If the same string is saved into the (empty) property, it will cause a change.)

Command and Response

- ▶ `GET-/MEDIA/UART/RECOGNIZER.ActiveRx`
- ◀ `pr-/MEDIA/UART/RECOGNIZER.ActiveRx=<recognized_string>`

Parameters

The `<recognized_string>` parameter is a max. 12-byte-long recognized data string.

Example

- ▶ `GET /MEDIA/UART/RECOGNIZER.ActiveRx`
- ◀ `pr /MEDIA/UART/RECOGNIZER.ActiveRx=Login:`

7.19.8. Querying the Last Recognized Active Message (Hex)

Command and Response

- ▶ `GET-/MEDIA/UART/RECOGNIZER.ActiveRxHex`
- ◀ `pr-/MEDIA/UART/RECOGNIZER.ActiveRxHex=<recognized_hex>`

Parameters

The `<recognized_hex>` parameter is the recognized data in hex format.

Example

- ▶ `GET /MEDIA/UART/RECOGNIZER.ActiveRxHex`
- ◀ `pr /MEDIA/UART/RECOGNIZER.ActiveRxHex= 4C6F67696E3A`

7.19.9. Setting the Active Timeout

This property is responsible for clearing the **ActiveRx**, **ActiveRxHex**, **ActiveHash** properties after the elapsed time. Default value is 50ms.

Command and Response

- ▶ SET-/MEDIA/UART/RECOGNIZER.ActivePropertyTimeout=<a_timeout>
- ◀ pw-/MEDIA/UART/RECOGNIZER.ActivePropertyTimeout=<a_timeout>

Parameters

The <a_timeout> parameter is the active timeout value (ms) between 0 and 255.

Example

- ▶ SET /MEDIA/UART/RECOGNIZER.ActivePropertyTimeout=255
- ◀ pw /MEDIA/UART/RECOGNIZER.ActivePropertyTimeout=255

7.19.10. Running an Immediate Event Action

DIFFERENCE: This feature is available from FW package v1.5.0b3.

When a message is recognized (DelimiterHex is detected in the message, or TimeOut has passed since receiving the last data bit) a specific Action of an Event can be run by the following command.

Command and Response

- ▶ SET-/CTRL/TCP/C<loc>.ActionTrigger=<event_nr>
- ◀ pw-/CTRL/TCP/C<loc>.ActionTrigger=<event_nr>

Parameters

The <event_nr> means the number (location) of the linked Event Action without the letter 'E'. (There is no need to define a Condition in the linked Event.)

Example

- ▶ SET /CTRL/TCP/C1.ActivePropertyTimeout=255
- ◀ pw /CTRL/TCP/C1.ActivePropertyTimeout=255

7.20. Sending CEC Commands

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.3.1b6.

The device is able to send and receive Consumer Electronics Control (CEC) commands. This feature is for remote controlling the source or sink device. CEC is a bi-directional communication **via the HDMI cable**.

INFO: The hidden first 2 bytes of the CEC command is static, it refers to the logical address of the sender and the addressee. If the port is input, it is always 04 (from the TV to the Playback device 1.), if the port is output, it is always 40 (from the Playback device 1. to the TV). Broadcast addressing is also possible (in this case it is 0F or 4F).

7.20.1. Press&Release Commands

DIFFERENCE: This feature is available only in the HDMI-TPS-RX110AY-Plus model, from FW package v1.5.0b3.

The CEC commands below are called 'push-button commands' like a button in a remote controller, e.g. volume up/down. When the CEC command is sent, the 'release' command is also sent in the background. Certain devices require this feature for the proper working, but this is necessary only for push-button commands.

Command and Response#cec

- ▶ CALL·/MEDIA/CEC/<port>:sendClick(<command>)
- ◀ m0·/MEDIA/CEC/<port>:sendClick

Parameters

The <port> parameter means the video input or output port. The following are accepted as a <command>:

ok	number_2	input_select	rewind	select_media_4
back	number_3	display_info	fast_forward	select_media_5
up	number_4	power_legacy	eject	power_toggle
down	number_5	page_up	skip_forward	power_on
left	number_6	page_down	skip_backward	power_off
right	number_7	volume_up	3d_mode	stop_function
root_menu	number_8	volume_down	stop_record	f1
setup_menu	number_9	mute_toggle	pause_record	f2
contents_menu	dot	mute	play_forward	f3
favorite_menu	enter	unmute	play_reverse	f4
media_top_menu	clear	play	select_next_media	
media_context_menu	channel_up	stop	select_media_1	
number_0	channel_down	pause	select_media_2	
number_1	sound_select	record	select_media_3	

Example

- ▶ CALL /MEDIA/CEC/I2:sendClick(play)
- ◀ m0 /MEDIA/CEC/I2:sendClick

7.20.2. Further Commands

Command and Response

- ▶ CALL·/MEDIA/CEC/<port>:send(<command>)
- ◀ m0·/MEDIA/CEC/<port>:send

Parameters

The <port> parameter means the video input (I1-I4) or video output (01-02) port. The following is accepted as <command>:

image_view_on	standby	text_view_on	active_source
get_cec_version	set_osd	clear_osd	give_power_status

The **set_osd** command requires to also send another command, see the following section.

Example

- ▶ CALL /MEDIA/CEC/I2:send(standby)
- ◀ m0 /MEDIA/CEC/I2:send

7.20.3. Sending an OSD String

The OSD string sending consists of two steps. First, set the **OsdString** property with the desired text, then call the **send** method.

Command and Response

- ▶ SET·/MEDIA/CEC/<port>.OsdString=<text>
- ◀ pw·/MEDIA/CEC/<port>.OsdString=<text>
- ▶ CALL·/MEDIA/CEC/<port>:send(set_osd)
- ◀ m0·/MEDIA/CEC/I2:send

Parameters

Parameter	Parameter description	Values	Value description
<port>	Video input or video output port	I1-I4 01-02	Video inputs Video outputs
<text>	The desired OSD string		Letters (A-Z) and (a-z), hyphen (-), underscore (_), numbers (0-9), and dot (.). Max length: 14 characters.

Example

- ▶ SET /MEDIA/CEC/I2.OsdString=Lightware
- ◀ pw /MEDIA/CEC/I2.OsdString=Lightware
- ▶ CALL /MEDIA/CEC/I2:send(set_osd)
- ◀ m0 /MEDIA/CEC/I2:send

7.20.4. Sending CEC Commands in Hex Format

- ▶ CALL·/MEDIA/CEC/<port>:sendHex(<hex_code>)
- ◀ m0·/MEDIA/CEC/<port>:sendHex

Parameters

Parameter	Parameter description	Values	Value description
<port>	Video input or video output port	I1-I4	Video inputs
		O1-O2	Video outputs
<hex_code>	The desired CEC command		Max. 30 characters (15 bytes) in hexadecimal format.

Example

- ▶ CALL /MEDIA/CEC/I2:sendHex(8700E091)
- ◀ m0 /MEDIA/CEC/I2:sendHex

7.20.5. Querying the Last Received CEC Message

- ▶ GET /MEDIA/CEC/<port>.LastReceivedMessage
- ◀ pr /MEDIA/CEC/<port>.LastReceivedMessage=<CEC_message>

Parameters

Parameter	Parameter description	Values	Value description
<port>	Video port	I1-I4 or O1-O2	
<CEC_message>	The last incoming CEC message from the connected device.		

Example

- ▶ GET /MEDIA/CEC/I2.LastReceivedMessage
- ◀ pr /MEDIA/CEC/I2.LastReceivedMessage=give_power_status

TIPS AND TRICKS: This property can be a condition in the Event manager. When the connected device sends status information via CEC, it could be a trigger for an action.

7.21. Infrared Port Configuration

Port Numbering

Infrared port type	Parameter	Infrared port	LW3 port number
Input	<in>	IR in (local)	S1
		TPS in (IR in)	S2
Output	<out>	IR out (local)	D1
		TPS in (IR out)	D2

7.21.1. Enabling/Disabling Command Injection Mode

Command and Response

- ▶ SET·/MEDIA/IR/<in|out>.CommandInjectionEnable=<logical_value>
- ◀ pw·/MEDIA/IR/<in|out>.CommandInjectionEnable=<logical_value>

Parameters

Identifier	Parameter description	Value	Explanation
<logical_value>	Command injection setting	true	Command injection is enabled.
		false	Command injection is disabled.

Example

- ▶ SET /MEDIA/IR/S1.CommandInjectionEnable=true
- ◀ pw /MEDIA/IR/S1.CommandInjectionEnable=true

7.21.2. Changing the Command Injection Port Number

Command and Response

- ▶ SET·/MEDIA/IR/<in|out>.CommandInjectionPort=<port_no>
- ◀ pw·/MEDIA/IR/<in|out>.CommandInjectionPort=<port_no>

Example

- ▶ SET /MEDIA/IR/S1.CommandInjectionPort=9001
- ◀ pw /MEDIA/IR/S1.CommandInjectionPort=9001

7.21.3. Enabling/Disabling Output Signal Modulation

Command and Response

- ▶ SET·/MEDIA/IR/<out>.EnableModulation=<logical_value>
- ◀ pw·/MEDIA/IR/<out>.EnableModulation=<logical_value>

Parameters

Identifier	Parameter description	Value	Explanation
<logical_value>	Signal modulation enable/disable setting	true	The signal modulation is enabled.
		false	The signal modulation is disabled.

Example

- ▶ SET /MEDIA/IR/D1.EnableModulation=false
- ◀ pw /MEDIA/IR/D1.EnableModulation=false

Signal modulation is turned off on IR output (D1).

INFO: The default setting value is true (enabled).

7.23. Relay Port Settings

7.23.1. Querying the Connection State

Command and Response `#relay`

- ▶ `GET/MEDIA/RELAY/CTRL.Output`
- ◀ `pr/MEDIA/RELAY/CTRL.Output=<connection_state>`

Parameters

Identifier	Parameter description	Value	Explanation
<connection_state>	Connection state of the relay	O	Opened
		C	Closed

Example

- ▶ `GET /MEDIA/RELAY/CTRL.Output`
- ◀ `pr /MEDIA/RELAY/CTRL.Output=C;O`

P1 relay port is closed, the P2 relay port is opened.

7.23.2. Changing the Connection State

Command and Response

- ▶ `SET/MEDIA/RELAY/<port>.Output=<connection_state>`
- ◀ `pr/MEDIA/RELAY/<port>.Output=<connection_state>`

Parameters

See at previous section.

Example

- ▶ `SET /MEDIA/RELAY/P1.Output=C`
- ◀ `pr /MEDIA/RELAY/P1.Output=C`

P1 relay port is set to be closed.

7.23.3. Toggling the Connection State

Command and Response

- ▶ `CALL/MEDIA/RELAY/<port>:toggle()`
- ◀ `m0/MEDIA/RELAY/<port>:toggle`

Example

- ▶ `CALL /MEDIA/RELAY/P1:toggle()`
- ◀ `m0 /MEDIA/RELAY/P1:toggle`

The connection state of P1 port is **changed to closed** from opened.

7.24. EDID Management

Parameters

Parameter	Description
<code><emulated></code>	The emulated EDID memory of the desired input port. Example: E1.
<code><dynamic></code>	Dynamic EDID memory index. Example: D1
<code><user></code>	User EDID memory index. Example: U1
<code><factory></code>	Factory EDID memory index. Example: F1

7.24.1. Querying the Emulated EDIDs

Command and Response `#edid`

- ▶ `GET/EDID.EdidStatus`
- ◀ `pr/EDID.EdidStatus=<dynamic|user|factory>:<emulated>;...;<dynamic|user|factory>:<emulated>`

Example

- ▶ `GET /EDID.EdidStatus`
- ◀ `pr /EDID.EdidStatus=D1:E1;D1:E2;D1:E3;D1:E4`

The emulated EDID memory for an input port is listed with the EDID number that is currently emulated on the input.

7.24.2. Querying the Validity of a Dynamic EDID

Command and Response

- ▶ `GET/EDID/D/<dynamic>.Validity`
- ◀ `pr/EDID/D/<dynamic>.Validity=<logical_value>`

Parameters

The `<logical_value>` can be **true** or **false**.

Example

- ▶ `GET /EDID/D/D1.Validity`
- ◀ `pr /EDID/D/D1.Validity=true`

7.24.3. Querying the Preferred Resolution of an User EDID

Command and Response

- ▶ GET·/EDID/U/<user>.PreferredResolution
- ◀ pr·/EDID/U/<user>.PreferredResolution=<resolution>

Example

- ▶ GET /EDID/U/U2.PreferredResolution
- ◀ pr /EDID/U/U2.PreferredResolution=1920x1080p60.00Hz

7.24.4. Emulating an EDID to an Input Port

Command and Response

- ▶ CALL·/EDID:switch(<dynamic|user|factory>:<emulated>)
- ◀ m0·/EDID:switch

Example

- ▶ CALL /EDID:switch(F49:E2)
- ◀ m0 /EDID:switch

7.24.5. Emulating an EDID to All Input Ports

Command and Response

- ▶ CALL·/EDID:switchAll(<dynamic|user|factory>)
- ◀ m0·/EDID:switchAll

Example

- ▶ CALL /EDID:switchAll(F47)
- ◀ m0 /EDID:switchAll

7.24.6. Copying an EDID to User Memory

Command and Response

- ▶ CALL·/EDID:copy(<dynamic|emulated|factory|user>:<user>)
- ◀ m0·/EDID:copy

Example

- ▶ CALL /EDID:copy(D1:U1)
- ◀ m0 /EDID:copy

The EDID of the last connected sink of D1 (Output 1) has been copied to U1.

7.24.7. Deleting an EDID from User Memory

Command and Response

- ▶ CALL·/EDID:delete(<user>)
- ◀ m0·/EDID:delete

Example

- ▶ CALL /EDID:delete(U1)
- ◀ m0 /EDID:delete

7.24.8. Resetting the Emulated EDIDs

Command and Response

- ▶ CALL·/EDID:reset()
- ◀ m0·/EDID:reset

Example

- ▶ CALL /EDID:reset()
- ◀ m0 /EDID:reset

Calling this method switches all emulated EDIDs to a factory default one. See the table in the [Factory EDID List](#) section.

7.25. LW3 Commands - Quick Summary

System Commands

Querying the Product Name

- ▶ GET·/.ProductName

Setting the Device Label

- ▶ SET·/MANAGEMENT/UID/DeviceLabel=<Custom_name>

Querying the Serial Number

- ▶ GET·/.SerialNumber

Querying the Firmware Version

- ▶ GET·/SYS/MB.FirmwareVersion

Identifying the Device

- ▶ CALL·/MANAGEMENT/UI:identifyMe()

Dark Mode

- ▶ SET·/MANAGEMENT/UI/DARKMODE.DarkModeEnable=<status>

Restarting the Device

- ▶ CALL·/SYS:reset()

Restoring the Factory Default Settings

- ▶ CALL·/SYS:factoryDefaults()

Running a Macro

- ▶ CALL·/CTRL/MACROS:run(<macro_name>)

Cleartext Login Protection

Setting the Login Password

- ▶ CALL·/LOGIN:setPassword(<password>)

Logging into the Device

- ▶ CALL·/LOGIN:login(<password>)

Logging out of the Device

- ▶ CALL·/LOGIN:logout(<password>)

Enabling/Disabling the Cleartext Login Function

- ▶ SET·/LOGIN:LoginEnable=<login_state>

Video Port Settings

Querying the Status of Source Ports

- ▶ GET·/MEDIA/VIDEO/XP.SourcePortStatus

Querying the Status of Destination Port

- ▶ GET·/MEDIA/VIDEO/XP.DestinationPortStatus

Muting an Input

- ▶ CALL·/MEDIA/VIDEO/XP:muteSource(<in>)

Unmuting an Input

- ▶ CALL·/MEDIA/VIDEO/XP:unmuteSource(<in>)

Locking an Input

- ▶ CALL·/MEDIA/VIDEO/XP:lockSource(<in>)

Unlocking an Input

- ▶ CALL·/MEDIA/VIDEO/XP:unlockSource(<in>)

Muting an Output

- ▶ CALL·/MEDIA/VIDEO/XP:muteDestination(<out>)

Unmuting an Output

- ▶ CALL·/MEDIA/VIDEO/XP:unmuteDestination(<out>)

Locking an Output

- ▶ CALL·/MEDIA/VIDEO/XP:lockDestination(<out>)

Unlocking an Output

- ▶ CALL·/MEDIA/VIDEO/XP:unlockDestination(<out>)

HDCP Setting (Input Port)

- ▶ SET·/MEDIA/VIDEO/<in>.HdcpEnable=<logical_value>

HDCP Setting (Output Port)

- ▶ SET·/MEDIA/VIDEO/<out>.HdcpModeSetting=<HDCP_mode>

Test Pattern Generator Mode

- ▶ SET·/MEDIA/VIDEO/<out>.TpgMode=<mode>

Test Pattern Generator Clock Source

- ▶ SET·/MEDIA/VIDEO/<out>.TpgClockSource=<clock_frequency>

Test Pattern Setting

- ▶ SET·/MEDIA/VIDEO/<out>.TpgPattern=<pattern>

HDMI Mode Settings (Output Port)
▶ SET·/MEDIA/VIDEO/<out>.HdmiModeSetting=<mode>
Querying the Recent TPS Mode
▶ GET·/REMOTE/<port>.tpsMode
TPS Mode Settings
▶ SET·/REMOTE/<port>.tpsModeSetting=<TPS_mode>
Audio Port Settings
Query the Status of Source Ports
▶ GET·/MEDIA/AUDIO/XP.SourcePortStatus
Querying the Status of Destination Port
▶ GET·/MEDIA/AUDIO/XP.DestinationPortStatus
Muting an Input
▶ CALL·/MEDIA/AUDIO/XP:muteSource(<in>)
Unmuting an Input
▶ CALL·/MEDIA/AUDIO/XP:unmuteSource(<in>)
Locking an Input
▶ CALL·/MEDIA/AUDIO/XP:lockSource(<in>)
Unlocking an Input
▶ CALL·/MEDIA/AUDIO/XP:unlockSource(<in>)
Muting an Output
▶ CALL·/MEDIA/AUDIO/XP:muteDestination(<out>)
Unmuting an Output
▶ CALL·/MEDIA/AUDIO/XP:unmuteDestination(<out>)
Locking an Output
▶ CALL·/MEDIA/AUDIO/XP:lockDestination(<out>)
Unlocking an Output
▶ CALL·/MEDIA/AUDIO/XP:unlockDestination(<out>)
Analog Audio Output Settings
Volume Setting (dB)
▶ SET·/MEDIA/AUDIO/<out>.VolumedB=<level>
Volume Setting (dB) in Steps
▶ CALL·/MEDIA/AUDIO/<out>.stepVolumedB(<step>)

Volume Setting (Percent)
▶ SET·/MEDIA/AUDIO/<out>.VolumePercent=<percent>
Volume Setting (Percent) in Steps
▶ CALL·/MEDIA/AUDIO/<out>.stepVolumePercent(<percent>)
Balance Setting
▶ SET·/MEDIA/AUDIO/<out>.Balance=<level>
Balance Setting in Steps
▶ CALL·/MEDIA/AUDIO/<out>.stepBalance(<level>)
Event Manager Basics
How to arrange an Event?
▶ SET·/EVENTS/E<loc>.Condition=<expression>
Setting a Condition by Linking Another Condition
▶ SET·/EVENTS/E<loc>.Condition=<event_nr>
Setting a Condition by Linking More Conditions
▶ SET·/EVENTS/E<loc>.Condition=<event_nr>&<event_nr>&<event_nr>&<event_nr>
Setting an Action by Specifying a Direct Path
▶ SET·/EVENTS/E<loc>.Action=<expression>
Setting an Action by Linking Another Action
▶ SET·/EVENTS/E<loc>.Action=<event_nr>
Setting an Action by Linking a Macro
▶ SET·/EVENTS/E<loc>.Action=<macro_name>
Event Manager Tool Kit
Setting the Delay
▶ SET·/EVENTS/E<loc>.ConditionTimeout=<time>
▶ SET·/EVENTS/E<loc>.ConditionEndCheck=<true/false>
▶ SET·/EVENTS/E<loc>.ConditionTimeoutContinuous=<true/false>
Setting the Name of the Event
▶ SET·/EVENTS/E<loc>.Name=<string>
Enabling/Disabling the Event
▶ SET·/EVENTS/E<loc>.Enabled=<true/false>
Triggering a Condition
▶ CALL·/EVENTS/E<loc>.triggerCondition(1)

Querying the Condition Counter

- ▶ GET·/EVENTS/E<loc>.ConditionCount

Querying the Condition Trigger Counter

- ▶ GET·/EVENTS/E<loc>.ExternalConditionTriggerCount

Testing an Action

- ▶ CALL·/EVENTS/E<loc>.ActionTest(1)

Variable-Management**Value Assignment**

- ▶ SET·/CTRL/VARS/V<loc>.Value=<value>

Addition and Subtraction (Add Method)

- ▶ CALL·/CTRL/VARS/V<loc>.add(<operand>;<min>;<max>)

Addition and Subtraction (Cycle Method)

- ▶ CALL·/CTRL/VARS/V<loc>.cycle(<operand>;<min>;<max>)

Value Change with Intervals (Case)

- ▶ CALL·/CTRL/VARS/V<loc>.case(<min> <max> <val>)

Scan and Store

- ▶ CALL·/CTRL/VARS/V<loc>.scanf(<path>.<property>;<pattern>)

Reformatting a Value

- ▶ CALL·/CTRL/VARS/V<loc>.printf(<prefix>%s<postfix>)

Ethernet Port Configuration**Querying the DHCP State**

- ▶ GET·/MANAGEMENT-NETWORK.DhcpEnabled

Changing the DHCP State

- ▶ SET·/MANAGEMENT-NETWORK.DhcpEnabled=<logical_value>

Querying the IP Address

- ▶ GET·/MANAGEMENT-NETWORK.IpAddress

Changing the IP Address (Static)

- ▶ SET·/MANAGEMENT-NETWORK.StaticIpAddress=<IP_address>

Querying the Subnet Mask

- ▶ GET·/MANAGEMENT-NETWORK.NetworkMask

Changing the Subnet Mask (Static)

- ▶ SET·/MANAGEMENT-NETWORK.StaticNetworkMask=<netmask>

Querying the Gateway Address

- ▶ GET·/MANAGEMENT-NETWORK.GatewayAddress

Changing the Gateway Address (Static)

- ▶ SET·/MANAGEMENT-NETWORK.StaticGatewayAddress=<gw_address>

Querying the MAC Address

- ▶ GET·/MANAGEMENT-NETWORK.MacAddress

Applying Network Settings

- ▶ CALL·/MANAGEMENT-NETWORK.ApplySettings()

Ethernet Tool Kit**Device Filter Based on MAC Address**

- ▶ SET·/MANAGEMENT/MACFILTER.MACAddress<loc>=<MAC_address>;<receive>;<send>;<name>

Blocking the LW2 Control Port

- ▶ SET·/MANAGEMENT/SERVICEFILTER.Lw2Enabled=<port_mode>

Blocking the HTTP Port

- ▶ SET·/MANAGEMENT/SERVICEFILTER.HttpEnabled=<port_mode>

Blocking Reception of HTTP Posts

- ▶ SET·/MANAGEMENT/SERVICEFILTER.HttpEnabled=<port_mode>

Powering on a Computer over Ethernet (Wake-on-LAN)

- ▶ CALL·/MEDIA/ETHERNET:wakeOnLan(MAC_address)

Setting the Host Name

- ▶ SET·/MANAGEMENT-NETWORK.HostName=<unique_name>

Ethernet Message Sending**Sending a TCP Message (ASCII-format)**

- ▶ CALL·/MEDIA/ETHERNET:tcpMessage(<IP_address>;<port_no>=<message>)

Sending a TCP Text (ASCII-format)

- ▶ CALL·/MEDIA/ETHERNET:tcpText(<IP_address>;<port_no>=<text>)

Sending a TCP Binary Message (HEX-format)

- ▶ CALL·/MEDIA/ETHERNET:tcpBinary(<IP_address>;<port_no>=<HEX_message>)

Sending a UDP Message (ASCII-format)

- ▶ CALL·/MEDIA/ETHERNET:udpMessage(<IP_address>;<port_no>=<message>)

Sending a UDP Text (ASCII-format)

- ▶ CALL·/MEDIA/ETHERNET:udpText(<IP_address>;<port_no>=<text>)

Sending a UDP Binary Message (HEX-format)

- ▶ CALL·/MEDIA/ETHERNET:udpBinary(<IP_address>:<port_no>=<HEX_message>)

HTTP Messaging**Setting the Target IP Address**

- ▶ SET·/CTRL/HTTP/C1.ServerIP=<IP_address>

Setting the TCP Port

- ▶ SET·/CTRL/HTTP/C1.ServerPort=<port_no>

Setting the Target Path

- ▶ SET·/CTRL/HTTP/C1.File=<path>

Setting the Message Header

- ▶ SET·/CTRL/HTTP/C1.Header=<header_text>

Sending a Post Message

- ▶ CALL·/CTRL/HTTP/C1:post(<body_text>)

Sending a Put Message

- ▶ CALL·/CTRL/HTTP/C1:put(<body_text>)

TCP Message Recognizer**Setting the IP Address of the TCP Server**

- ▶ SET·/CTRL/TCP/C<loc>.ServerIP=<IP_address>

Setting the TCP/IP Port Number of the TCP Server

- ▶ SET·/CTRL/TCP/C<loc>.ServerPort=<port_no>

Connecting to a TCP Server

- ▶ CALL·/CTRL/TCP/C<loc>.connect()

Disconnecting from a TCP Server

- ▶ CALL·/CTRL/TCP/C<loc>.disconnect()

Setting the Delimiter Hex

- ▶ SET·/CTRL/TCP/C<loc>.DelimiterHex=<delimiter>

Setting the Timeout

- ▶ SET·/CTRL/TCP/C<loc>.TimeOut=<timeout>

Querying the Last Recognized Message (String)

- ▶ GET·/CTRL/TCP/C<loc>.Rx

Querying the Last Recognized Message (Hex)

- ▶ GET·/CTRL/TCP/C<loc>.RxHex

Clearing the Last Recognized Stored Message

- ▶ CALL·/CTRL/TCP/C<loc>.clear()

Querying the Last Recognized Active Message (String)

- ▶ GET·/CTRL/TCP/C<loc>.ActiveRx

Querying the Last Recognized Active Message (Hex)

- ▶ GET·/CTRL/TCP/C<loc>.ActiveRxHex

Setting the Active Timeout

- ▶ SET·/CTRL/TCP/C<loc>.ActivePropertyTimeout=<a_timeout>

Running an Immediate Event Action

- ▶ SET·/CTRL/TCP/C<loc>.ActionTrigger=<event_nr>

RS-232 Port Configuration**Setting the Protocol**

- ▶ SET·/MEDIA/UART/<port>.ControlProtocol=<protocol>

Setting the BAUD Rate

- ▶ SET·/MEDIA/UART/<port>.Baudrate=<baudrate>

Setting the Databits

- ▶ SET·/MEDIA/UART/<port>.DataBits=<databits>

Setting the Stopbits

- ▶ SET·/MEDIA/UART/<port>.StopBits=<stopbits>

Setting the Parity

- ▶ SET·/MEDIA/UART/<port>.Parity=<parity>

RS-232 Operation Mode

- ▶ SET·/MEDIA/UART/<port>.Rs232Mode=<mode>

Querying the Command Injection Mode

- ▶ GET·/MEDIA/UART/<port>.CommandInjectionStatus

Changing the Command Injection Mode

- ▶ SET·/MEDIA/UART/<port>.CommandInjectionEnable=<logical_value>

RS-232 Message Sending**Sending a Message (ASCII-format) via RS-232**

- ▶ CALL·/MEDIA/UART/P1:sendMessage(<message>)

Sending a Text (ASCII-format) via RS-232

- ▶ CALL·/MEDIA/UART/P1:sendText(<message>)

Sending a Binary Message (HEX-format) via RS-232

- ▶ CALL·/MEDIA/UART/P1:sendBinaryMessage(<message>)

Using Hexadecimal Codes**RS-232 Message Recognizer****Enabling/Disabling the Recognizer**

- ▶ SET·/MEDIA/UART/<serial_port>.RecognizerEnable=<recognizer_enable>

Setting the Delimiter Hex

- ▶ SET·/MEDIA/UART/RECOGNIZER.DelimiterHex=<delimiter>

Setting the Timeout

- ▶ SET·/MEDIA/UART/RECOGNIZER.TimeOut=<timeout>

Querying the Last Recognized Message (String)

- ▶ GET·/MEDIA/UART/RECOGNIZER.Rx

Querying the Last Recognized Message(Hex)

- ▶ GET·/MEDIA/UART/RECOGNIZER.RxHex

Clearing the Last Recognized Stored Message

- ▶ CALL·/MEDIA/UART/RECOGNIZER:clear()

Querying the Last Recognized Active Message (String)

- ▶ GET·/MEDIA/UART/RECOGNIZER.ActiveRx

Querying the Last Recognized Active Message (Hex)

- ▶ GET·/MEDIA/UART/RECOGNIZER.ActiveRxHex

Setting the Active Timeout

- ▶ SET·/MEDIA/UART/RECOGNIZER.ActivePropertyTimeout=<a_timeout>

Running an Immediate Event Action

- ▶ SET·/CTRL/TCP/C<loc>.ActionTrigger=<event_nr>

Sending CEC Commands**Press&Release Commands**

- ▶ CALL·/MEDIA/CEC/<port>:sendClick(<command>)

Further Commands

- ▶ CALL·/MEDIA/CEC/<port>:send(<command>)

Sending an OSD String

- ▶ SET·/MEDIA/CEC/<port>.OsdString=<text>

- ▶ CALL·/MEDIA/CEC/<port>:send(set_osd)

Sending CEC Commands in Hex Format

- ▶ CALL·/MEDIA/CEC/<port>:sendHex(<hex_code>)

Querying the Last Received CEC Message

- ▶ GET /MEDIA/CEC/<port>.LastReceivedMessage

Infrared Port Configuration**Enabling/Disabling Command Injection Mode**

- ▶ SET·/MEDIA/IR/<in|out>.CommandInjectionEnable=<logical_value>

Changing the Command Injection Port Number

- ▶ SET·/MEDIA/IR/<in|out>.CommandInjectionPort=<port_no>

Enabling/Disabling Output Signal Modulation

- ▶ SET·/MEDIA/IR/<out>.EnableModulation=<logical_value>

Infrared Message Sending**Sending Pronto Hex Codes in Little-endian Format via IR Port**

- ▶ CALL·/MEDIA/IR/<output_port>:sendProntoHex(<hex_code>)

Sending Pronto Hex Codes in Big-endian Format via IR Port

- ▶ CALL·/MEDIA/IR/<output_port>:sendProntoHexBigEndian(<hex_code>)

Relay Port Settings**Querying the Connection State**

- ▶ GET·/MEDIA/RELAY/CTRL.Output

Changing the Connection State

- ▶ SET·/MEDIA/RELAY/<port>.Output=<connection_state>

Toggling the Connection State

- ▶ CALL·/MEDIA/RELAY/<port>:toggle()

EDID Management**Querying the Emulated EDIDs**

- ▶ GET·/EDID.EdidStatus

Querying the Validity of a Dynamic EDID

- ▶ GET·/EDID/D/<dynamic>.Validity

Querying the Preferred Resolution of an User EDID

- ▶ GET·/EDID/U/<user>.PreferredResolution

Emulating an EDID to an Input Port

▶ CALL·/EDID:switch(<dynamic|user|factory>:<emulated>)

Emulating an EDID to All Input Ports

▶ CALL·/EDID:switchAll(<dynamic|user|factory>)

Copying an EDID to User Memory

▶ CALL·/EDID:copy(<dynamic|emulated|factory|user>:<user>)

Deleting an EDID from User Memory

▶ CALL·/EDID:delete(<user>)

Resetting the Emulated EDIDs

▶ CALL·/EDID:reset()

8

Firmware Update

The receiver can be updated using the Lightware Device Updater V2 (LDU2) software via Ethernet. The firmware pack with the necessary components (*.Ifp2 file) for your specific product, the LDU2 application, and the User's manual can be downloaded from the Support page of our website www.lightware.com.

- ▶ [INTRODUCTION](#)
- ▶ [PREPARATION](#)
- ▶ [RUNNING THE SOFTWARE](#)
- ▶ [UPDATING VIA GUI](#)
- ▶ [COMMAND LINE INTERFACE \(CLI\)](#)
- ▶ [CLI COMMANDS](#)
- ▶ [IF THE UPDATE IS NOT SUCCESSFUL](#)

ATTENTION! While the firmware is being updated, the normal operation mode is suspended, as the device is switched to bootload mode. Signal processing is not performed. Do not interrupt the firmware update. If any problem occurs, reboot the device and restart the process.

8.1. Introduction

Lightware Device Updater v2 (LDU2) software is the second generation of the LFP-based (Lightware Firmware Package) firmware update process.



DIFFERENCE: The software can be used for uploading the packages with LFP2 extension only. LDU2 is not suitable for using LFP files, please use the LDU software for that firmware update.

8.2. Preparation

Most Lightware devices can be controlled over several interfaces (e.g. Ethernet, USB, RS-232). But the firmware can be updated usually over one dedicated interface, which is the Ethernet in most cases.

If you want to update the firmware of one or more devices, you need the following:

- **LFP2 file**,
- **LDU2 software** installed on your PC or Mac.

Both can be downloaded from www.lightware.com/downloads.

Optionally, you can download the **release notes** file in HTML format.

8.2.1. About the Firmware Package (LFP2 File)

All the necessary tools and binary files are packed into the LFP2 package file. You need only this file to do the update on your device.

- This allows the use of the same LFP2 package for different devices.
- The package contains all the necessary components, binary, and other files.
- The release notes is included in the LFP2 file, which is displayed in the window where you select the firmware package file in LDU2.

8.2.2. LDU2 Installation

ATTENTION! Minimum system requirement: 2 GB RAM. The minimum screen resolution is 1600x900.

INFO: The Windows and the Mac applications have the same look and functionality.


Download the software from www.lightware.com/downloads.

Installation Modes

Normal install	Snapshot install
Available for Windows, macOS and Linux	Available for Windows only
The installer can update only this instance	Cannot be updated
One updateable instance may exist for all users	Many different versions can be installed for all users

ATTENTION! Using the default Normal install is highly recommended.

INFO: If you have a previously installed version, you will be prompted to remove the old version before installing the new one.

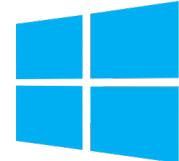

Installation in case of Windows OS

Run the installer. If the User Account Control displays a pop-up message, click **Yes**.

Using the **Normal install** (default setting) is highly recommended.



Installation in case of macOS

Mount the DMG file by double clicking on it, and drag the LDU2 icon over the Applications icon to copy the program into the Applications folder. If you want to copy LDU2 into another location, just drag the icon over the desired folder.

INFO: This type of installer is equal to the **Normal install** of Windows.

ATTENTION! Please check the firewall settings on the macOS device. LDU2 needs to be added to the exceptions of the blocked softwares for proper operation.



Installation in case of Linux

Step 1. Download the **archive file** (tar.gz) from www.lightware.com and unpack it to a temp folder.

Step 2. Run the **install_ldu2.sh** file in the temp folder. The script will install LDU2 into the following folder: HOME/.local/share/lightware/ldu2.

Step 3. The folder above will contain this file: **LightwareDeviceUpdaterV2.sh** that can be used to start LDU2.

8.3. Running the Software

ATTENTION! The computer that runs LDU2 and the target device (that will be updated) must be in the same subnet. The update cannot be performed behind a firewall or gateway.

You have two options:

- Starting the LDU2 by double-clicking on the shortcut/program file, or
- Double-clicking on an **LFP2 file**.

8.3.1. LDU2 Interfaces

The software can be used over:

- The Graphical User Interface (GUI), or by
- The Command Line Interface (CLI).


LDU2 Auto-Update

At startup, the software checks if a newer version is available on the web.



Main Screen

When the software is started by the shortcut, the device discovery screen appears. Press the **Search for devices** button to start finding the Lightware devices:

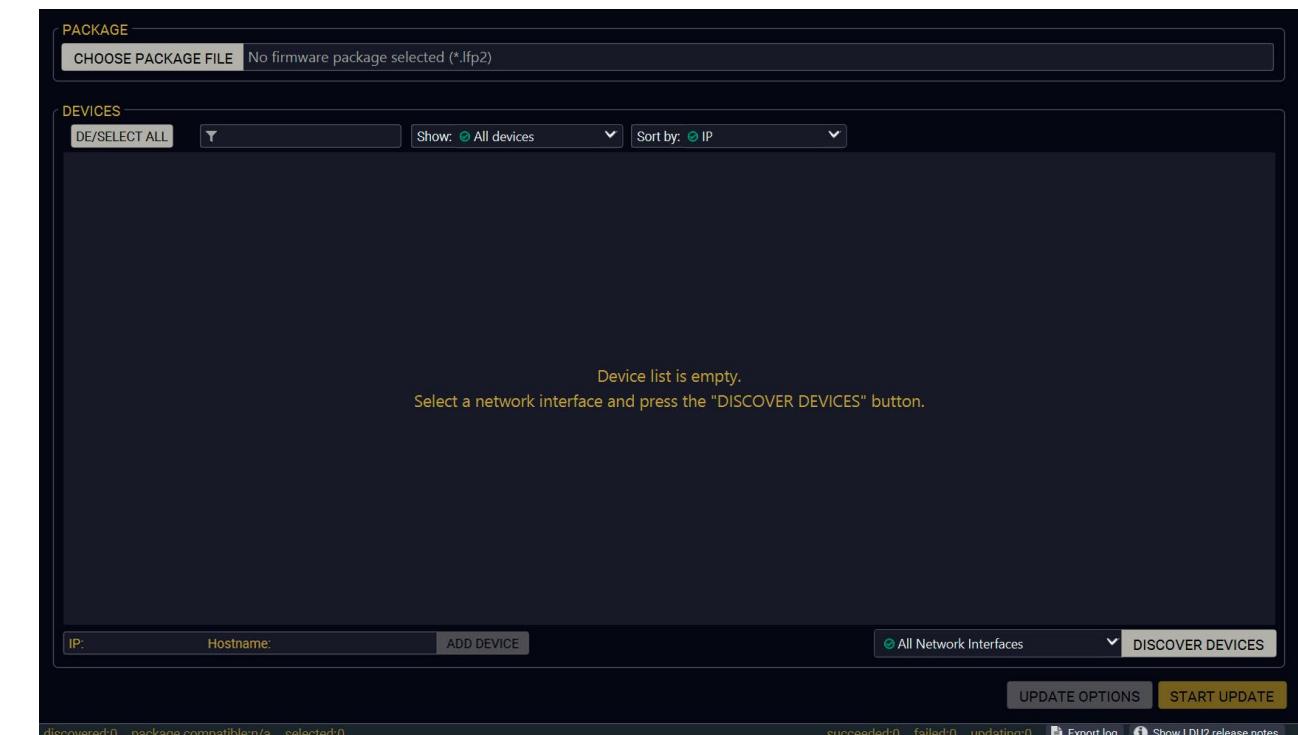

Devices may also be added manually by typing the IP address in the box near the bottom of the screen. From LDU2 version v2.16.1, manual addition of devices can also be done using the hostname.


ATTENTION! If the device cannot be added by the hostname, please use the IP address.

If you start the software by double-clicking on the LFP2 file, the firmware will be loaded. Press the **Discover devices** button; all the devices will be listed that are compatible with the selected firmware pack.

INFO: If you press the **Choose package file** button, the release notes of the LFP2 file will be displayed in the right panel; see the [Step 1. Select the Firmware Package](#) section.

Device List

When the discovery has completed, the devices available on the network are listed in the application.

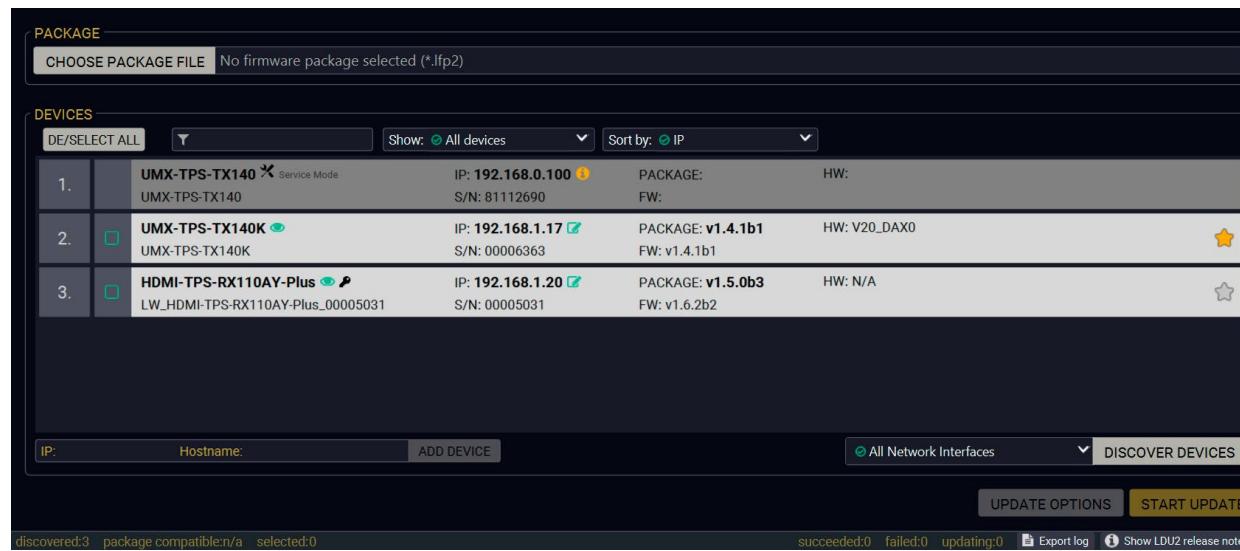

If the desired device is not discovered, you can add it by typing the IP address in the dedicated field and pressing the **Add device** button.

Legend of the Icons

	IP address editor	The IP address of the device can be changed in the pop-up window.
	Identify me	Clicking on the icon results in the front panel LEDs blinking for 10 seconds, which helps identify the device physically.
	Favorite device	The device has been marked, thus the IP address is stored. When a device is connected with that IP address, the star will be highlighted in that line.
	Further information available	Device is unreachable. Change the IP address by pressing the IP address editor icon or use the front panel buttons (if available).
	Cleartext login enabled	The password-protection is enabled. You have to enter the password to perform the firmware update in the Parameters window or in the appearing window in the beginning of the update.
	Service mode	The device is in bootloader mode. Backup and restore cannot be performed in this case.

8.3.2. The Updating Steps

ATTENTION! While the firmware is being updated, the normal operation mode is suspended, as the device is switched to bootloader mode. Signal processing is not performed. Do not interrupt the firmware update. If any problem occurs, reboot the unit and restart the process.

Keeping the Configuration Settings

By default, device configuration settings are restored when firmware update is finished. If factory reset has been chosen in the parameters window, all device settings will be erased. In the case of factory reset, you can save the settings of the device in the Lightware Device Controller software and restore it later.

The following flow chart demonstrates how this function works in the background.

Step 1. Create a backup

The current configuration of the device is being saved into a configuration backup file on your computer.

Step 2. Start the Update

The device reboots and starts in bootloader mode (firmware update mode).

Step 3. Update

The CPU firmware is changed to the new one.

Step 4. Factory reset

All configuration settings are restored to the factory default values.

Step 5. Conversion / Restore

The firmware package checks the backup data before the restoration procedure, and if it is necessary, a conversion is applied to avoid incompatibility problems between the firmware versions. All configuration settings are restored to the device after the conversion.

If the factory default option is selected in the Parameters window, the conversion / restoration procedure will not be performed!


Step 6. Finish

Once the firmware update procedure is finished, the device reboots and is ready to use.


8.4. Updating via GUI

Step 1. Select the Firmware Package

Click on the **Choose Package File** button and navigate to the location where the LFP2 file was saved. When you click on the name of package, the preview of the release notes is displayed in the right panel.

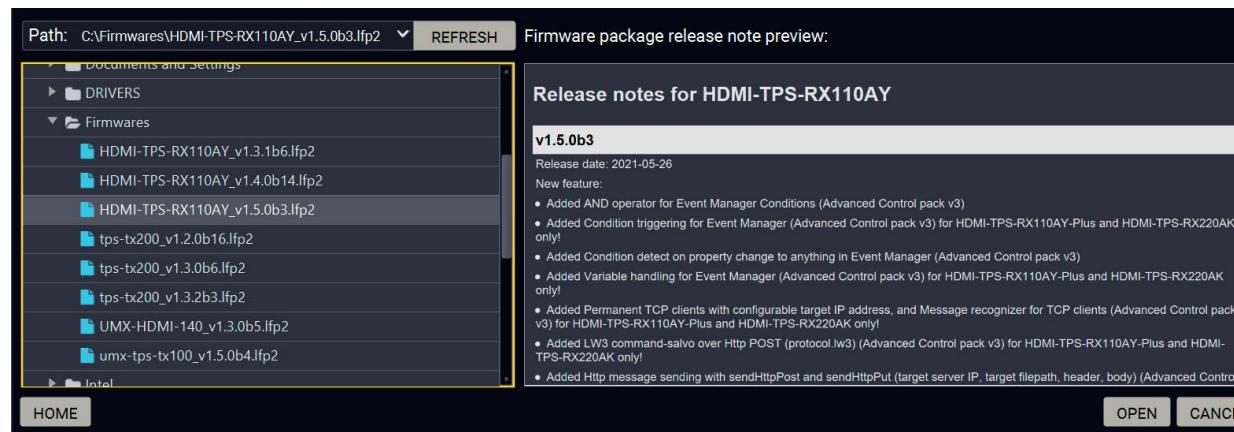

After the package file is loaded, the list is filtered to show the compatible devices only. The current firmware version of the device is highlighted in orange if it is different from the version of the package loaded.

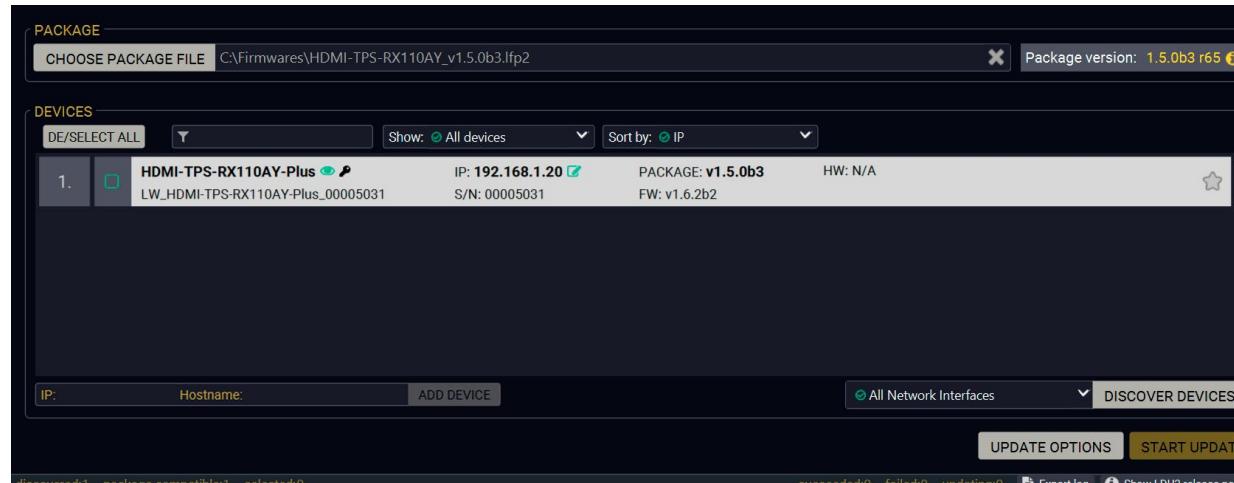

INFO: If you start the update by double-clicking on the LFP file, the screen above will be loaded right away.

The Meaning of the Symbols



The log about the updating process of the device can be displayed in a new window.




The device is in bootload mode. Backup and restore cannot be performed in this case.

Step 2. Select the desired devices for updating

Select the devices for updating; the selected line will be highlighted in green.

If you are not sure which device to select, press the **Identify me**  button. It makes the front panel LEDs blink for 10 seconds. The feature helps find the device physically.

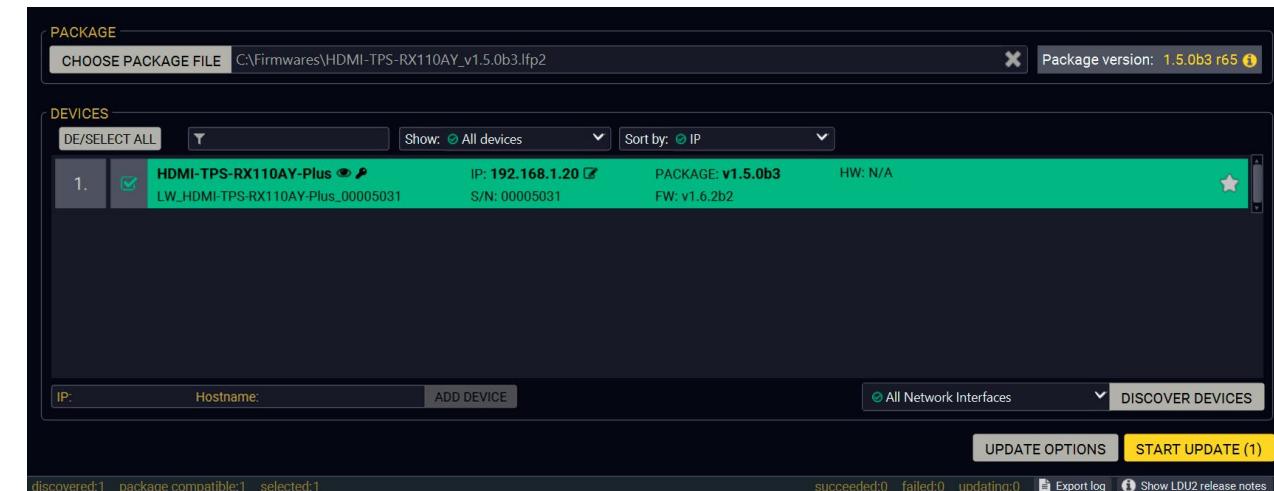

Step 3. Check the update parameters

DIFFERENCE: The appearing settings are device-dependent and can be different from device to device.

Clicking on the **Update Options** button, special settings will be available like:

UPDATE OPTIONS

- Creating a backup about the configuration,
- Restore the configuration or reloading the factory default settings after the firmware update,
- Uploading the default Miniweb (if available)
- Enter the password for the Cleartext login.

#builtinweb #miniweb #web

INFO: The password entered here will be used for all the selected devices where the Cleartext login is enabled. If the password is incorrect, a window will appear to request the correct one at each device during the update.


Please arrange the settings carefully.

Step 4. Start the update and wait until it is finished


Click on the **Start Update** button to start the procedure. The status is shown in percent in the right side of the device line and the overall process in the bottom progress bar.

If the Cleartext login is enabled and you did not enter the password in the **Parameters** window (or it is incorrect), a window will appear to request the password at each device.

INFO: The device might reboot during the firmware update procedure.

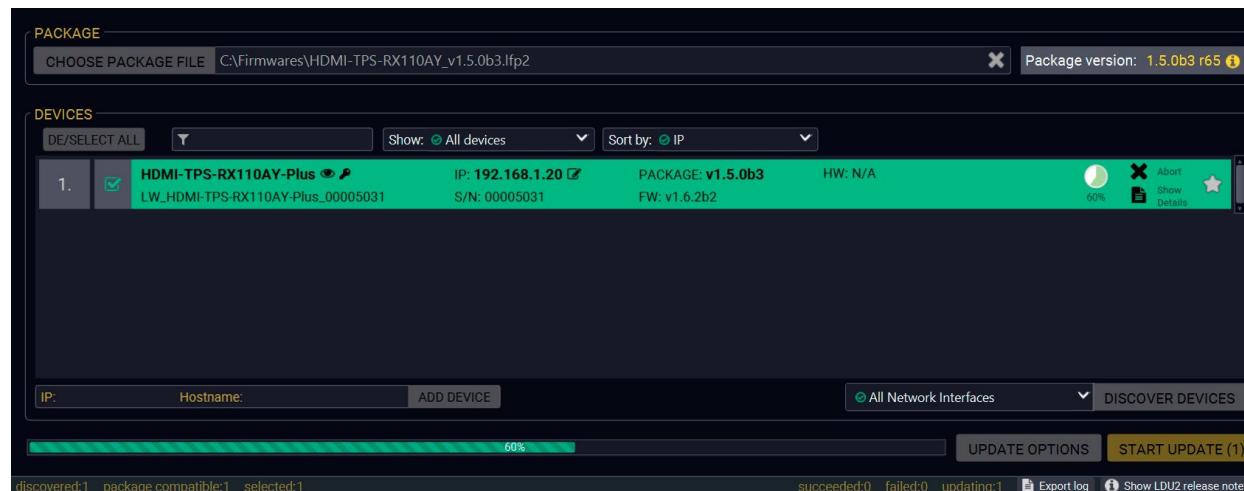

The log about the updating process can be displayed in a new window by pressing the button. When the progress bar reaches 100% (**Done** is displayed at all devices), the update of all devices is finished successfully and a message appears; you can close the software.

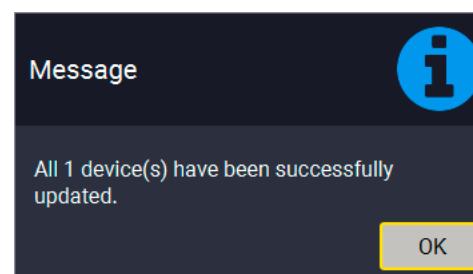

Step 5. Wait until the unit reboots with the new firmware.

Once the firmware update procedure is completed, the device is rebooted with the new firmware. Shutting down and restarting the device is recommended.

8.5. Command Line Interface (CLI)

DIFFERENCE: The Command Line Interface is available from LDU2 v2.9.0b9.

The CLI of the LDU2 software is a simple tool for creating scriptable device updates without the need for human interactions. It allows batch updating with the same features that are available in case of GUI usage. #new

8.5.1. How to Run

Running under Windows® OS

The installer of LDU2 puts the following file into the installation folder:


LightwareDeviceUpdaterV2_CLI.cmd

CLI is available via this file, the exe is not suitable for that purpose. Open a command line window to execute or test the features directly.

Step 1. Open an Explorer window where the cmd file is located, the default is:

`c:\Program Files (x86)\Lightware\Lightware Device Updater V2\LightwareDeviceUpdaterV2_CLI.cmd`.

Step 2. Click on the address line (highlighted with blue in the picture), type `cmd.exe` and press enter. The command interpreter window of Windows is opened at the path of the LDU2 install folder.

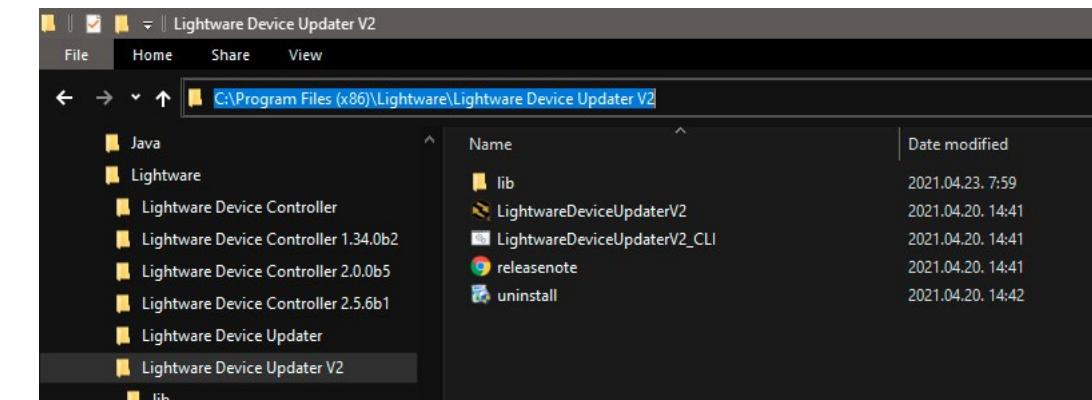

Step 3. Now you can use the `LightwareDeviceUpdaterV2_CLI.cmd` file with the commands and options that are described in the coming sections:

Running under Linux

The Command Line Interface under Linux Operating Systems can be run by the following:

LightwareDeviceUpdaterV2.sh

Running an update:

```
bash LightwareDeviceUpdaterV2.sh update --ip 172.24.5.27 --package ~/Downloads/tps-tx200_1.3.1b3.lfp2
```

The commands and options are the same under Windows® and Linux, too. The following sections contain examples with `LightwareDeviceUpdaterV2_CLI.cmd`.

8.5.2. How to Use

Command Structure

The commands can be run over CLI in the following way:

LightwareDeviceUpdaterV2_CLI.cmd [command] [options]

[Command]: a certain command described in the coming sections; only one command can be run at a time

[Options]: mandatory and/or optional parameters of the command, if any. Optional parameters have a default value, which can be found at each affected command. You only have to define the parameter if you want to apply a different value. The **order of the options** is arbitrary.

Important Notes

- CLI is **case-sensitive** (including commands, options and other parameters).
- There is **no limit** regarding the number of the devices to update. At most 20 devices are updated simultaneously, when one of them is finished, the following (21st) will be started automatically.
- If an update is failed, the IP address of the affected device(s) are listed at the end.

8.6. CLI Commands

INFO: The commands and options described in the following sections are the same under Windows® and Linux, too. The examples contain **LightwareDeviceUpdaterV2_CLI.cmd**.

About the Examples

- Sent command is in **blue**, response is in **grey**.
- If the response in practice is **longer than listed** in the example, this symbol can be seen: [...].

8.6.1. Help

The defined commands and options can be listed by the **help** command.

Command

LightwareDeviceUpdaterV2_CLI.cmd help

Example

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd help

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar help
Command line usage:
Win: LightwareDeviceUpdaterV2_CLI.cmd [command] [options]
Linux: LightwareDeviceUpdaterV2.sh [command] [options]

Commands:
* help
* version
* update
* deviceInfo
* restore
* packageOptions
[...]
```

8.6.2. LDU2 Version

The response shows the version of the LDU2 and the version of the Script API (the Application Programming Interface that is used by the LDU2 and the script).

Command

LightwareDeviceUpdaterV2_CLI.cmd version

Example

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd version

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar version
LDU2 version: 2.10.0b4
Script API version: 1.3.10
```

8.6.3. Check For New LDU2 Version

The following command can be used to check if an update of LDU2 is available. This is just a request, since the CLI is not suitable for handling the complete installer of the software.

Command

LightwareDeviceUpdaterV2_CLI.cmd checkForUpdates

Example 1

```
c:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd checkForUpdates

c:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar checkForUpdates
Current LDU2 version: 2.9.1b1
LDU2 is up-to-date
```

Example 2

```
c:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd checkForUpdates

c:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar checkForUpdates
Current LDU2 version: 2.9.1b1
New version is available online: v2.9.2b2
Download URL: http://update.lightware.hu/ldu2/lwr/v2.9.2b2/install_LDU2_v2.9.2b2.exe
```

8.6.4. Device Info

The most important information about the selected device is displayed; see the example for more details.

Command

```
LightwareDeviceUpdaterV2_CLI.cmd deviceInfo [options]
```

Options

Option	Description	Required?
-i or --ip	List of IP addresses of devices to be updated	one of them is mandatory
-n or --hostName	List of host names of devices to be updated	
-v or --packageVersion	Shows installed package version only	optional

Example 1

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd deviceInfo --ip 192.168.1.2

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar deviceInfo --ip 192.168.1.2
Product name: HDMI-TPS-RX110AY-Plus
IP address: 192.168.1.2
Serial number: 00005031
MAC address: a8:d2:36:00:50:31
Part number: 91540070
Device label: LW_HDMI-TPS-RX110AY-Plus_00005031
Package version: v1.5.0b3
CPU FW version: v1.6.2b2
HW version: V12_AAA0
Operation mode: Application mode
```

Example 2

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd deviceInfo --ip 192.168.1.2 --packageVersion

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar deviceInfo --ip 192.168.1.2 --packageVersion
v1.5.0b3
```

8.6.5. Update

This command can be used to update the firmware of the devices.

Command

```
LightwareDeviceUpdaterV2_CLI.cmd update [options]
```

Options

Option	Description	Required?
-p or --package	The path of the firmware package file	yes
-i or --ip	List of IP addresses of devices to be updated	one of them is mandatory
-n or --hostName	List of host names of devices to be updated	
-b or --backupFolder	Folder to create device configuration backup at. Default: USER_HOME/.ldu2/backup	optional
-f or --factoryDefault	Apply factory reset during device update. Default: false	optional
-r or --reportProgress	Report update progress in percentage form. Default: false	optional
Package-specific options	Certain LFP2 packages have features that can be applied at this command; see the Package Options section.	optional

ATTENTION! The configuration is restored automatically if the factory default option is not applied in the update command. In that case, there is no need to run the **restore** command after the update.

Example

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd update --ip 192.168.1.2 --package C:\Firmwares\HDMI-TPS-RX110AY_v1.5.0b3.lfp2 --reportProgress

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar update --ip 192.168.1.2 --package C:\Firmwares\HDMI-TPS-RX110AY_v1.5.0b3.lfp2 --reportProgress
[2021-06-15 11:23:08.517] [ INFO] [main] - Device IPs: [192.168.1.2]
[2021-06-15 11:23:11.278] [ INFO] [main] - All the selected devices are accessible over the network.
[2021-06-15 11:23:11.460] [ INFO] [main] - All the selected devices are compatible with the specified package.
[2021-06-15 11:23:11.865] [ INFO] [192.168.1.2] - Package version: 1.5.0b3
[2021-06-15 11:23:11.956] [ INFO] [192.168.1.2] - Login functionality is currently not enabled.
[2021-06-15 11:23:11.978] [ INFO] [192.168.1.2] - Creating backup of device settings...
[2021-06-15 11:23:15.154] [ INFO] [192.168.1.2] - Backup HTTP enable properties
[2021-06-15 11:23:16.467] [ INFO] [ProgressReporter] - Progress: 2%
[2021-06-15 11:23:17.660] [ INFO] [192.168.1.2] - HTTP and HTTP post have got enabled on port 80
[2021-06-15 11:23:17.761] [ INFO] [192.168.1.2] - Backup of device preset MyMacros (preset1) is queued
[2021-06-15 11:23:17.804] [ INFO] [192.168.1.2] - Backup of device preset save protected (preset2) is queued
[2021-06-15 11:23:17.883] [ INFO] [192.168.1.2] - Creating backup of device presets...
[2021-06-15 11:23:18.744] [ INFO] [192.168.1.2] - Creating miniweb backup...
[2021-06-15 11:23:18.745] [ INFO] [192.168.1.2] - Making backup of the miniweb file.
[2021-06-15 11:23:21.362] [ INFO] [192.168.1.2] - HTTP and HTTP post properties have got restored on port 80
[2021-06-15 11:23:21.388] [ INFO] [192.168.1.2] - Switching device into bootload mode...
[2021-06-15 11:23:21.469] [ INFO] [ProgressReporter] - Progress: 5%
[...]
```

If the **ProgressReporter** option is enabled, the current state is displayed every 5 seconds.

8.6.6. Restore

Restores device configuration from a backup file.

TIPS AND TRICKS: This command can be used for uploading a configuration to numerous devices (aka Configuration cloning by CLI).

Command

```
LightwareDeviceUpdaterV2_CLI.cmd restore [options]
```

Options

Option	Description	Required?
-i or --ip	List of IP addresses of devices to be updated	one of them is mandatory
-n or --hostName	List of host names of devices to be updated	
-b or --backupFile	The path of the configuration backup file	yes
-k or --keepOriginalIp	Do not override the network settings of the device with the ones in the backup file. It comes in handy when multiple devices' configuration is being restored from a single backup file. Default: false	optional

ATTENTION! The configuration is restored automatically if the factory default option is not applied in the **update** command. In that case, there is no need to run the **restore** command after the update.

Example

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd restore --ip 192.168.1.2 --backupFile C:\My_backup\my_backup.lw3 --keepOriginalIp

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar restore --ip 192.168.1.2 --backupFile C:\My_backup\my_backup.lw3 --keepOriginalIp
[2021-06-15 11:41:11.076] [ INFO] [main] - Executing configuration restore...
[2021-06-15 11:41:11.086] [ INFO] [main] - Device IPs: [192.168.1.2]
```

INFO: The firmware package checks the backup data before the restoration procedure and if it is necessary, a conversion is applied to avoid incompatibility problems between the firmware versions. In that case, two backup files are created: the original and a new one with "_converted" suffix. Using the last one for restoring is recommended.

8.6.7. Package Options

Shows package-specific update options.

Command

```
LightwareDeviceUpdaterV2_CLI.cmd packageOptions [options]
```

Options

Option	Description	Required?
-p or --package	The path of the firmware package file	yes

Example

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd packageOptions --package C:\Firmwares\HDMI-TPS-RX110AY_v1.5.0b3.lfp2

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar packageOptions --package C:\Firmwares\HDMI-TPS-RX110AY_v1.5.0b3.lfp2

Backup and restore options:
  --skipPresetsAtRestore : if true, device presets will not be restored. (Default: false)
  --uploadDefaultMiniWeb : if true and no custom miniweb is present on the device, the default built-in miniweb will be uploaded to the device. (Default: false)

Login options:
  --clearTextLoginPw : The cleartext login password used when updating devices. (Default: empty string)

Test options:
  --test : if true, no update will be performed, communication with the device will be tested. (Default: false)

Advanced (developer) options:
  --updateVs100 : If true, the VS100 Rx firmware will also be updated. (default: false)
```

Package option example can be seen in the following section.

8.6.8. Complex Examples

Example 1

The following options are applied:

- Firmware is updated
- Factory default settings are restored

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd update --ip
192.168.1.2 --factoryDefault --package C:\Firmwares\HDMI-TPS-RX110AY_v1.5.0b3.lfp2

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar update --ip
192.168.1.2 --factoryDefault --package C:\Firmwares\HDMI-TPS-RX110AY_v1.5.0b3.lfp2
[2021-06-15 11:45:03.753] [ INFO] [           main] - Device IPs: [192.168.1.2]
[2021-06-15 11:45:07.625] [ INFO] [           main] - All the selected devices are accessible over the network.
[2021-06-15 11:45:07.855] [ INFO] [           main] - All the selected devices are compatible with the specified
package.
[2021-06-15 11:45:08.384] [ INFO] [ 192.168.1.2] - Package version: 1.5.0b3
[2021-06-15 11:45:08.476] [ INFO] [ 192.168.1.2] - Login functionality is currently not enabled.
[2021-06-15 11:45:08.529] [ INFO] [ 192.168.1.2] - Switching device into bootload mode...
[2021-06-15 11:45:28.972] [ INFO] [ 192.168.1.2] - Gathering UID information from device...
[2021-06-15 11:45:29.557] [ INFO] [ 192.168.1.2] - UID info - Device IP: 192.168.1.2 Product name: HDMI-
TPS-RX110AY-Plus Product part number: 91540070 Serial number: 00005031 Hardware version: V12_AAA0 MAC address:
A8:D2:36:00:50:31
[2021-06-15 11:45:30.053] [ INFO] [ 192.168.1.2] - Package version on device: 1.5.0b3 r65
[2021-06-15 11:45:30.098] [ INFO] [ 192.168.1.2] - Updating Firmware of the MCU...
[2021-06-15 11:45:30.582] [ INFO] [ 192.168.1.2] - [tps_rx200.bin]'s current version on device: 1.6.2b2 r114
[2021-06-15 11:45:30.584] [ INFO] [ 192.168.1.2] - [tps_rx200.bin]'s version in the package: 1.6.2b2 r114
[2021-06-15 11:45:58.103] [ INFO] [ 192.168.1.2] - [tps_rx200.bin]'s firmware version updated in FVS EEPROM.
[2021-06-15 11:46:04.653] [ INFO] [ 192.168.1.2] - Setting system information...
[2021-06-15 11:46:11.197] [ INFO] [ 192.168.1.2] - Starting application...
[2021-06-15 11:47:55.972] [ INFO] [ 192.168.1.2] - Done

All 1 update(s) finished successfully.
```

Example 2

The following options are applied:

- Cleartext login password is applied
- Custom backup folder is set
- Current configuration is saved
- Firmware is updated and saved configuration is restored

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd update --ip
192.168.1.2 --package C:\Firmwares\HDMI-TPS-RX110AY_v1.5.0b3.lfp2 --backupFolder C:\My_backup --clearTextLoginPw
qwer1234

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar update --ip
192.168.1.2 --package C:\Firmwares\HDMI-TPS-RX110AY_v1.5.0b3.lfp2 --backupFolder C:\My_backup --clearTextLoginPw
qwer1234
[2021-06-15 11:57:35.437] [ INFO] [           main] - Device IPs: [192.168.1.2]
[2021-06-15 11:57:38.676] [ WARN] [ pool-2-thread-1] - NetworkMask property is not available. Cannot determine
whether the device is on the same network or not.
[2021-06-15 11:57:38.756] [ WARN] [ pool-2-thread-1] - Bonjour device builder error messages: [object Array]
[2021-06-15 11:57:38.849] [ INFO] [           main] - All the selected devices are accessible over the network.
[2021-06-15 11:57:39.091] [ INFO] [           main] - All the selected devices are compatible with the specified
package.
[2021-06-15 11:57:39.671] [ INFO] [ 192.168.1.2] - Package version: 1.5.0b3
[2021-06-15 11:57:39.793] [ INFO] [ 192.168.1.2] - Logged in successfully.
[2021-06-15 11:57:39.834] [ INFO] [ 192.168.1.2] - Creating backup of device settings...
[2021-06-15 11:57:43.159] [ INFO] [ 192.168.1.2] - Backup HTTP enable properties
[2021-06-15 11:57:45.627] [ INFO] [ 192.168.1.2] - HTTP and HTTP post have got enabled on port 80
[2021-06-15 11:57:45.941] [ INFO] [ 192.168.1.2] - Backup of device preset save protected (preset2) is queued
[2021-06-15 11:57:46.029] [ INFO] [ 192.168.1.2] - Creating backup of device presets...
[2021-06-15 11:57:47.258] [ INFO] [ 192.168.1.2] - No miniweb file is found on the device.
[2021-06-15 11:57:49.805] [ INFO] [ 192.168.1.2] - HTTP and HTTP post properties have got restored on port 80
[2021-06-15 11:57:49.896] [ INFO] [ 192.168.1.2] - Switching device into bootload mode...
[2021-06-15 11:58:11.221] [ INFO] [ 192.168.1.2] - Gathering UID information from device...
[2021-06-15 11:58:11.786] [ INFO] [ 192.168.1.2] - UID info - Device IP: 192.168.1.2 Product name: HDMI-
TPS-RX110AY-Plus Product part number: 91540070 Serial number: 00005031 Hardware version: V12_AAA0 MAC address:
A8:D2:36:00:50:31
[2021-06-15 11:58:12.283] [ INFO] [ 192.168.1.2] - Package version on device: 1.5.0b3 r65
[2021-06-15 11:58:12.832] [ INFO] [ 192.168.1.2] - Updating Firmware of the MCU...
[2021-06-15 11:58:13.317] [ INFO] [ 192.168.1.2] - [tps_rx200.bin]'s current version on device: 1.6.2b2 r114
[2021-06-15 11:58:13.318] [ INFO] [ 192.168.1.2] - [tps_rx200.bin]'s version in the package: 1.6.2b2 r114
[2021-06-15 11:58:40.813] [ INFO] [ 192.168.1.2] - [tps_rx200.bin]'s firmware version updated in FVS EEPROM.
[2021-06-15 11:58:47.374] [ INFO] [ 192.168.1.2] - Setting system information...
[2021-06-15 11:58:53.928] [ INFO] [ 192.168.1.2] - Starting application...
[2021-06-15 12:00:40.361] [ INFO] [ 192.168.1.2] - Waiting for VS100...
[2021-06-15 12:00:42.029] [ INFO] [ 192.168.1.2] - Restoring device presets...
[2021-06-15 12:00:42.051] [ INFO] [ 192.168.1.2] - Deleting preset: preset2
[2021-06-15 12:00:43.854] [ INFO] [ 192.168.1.2] - Restoring preset: save protected (preset2)
[2021-06-15 12:00:46.614] [ INFO] [ 192.168.1.2] - Restoring device settings from the following backup file:
C:\My_backup\backup_91540070_00005031_2021-06-15_11-57-40Converted.lw3 ...
[2021-06-15 12:00:50.452] [ INFO] [ 192.168.1.2] - Device settings have been restored
[2021-06-15 12:00:50.486] [ INFO] [ 192.168.1.2] - Resetting device...
[2021-06-15 12:00:55.301] [ INFO] [ 192.168.1.2] - Done

All 1 update(s) finished successfully.
```

Example 3

The following options are applied:

- Cleartext login password is applied
- Custom backup folder is set
- Current configuration is saved
- Firmware is **not updated** but the process and the connection is **tested**

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd update --test --ip 192.168.1.2 --package C:\Firmwares\HDMI-TPS-RX110AY_v1.5.0b3.lfp2 --backupFolder C:\My_backup --clearTextLoginPw qwer1234

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.jar update --test --ip 192.168.1.2 --package C:\Firmwares\HDMI-TPS-RX110AY_v1.5.0b3.lfp2 --backupFolder C:\My_backup --clearTextLoginPw qwer1234
[2021-06-15 12:02:16.764] [ INFO] [ main] - Device IPs: [192.168.1.2]
[2021-06-15 12:02:20.090] [ WARN] [ pool-2-thread-1] - NetworkMask property is not available. Cannot determine whether the device is on the same network or not.
[2021-06-15 12:02:20.209] [ WARN] [ pool-2-thread-1] - Bonjour device builder error messages: [Object Array]
[2021-06-15 12:02:20.250] [ INFO] [ main] - All the selected devices are accessible over the network.
[2021-06-15 12:02:20.494] [ INFO] [ main] - All the selected devices are compatible with the specified package.
[2021-06-15 12:02:21.008] [ INFO] [ 192.168.1.2] - PASSED - Test #01 - Communication over LW3
[2021-06-15 12:02:21.062] [ INFO] [ 192.168.1.2] - PASSED - Test #02 - Cleartext login - PW is correct
[2021-06-15 12:02:21.112] [ INFO] [ 192.168.1.2] - Creating backup of device settings...
[2021-06-15 12:02:24.302] [ INFO] [ 192.168.1.2] - Backup HTTP enable properties
[2021-06-15 12:02:26.809] [ INFO] [ 192.168.1.2] - HTTP and HTTP post have got enabled on port 80
[2021-06-15 12:02:27.078] [ INFO] [ 192.168.1.2] - Backup of device preset save protected (preset2) is queued
[2021-06-15 12:02:27.229] [ INFO] [ 192.168.1.2] - Creating backup of device presets...
[2021-06-15 12:02:28.277] [ INFO] [ 192.168.1.2] - No miniweb file is found on the device.
[2021-06-15 12:02:30.742] [ INFO] [ 192.168.1.2] - HTTP and HTTP post properties have got restored on port 80
[2021-06-15 12:02:30.743] [ INFO] [ 192.168.1.2] - PASSED - Test #03 - Configuration and/or device preset backup created
[2021-06-15 12:02:30.762] [ INFO] [ 192.168.1.2] - Switching device into bootload mode...
[2021-06-15 12:02:32.447] [ INFO] [ 192.168.1.2] - PASSED - Test #04 - Switch device into bootloader mode
[2021-06-15 12:02:43.553] [ INFO] [ 192.168.1.2] - PASSED - Test #05 - Communication with bootloader
[2021-06-15 12:02:43.566] [ INFO] [ 192.168.1.2] - Gathering UID information from device...
[2021-06-15 12:02:44.081] [ INFO] [ 192.168.1.2] - PASSED - Test #06 - TFTP file transfer
[2021-06-15 12:02:57.308] [ INFO] [ 192.168.1.2] - PASSED - Test #07 - Start application FW
[2021-06-15 12:02:57.360] [ INFO] [ 192.168.1.2] - Done

All 1 update(s) finished successfully.
```

8.6.9. Exit Codes

There is a return value in all cases when a command run is finished. Currently, three codes are defined:

Code	Displayed text	Description
0	N/A	The update performed successfully
1	Update error (ErrorCode:1)	The error happened during the update
2	CLI error (ErrorCode:2)	The error happened before starting the update

The error line contains further information about the error.

Querying the Exit Code under Windows®

```
c:\Program Files (x86)\Lightware\Lightware Device Updater V2>echo %errorlevel%
0
```

Querying the Exit Code under Linux

```
echo $?
0
```

If this value is queried after the update and it is 0, the update performed successfully.

8.7. If the Update is not successful

- Restart the process and try the update again.
- If the device cannot be switched to bootload (firmware update) mode, you can do that manually as written in the User's manual of the device. Please note that backup and restore cannot be performed in this case.
- If the backup cannot be created for some reason, you will get a message to continue the process without backup or stop the update. A root cause can be that the desired device is already in bootload (firmware update) mode, thus the normal operation mode is suspended and backup cannot be made.
- If an update is not successful, the **Export log** button becomes red. If you press the button, you can download the log file as a ZIP package, which can be sent to Lightware Support if needed. The log files contain useful information about the circumstances to find the root cause.

#bootload

9

Troubleshooting

Usually, if the system seems not to transport the signal as expected, the best strategy for troubleshooting is to check signal integrity through the whole signal chain starting from source side and moving forward to receiver end.

-  Link to connections/cabling section.
-  Link to front panel operation section.
-  Link to LDC software section.
-  Link to LW2 protocol commands section.
-  Link to LW3 protocol commands section.

The following sections are available in the chapter:

- ▶ [USE CASE STUDIES](#)
- ▶ [HOW TO SPEED UP THE TROUBLESHOOTING PROCESS](#)

9.1. Use Case Studies

At first, check the front panel LEDs and take the necessary steps according to their states. For more information about status LEDs, refer to the [Front View](#) and [Rear View](#) sections.

Symptom	Root cause	Action	Refer to
Video signal			
No picture on the video output	Device or devices are not powered properly	Check the receiver and the other devices if they are properly powered; try to unplug and reconnect them.	 2.2.1
	Cable connection problem	Cables must fit very well, check all the connectors (video and TPS cables).	 2.2
	No incoming signal	If the TPS LINK LED does not shine, no signal is present on the TPS input port. Check the source device and the CATx cable.	 2.2
	TPS mode problem	Check the current TPS mode and the selected modes of the extenders.	 5.5.1
	The output is muted	Check the mute state of output port.	 5.5.1  6.4.5  7.6.2
	Display is not able to receive the video format	Check the emulated EDID; select another (e.g. emulate the EDID of the display on the input port).	 5.7  7.24
	HDCP is disabled	Enable HDCP on the input and output port.	 5.5.1  7.6.11  7.6.12
Not the desired picture displayed on the video output	Video output is set to test pattern (no sync screen) statically	Check Test Pattern settings in the HDMI output properties.	 5.5.1  7.6.13
	Video output is set to test pattern (no sync screen) as there is no picture on video source	Check video settings of the source.	

Symptom	Root cause	Action	Refer to
Audio signal			
No audio is present on output	Source audio volume is low or muted	Check the audio settings of the source.	
	Output port is muted	Check the output port properties.	 5.5.3  6.4.5  7.7.2
	Analog audio volume is set low	Check the Analog audio output port settings (volume).	 5.5.3  7.8
HDMI output signal contains no audio	HDMI mode was set to DVI	Check the properties of the output port and set to HDMI or Auto.	 5.5.1  7.6.16
	DVI EDID is emulated	Check the EDID and select an HDMI EDID to emulate.	 5.7  7.24
RS-232 signal			
Connected serial device does not respond	Cable connection problem	Make sure the connectors fit well; check the wiring of the plugs.	 2.2.7
	RS-232 settings are different	Check the port settings of the transmitter and/or the receiver and the connected serial device(s). Pay attention to Link and/or Local ports.	 5.7.6  6.6  7.17
	RS-232 mode is not right	Check the RS-232 mode settings (pass-through, control or command injection).	 5.7.6  6.6.1  7.17.6
Network			
No LAN connection can be established	Incorrect IP address is set (fix IP)	Use dynamic IP address by enabling DHCP option.	 3.3.2  5.9.2  6.5.3  7.12.2
		Restore the factory default settings (with fix IP).	 3.3.3  5.9.5  6.3.12  7.4.8
	IP address conflict	Check the IP address of the other devices, too.	

Symptom	Root cause	Action	Refer to
Miscellaneous			
Function button is out of operation	Function button is locked	Unlock the button.	 5.9.1
Error messages received always	Different protocol is set	Check the port protocol settings (LW2 / LW3) and use the proper protocol commands.	 5.7.6  LW2 6.6.4  LW2 6.6.5  LW3 7.17.1

9.2. How to Speed Up the Troubleshooting Process


Lightware's technical support team is always working hard to provide the fastest support possible. Our team's response time is one of the best in the industry, and in the toughest of cases we can directly consult with the hardware or software engineer who designed the product to get the information from the most reliable source.

However, the troubleshooting process can be even faster... with your help.

There are certain pieces of information that push us in the right direction to find the root cause of the problem. If we receive most of this information in the first e-mail, or it is gathered at the time when you call us, then there is a pretty high chance that we will be able to respond with the final solution right away.

This information is the following:

- Schematic (a pdf version is preferred, but a hand drawing is sufficient).
- Serial number(s) of the device(s) (it is either printed somewhere on the box or you can query it in the Device Controller software or on the built-in website).
- Firmware versions of the devices (please note that there may be multiple CPUs or controllers in the device and we need to know all of their firmware versions, a screenshot is the best option).
- Cable lengths and types (in our experience, it's usually the cable).
- Patch panels, gender changers or anything else in the signal path that can affect the transmission.
- Signal type (resolution, refresh rate, color space, deep color).
- Emulated EDID(s) (please save them as a file and send it to us).
- Actions to take in order to re-create the problem (if we cannot reproduce the problem, it is hard for us to find the cause).
- Photo or video about the problem ('image noise' can mean many different things, it's better if we see it too).
- Error logs from the Device Controller software.
- In the case of an Event Manager issue the event file and/or backup file from the Device Controller software.

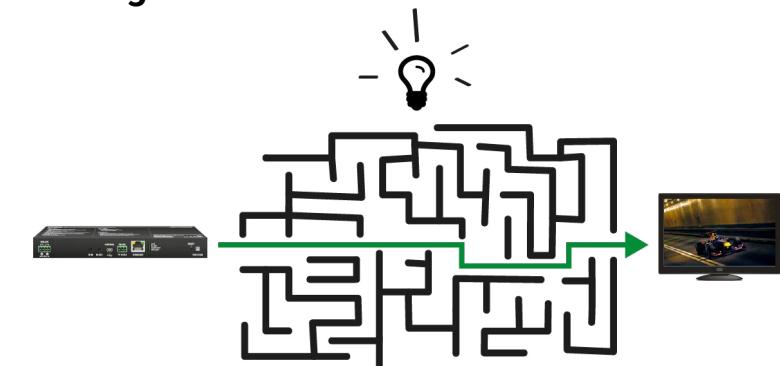

The more of the information above you can give us, the better. Please send this information to the Lightware Support Team (support@lightware.com) to speed up the troubleshooting process.

10

Technologies

The following sections contain descriptions and useful technical information on how the devices work in the background. The content is based on experiences and cases we met in the practice. These sections help to understand features and technical standards like the following:


- ▶ [EDID MANAGEMENT](#)
- ▶ [PIXEL ACCURATE RECLOCKING](#)

10.1. EDID Management

10.1.1. Understanding the EDID

The Extended Display Identification Data (EDID) is the passport of display devices (monitors, TV sets, projectors). It contains information about the capabilities of the display, such as supported resolutions, refresh rates (these are called Detailed Timings), the type and manufacturer of the display device, etc.

After connecting a source to a display (DVI, HDMI, DP), the source reads out the EDID to determine the resolution and refresh rate of the image to be transmitted.

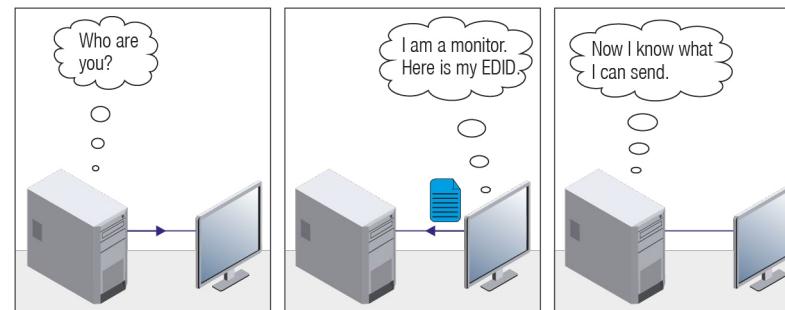

EDID Communication

Most DVI computer displays have a 128-byte-long EDID structure. However, Digital Televisions and HDMI capable displays may have another 128 bytes, which is called E-EDID and is defined by CEA (Consumer Electronics Association). This extension contains information about additional Detailed Timings, audio capabilities, speaker allocation and HDMI capabilities. It is important to know that all HDMI capable devices must have CEA extension, but not all devices with CEA extension are HDMI capable.

Common Problems Related to EDID

Problem: "My system consists of the following: a computer, a Lightware device, a WUXGA (1920x1200) LCD monitor, and an SXGA (1280x1024) projector. I would like to see the same image on the monitor and the projector. What EDID should I choose on the Lightware device?"

Solution: If you want to see the image on both displays, you need to select the resolution of the smaller display (in this case SXGA), otherwise the smaller display may not show the higher resolution image.

Problem: "I have changed to a different EDID on an input port of the Lightware device to have a different resolution, but nothing happens."

Solution: Some graphics cards and video sources read out the EDID only after power-up and later they do not sense that EDID has been changed. You need to restart your source to make it read out the EDID again.

10.1.2. Advanced EDID Management

Each DVI sink (e.g. monitors, projectors, plasma displays, etc...) must support the EDID data structure. Source BIOS and operating systems are likely to query the sink using DDC2B protocol to determine what pixel formats and interface are supported. DVI standard uses EDID data structure to identify the monitor type and capabilities. Most DVI sources (VGA cards, set top boxes, etc.) will output DVI signal after accepting the connected sink's EDID information. In the case of EDID readout failure or missing EDID, the source will not output DVI video signal.

Lightware devices provide the Advanced EDID Management function that helps system integration. The built-in EDID Router can store and emulate factory pre-programmed- and User programmable EDIDs. The EDID of the attached monitors or projectors for each output are stored in a non-volatile memory. This way the EDID of a monitor is available when the monitor is unplugged or switched off.

Any EDID can be emulated on any input. An emulated EDID can be copied from the EDID router's memory (static EDID emulation), or from the last attached monitor's memory (dynamic EDID emulation). For example, the Lightware device can be set up to emulate a sink device that is connected to one of the outputs. In this case the EDID automatically changes if the monitor is replaced with another display device (as long as it has a valid EDID).

The EDID is independently programmable for all inputs without affecting each other. All inputs have their own EDID circuit.

INFO: The user is not required to disconnect the video cable to change an EDID as opposed to other manufacturer's products. The EDID can be changed even if a source is connected to the input and powered ON.

INFO: When the EDID has been changed, the router toggles the HOTPLUG signal for 2 seconds. Some sources do not sense this signal. In such cases, the source device must be restarted or powered OFF and ON again.

10.1.3. HDCP Management

Lightware Visual Engineering is a legal HDCP adopter. Several functions have been developed which helps to solve HDCP related problems. Complex AV systems often have both HDCP and non-HDCP components. The receiver allows transmitting HDCP encrypted and unencrypted signals. The devices will be still HDCP compliant, as they will never output an encrypted signal to a non-HDCP compliant display device. If an encrypted signal is switched to a non-compliant output, a red screen alert or muted screen will appear.


10.1.4. Protected and Unprotected Content

Many video sources send HDCP protected signal if they detect that the sink is HDCP capable – even if the content is not copyrighted. This can cause trouble if an HDCP capable device is connected between the source and the display. In this case, the content cannot be viewed on non-HDCP capable displays and interfaces like event controllers. Rental and staging technicians often complain about certain laptops, which are always sending HDCP encrypted signals if the receiver device (display, matrix router, etc.) reports HDCP compliancy. Even though HDCP encryption is not required all the time (e.g. computer desktop image), certain laptops still do that.

To avoid unnecessary HDCP encryption, Lightware introduced the HDCP enabling/disabling function: the HDCP capability can be disabled in the Lightware device. If HDCP is disabled, the connected source will detect that the sink is not HDCP capable, and turn off authentication.

10.1.5. Disable Unnecessary Encryption

HDCP Compliant Sink

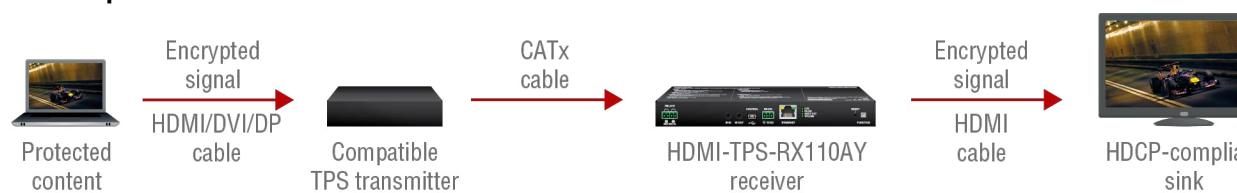

All the devices are HDCP-compliant, no manual setting is required, both protected and unprotected content is transmitted and displayed on the sink.

Not HDCP-compliant Sink 1.



Non-HDCP compliant sink is connected to the receiver. Some sources (e.g. computers) always send HDCP encrypted signals if the receiver device reports HDCP compliancy, however, HDCP encryption is not required all the time (e.g. computer desktop image). If HDCP is enabled in the receiver, the image will not be displayed on the sink.

Setting the HDCP parameter to Auto on the output port and disabling HDCP on the input port, the transmitted signal will not be encrypted if the content is not protected. Thus, non-HDCP compliant sinks will display non-encrypted signal.

Not HDCP-compliant Sink 2.



The layout is the same as in the previous case: non-HDCP compliant display device is connected to the receiver, but the source would send protected content with encryption. If HDCP is enabled on the input port of the receiver, the source will send encrypted signal. The sink is not HDCP compliant, thus it will display a red screen. If HDCP is disabled on the input port of the receiver, the source will not send the signal. The solution is to replace the display device with an HDCP-capable one.


10.2. Pixel Accurate Reclocking

Signal reclocking is an essential procedure in digital signal transmission. After passing the reclocking circuit, the signal becomes stable, jitter-free, and can be transmitted over more equipment like processors, or event controllers. Without reclocking, sparkles, noise, and jaggies appear on the image.

Lightware's sophisticated Pixel Accurate Reclocking technology fixes more problems than general TMDS reclocking. It removes not only intra-pair skew, but inter-pair skew as well. The Pixel Accurate Reclocking circuit eliminates the following errors:


Intra-pair skew

Skew between the + and - wires within a differential wire pair (e.g. Data2- and Data2+). It's caused by different wire lengths or slightly different wire construction (impedance mismatch) in the DVI cable. It results in jitter.

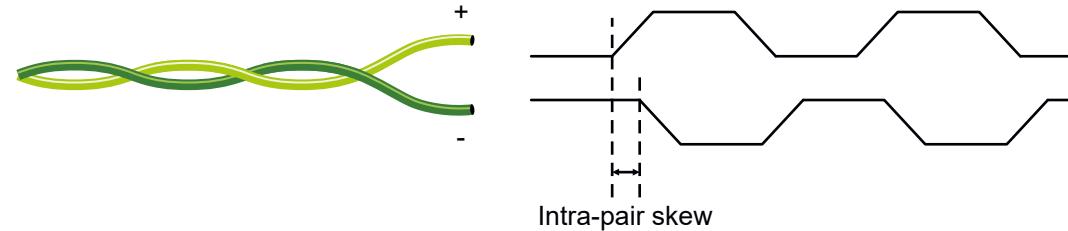


Inter-pair skew

Skew between two differential wire pairs in a cable. It is caused by different wire pair lengths or different number of twists in the DVI cable. Too much inter-pair skew results in color shift in the picture or sync loss.

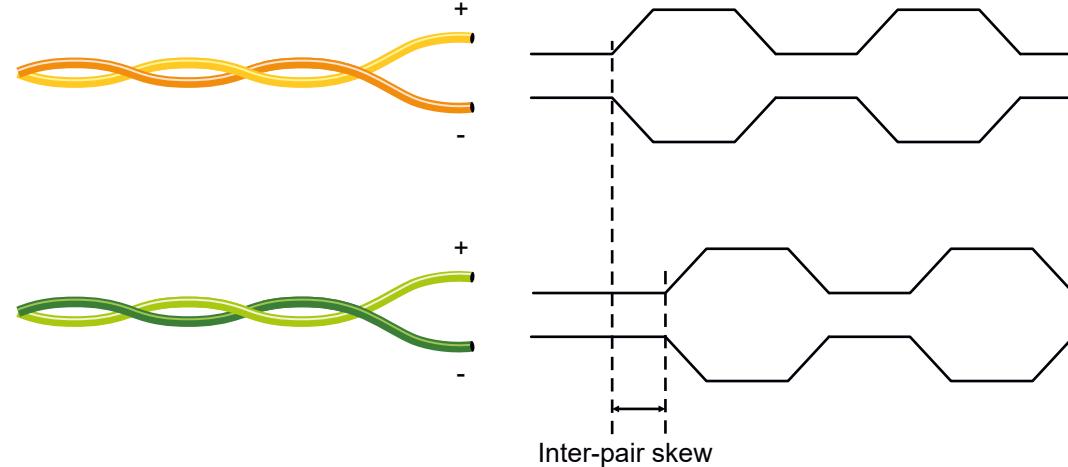


Jitter

Signal instability in the time domain. The time difference between two signal transitions should be a fixed value, but noise and other effects cause variations.

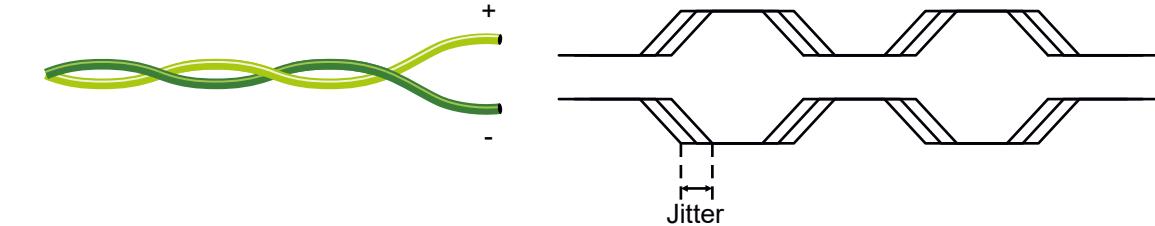

Noise

Electromagnetic interference between other electronic devices such as mobile phones, motors, etc. and the DVI cable are coupled onto the signal. Too much noise results in increased jitter.

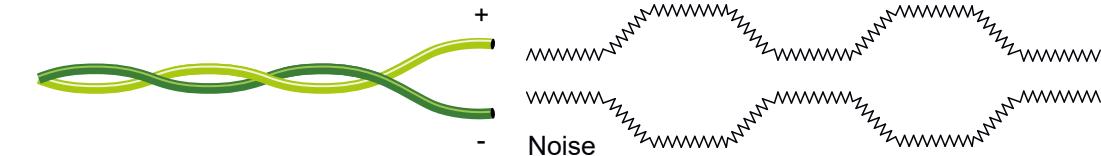

11

Appendix

Tables, drawings, guides, hashtag keyword list and technical details as follows:

- ▶ [SPECIFICATIONS](#)
- ▶ [INPUT/OUTPUT PORT NUMBERING](#)
- ▶ [CONTENT OF BACKUP FILE](#)
- ▶ [FACTORY DEFAULT SETTINGS](#)
- ▶ [MECHANICAL DRAWINGS](#)
- ▶ [CABLE WIRING GUIDE](#)
- ▶ [FACTORY EDID LIST](#)
- ▶ [MAXIMUM EXTENSION DISTANCES](#)
- ▶ [APPLIED PORTS \(NETWORK SETTINGS\)](#)
- ▶ [RELEASE NOTES OF THE FIRMWARE PACKAGES](#)
- ▶ [HASHTAG KEYWORD LIST](#)
- ▶ [FURTHER INFORMATION](#)

11.1. Specifications

General

Compliance	CE, UKCA
Electrical safety	EN 62368-1:2014, Class II
EMC (emission)	IEC/EN 55032:2015
EMC (immunity)	IEC/EN 55035:2017
RoHS	EN 63000:2018
Warranty	3 years
Operating temperature	0 to +50°C (+32 to +122°F)
Operating humidity	10% to 90%, non-condensing
Cooling	Passive

Power

Power supply option	Power adaptor / PoE
Power consumption (min/max)	3.3W / 7.9W
Heat dissipation (min/max)	11 BTU/h / 27 BTU/h
Power over Ethernet	via TPS input (IEEE802.3af)

Power Adaptor

Supported power source	100-240 V AC; 50/60 Hz
Supplied power	12V DC, 2A
AC power plug	Interchangable (EU, UK, JP/US, AUS/NZ)
DC power plug	Locking DC connector (2.1/5.5 mm pin)

Enclosure

Enclosure material	1 mm steel
Dimensions in mm	221 W x 100.4 D x 26 H
Dimensions in inch	8.7 W x 3.95 D x 1.02 H
Weight	607 g (1.34 lb)

Video Ports

TPS Input Port

Connector type	RJ45 connector
Power over Ethernet (PoE)	yes (IEEE 802.3af)
Compliance	HDBaseTTM
HDCP compliance	HDCP 1.4
Transferred signals	Video, Audio, RS-232, Infrared, Ethernet
Color space	RGB, YCbCr
Video delay	0 frame
Supported resolutions at 8 bits/color *	up to 4096x2048@30Hz (4:4:4) or 4096x2048@60Hz (4:2:0); up to 3840x2160@30Hz (4:4:4) or 3840x2160@60Hz (4:2:0); 1920x1080@60Hz (4:4:4) up to 12 bits/color
Audio formats	8 channel PCM
	Dolby TrueHD, DTS-HD Master Audio 7.1

* All standard VESA, CEA and other custom resolutions up to 300MHz (HDMI1.4) are supported.

HDMI Output Port

Connector type	19-pole HDMI Type A receptacle
A/V standard	DVI 1.0, HDMI 1.4
HDCP compliance	HDCP 1.4
Color space	RGB, YCbCr
Supported resolutions at 8 bits/color *	up to 4096x2048@30Hz (4:4:4) or 4096x2048@60Hz (4:2:0); up to 3840x2160@30Hz (4:4:4) or 3840x2160@60Hz (4:2:0); 1920x1080@60Hz (4:4:4) up to 12 bits/color
Audio formats	8 channel PCM, Dolby TrueHD; DTS-HD Master Audio 7.1

* All standard VESA and CEA resolutions up to 300MHz (HDMI1.4) and other custom resolutions up to 300Mhz are supported.

Audio ports**Analog Audio Output Port**

Connector type	5-pole Phoenix connector
Audio formats	2-ch PCM
Sampling frequency	48 kHz
Signal transmission	Balanced and unbalanced audio
Volume	-57 dB - 0 dB
Balance	0 - 100 (50 = center)
Nominal Differential Output Level @ 0 dB Volume setting	+6.72 dBu (balanced)

Control Ports**RS-232 Port**

Connector type	3-pole Phoenix connector
Baud rates	Between 4800 and 115200 Baud
Data bits	8 or 9
Parity	None / Odd / Even
Stop bits	1 / 1.5 / 2

USB Port

Connector type	mini B-type
Port capability	device control

Infrared Port

Input connector type	3.5 mm TRS (approx. 1/8" jack)
Output connector type	3.5 mm TS (approx. 1/8" jack)
Input carrier frequency	38 kHz
Output signal	modulated (38kHz)

Ethernet Port

Connector type	RJ45 female connector
Ethernet data rate	10/100Base-T, full duplex with autodetect
Power over Ethernet (PoE)	Not supported

Relay Port

Connector type	4-pole Phoenix connector
Number of relays	2
Type	Normally open contacts
Maximum ratings	30 V, 1A, AC/DC
Default connection state	Open

11.2. Input/Output Port Numbering

The following table contains the input and output ports with their ID numbers that shall be used when protocol command sending or in Lightware Device Controller.

Audio/Video Ports

Port name	Video port nr.		Emulated EDID memory	Audio port nr.	
	LW2	LW3		LW2	LW3
TPS Link in	1	I1	E1	1	I1
HDMI out	1	O1	-	1	O1
Audio out	-	-	-	2	O2

RS-232 Ports

Port name	Port nr. (LW2 / LW3)
Local	P1
TPS link	P2

Infrared Ports

Port name	Port nr. (LW3)
Local IR input	S1
Local IR output	D1
TPS link input	S2
TPS link output	D2

11.3. Content of Backup File

The backup file contains numerous settings and parameters saved from the device. When the file is uploaded to a device, the following will be overwritten:

TPS input port
Video port name, Audio port name, HDCP setting
Ethernet port name, Ethernet port status (enable / disable)
Remote port name, Remote port status (enable / disable)
Analog audio output port
Port name, Volume, Balance
HDMI output port
Port name, HDCP mode, HDMI mode, Power +5V mode
Test pattern mode, clock source, and type
Audio port name, Audio output enabled, S/PDIF mode
Port parameters
Mute video ports
Mute audio ports, Lock audio ports
Local and TPS serial port
RS-232 mode, Control protocol, Baud rate, Data bits, Stop bits, Parity
Port name and CI (Command Injection) port number
Local and TPS IR port
Port status (enable / disable), Code length, Repetition code, Enable modulation
Input port name, Output port name
CI status (enable / disable), CI port number
USB port
Port name, Port status (enable / disable)
Relay ports
Port name, Connection state
Network settings
DHCP status (enable / disable)
Static IP address, Network mask, Gateway address
Further settings
User EDID data (U1-U15)
Event manager: settings of all Events (E1-E100)

11.4. Factory Default Settings

Parameter	Setting/Value
Video port settings	
TPS mode	Auto
HDCP	Enabled
Test pattern mode	Disabled
Test pattern clock source	480p
Test pattern	Bar
Output HDMI mode	Auto
Output HDCP mode	Auto
Power 5V mode	Always on
Analog audio port settings	
Volume	0.00 dB (100%)
Balance	0 (center)
Network settings	
IP address	192.168.0.100
Subnet mask	255.255.255.0
Static gateway	192.168.0.1
DHCP	Disabled
Port numbers (LW2 / LW3 / HTTP)	10001 / 6107 / 80
TPS Ethernet status	Enabled
Relay port settings	
Connection state	Open
RS-232 settings	
Control protocol	LW2
Baud rate	57600
Databits	8
Parity	No
Stopbits	1
Operation mode (Link and Local)	Pass-through
Command injection port nr. (Local / TPS)	8001 / 8002
IR port settings	
Command injection status	Enabled
Comm. inj. input port nr. (Local / TPS)	9001 / 9002
Comm. inj. output port nr. (Local / TPS)	9003 / 9004


11.5. Mechanical Drawings

The following drawings present the physical dimensions of the receiver. Dimensions are in mm.


Bottom View



Front View

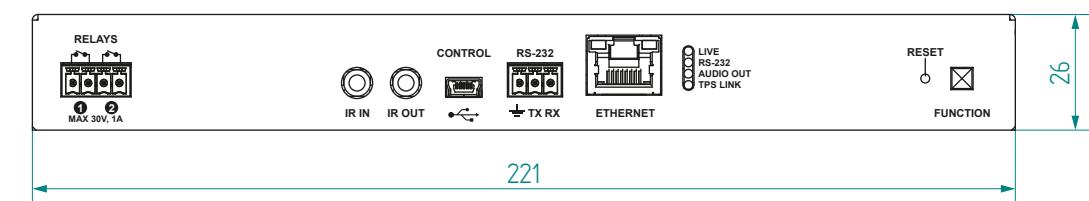


Top View

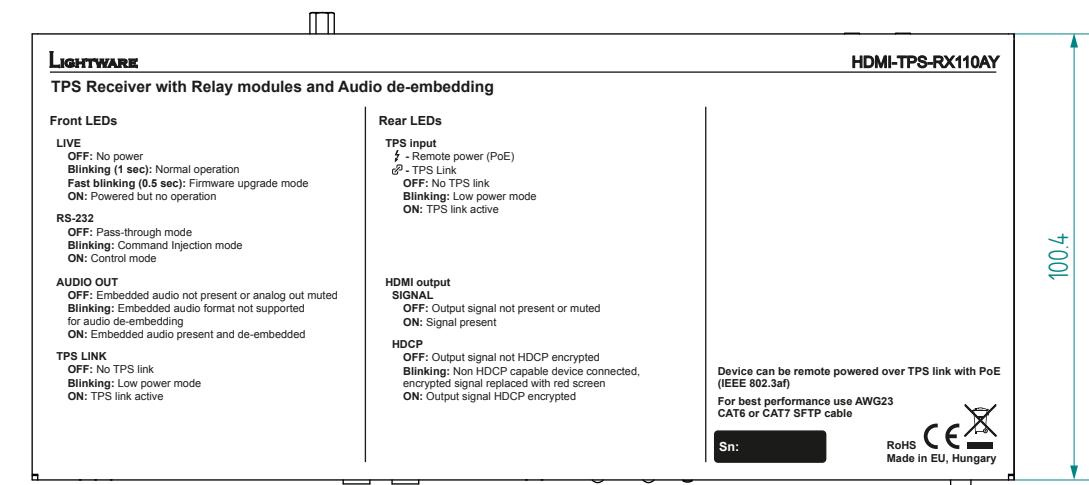

Rear View



Side View

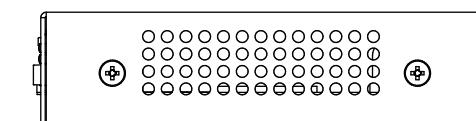

11.6. Cable Wiring Guide

Inputs and outputs of audio devices are symmetric or asymmetric. The main advantage of the symmetric lines is the better protection against the noise, therefore they are widely used in the professional audio industry. Symmetric audio is most often referred to as balanced audio, as opposed to asymmetric, which is referred to as unbalanced audio. Lighware products are usually built with 5-pole Phoenix connectors, so we would like to help users assemble their own audio cables. See the most common cases below.

ATTENTION! Symmetric and asymmetric lines can be linked with passive accessories (e.g. special cables), but in this case half of the line level is lost.


ATTENTION! There are numerous types of regularly used connector and cable types to connect audio devices. Please always make sure that a connector or cable fits your system before use.

ATTENTION! Never join the phase-inverted (negative, cold or -) poles (either right or left) to the ground or to each other on the output side, as this can damage the unit.

INFO: Use a galvanic isolation in case of a ground loop.

11.6.1. Serial Ports

The device is built with a 3-pole Phoenix connector. See the examples below of connecting to a DCE (Data Circuit-terminating Equipment) or a DTE (Data Terminal Equipment) type device:

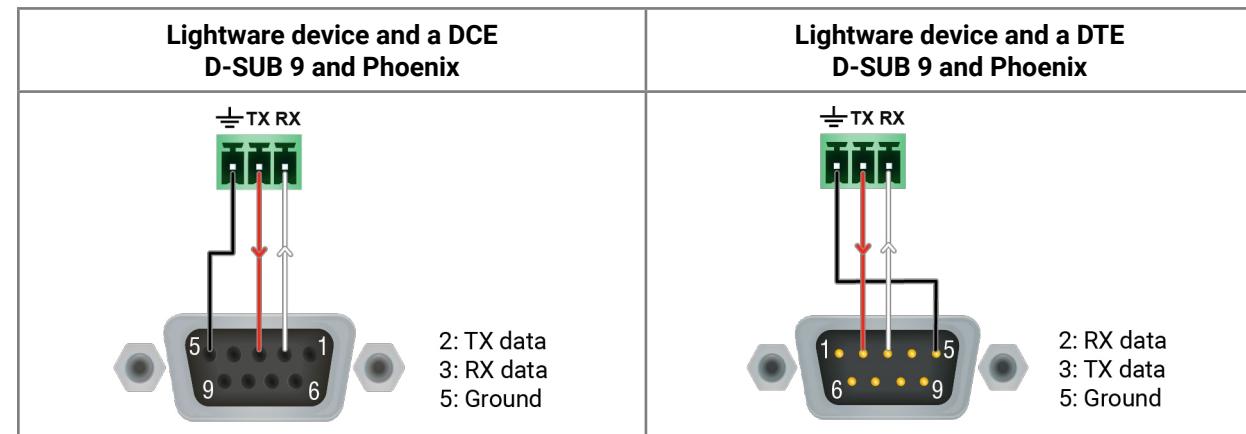


11.6.2. Audio Ports




The Pinout of the 5-pole Phoenix Connector






Pin nr.	Signal
1	Left+
2	Left-
3	Ground
4	Right-
5	Right+

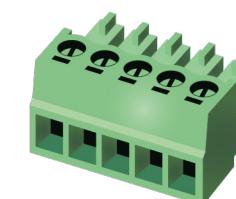






From Unbalanced Output to Balanced Input

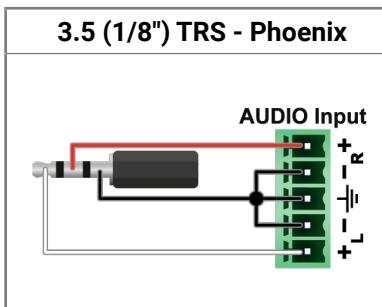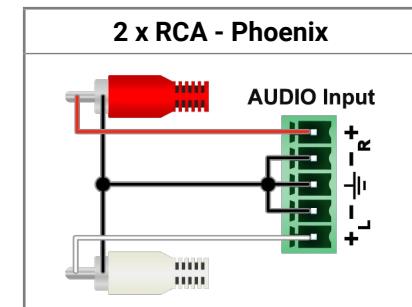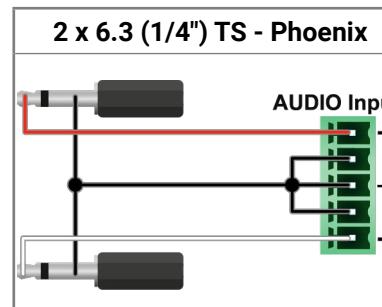

From Balanced Output to Unbalanced Input

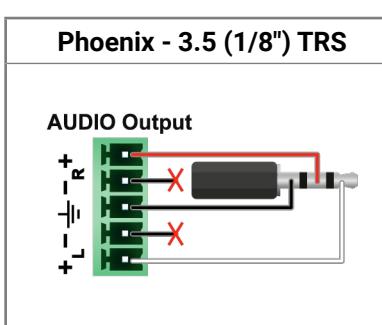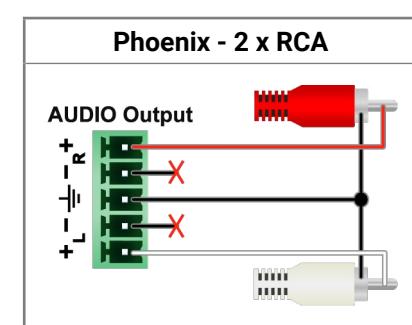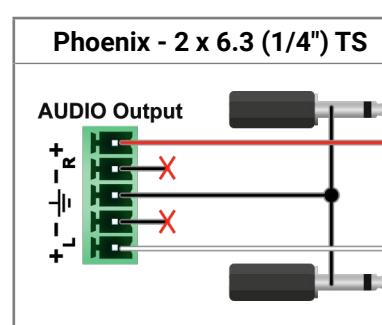

From Balanced Output to Balanced Input

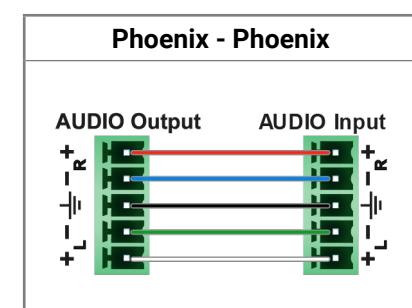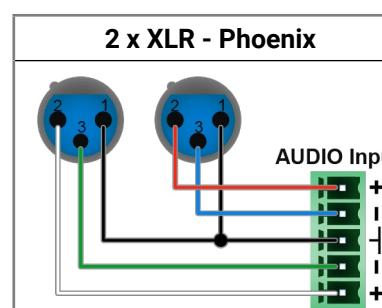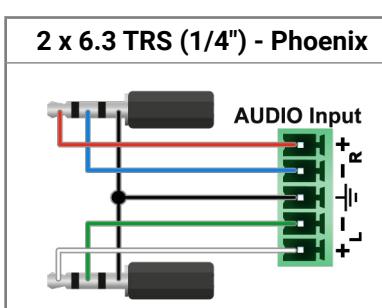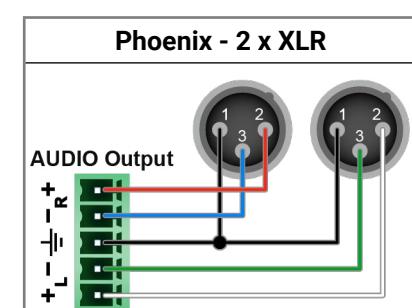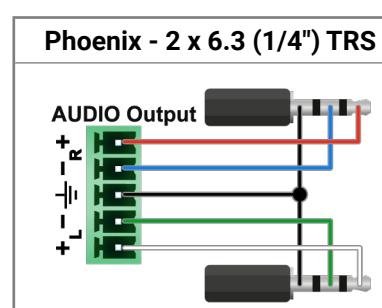

11.7. Factory EDID List

Mem	Resolution	Type	EDID features
F1	640 x 480p @ 60.00 Hz	D	
F2	848 x 480p @ 60.00 Hz	D	
F3	800 x 600p @ 60.32 Hz	D	
F4	1024 x 768p @ 60.00 Hz	D	
F5	1280 x 768p @ 50.00 Hz	D	
F6	1280 x 768p @ 59.94 Hz	D	
F7	1280 x 768p @ 75.00 Hz	D	
F8	1360 x 768p @ 60.02 Hz	D	
F9	1280 x 1024p @ 50.00 Hz	D	
F10	1280 x 1024p @ 60.02 Hz	D	
F11	1280 x 1024p @ 75.02 Hz	D	
F12	1400 x 1050p @ 50.00 Hz	D	
F13	1400 x 1050p @ 60.00 Hz	D	
F14	1400 x 1050p @ 75.00 Hz	D	
F15	1680 x 1050p @ 60.00 Hz	D	
F16	1920 x 1080p @ 50.00 Hz	D	
F17	1920 x 1080p @ 60.00 Hz	D	
F18	2048 x 1080p @ 50.00 Hz	D	
F19	2048 x 1080p @ 60.00 Hz	D	
F20	1600 x 1200p @ 50.00 Hz	D	
F21	1600 x 1200p @ 60.00 Hz	D	
F22	1920 x 1200p @ 50.00 Hz	D	
F23	1920 x 1200p @ 59.56 Hz	D	
F24	2048 x 1200p @ 59.96 Hz	D	
F29	1920 x 1080p @ 60.00 Hz	U	
F30	1440 x 480i @ 60.05 Hz	H	2chLPCM
F31	1440 x 576i @ 50.08 Hz	H	2chLPCM
F32	640 x 480p @ 59.95 Hz	H	2chLPCM
F33	720 x 480p @ 59.94 Hz	H	2chLPCM
F34	720 x 576p @ 50.00 Hz	H	2chLPCM

Mem	Resolution	Type	EDID features
F35	1280 x 720p @ 50.00 Hz	H	2chLPCM
F36	1280 x 720p @ 60.00 Hz	H	2chLPCM
F37	1920 x 1080i @ 50.04 Hz	H	2chLPCM
F38	1920 x 1080i @ 50.00 Hz	H	2chLPCM
F39	1920 x 1080i @ 60.05 Hz	H	2chLPCM
F40	1920 x 1080i @ 60.05 Hz	H	2chLPCM
F41	1920 x 1080p @ 24.00 Hz	H	2chLPCM
F42	1920 x 1080p @ 25.00 Hz	H	2chLPCM
F43	1920 x 1080p @ 30.00 Hz	H	2chLPCM
F44	1920 x 1080p @ 50.00 Hz	H	2chLPCM
F45	1920 x 1080p @ 59.94 Hz	H	2chLPCM
F46	1920 x 1080p @ 60.00 Hz	H	2chLPCM
F47	1920 x 1080p @ 60.00 Hz	U	2chLPCM
F48	1920 x 1080p @ 60.00 Hz	U	2chLPCM, 8chLPCM, DD, DTS, AAC, DD+, DTS-HD, MLP, DST, WMAP
F49	1920 x 1080p @ 60.00 Hz	U	2chLPCM, 8chLPCM, DD, DTS, AAC, DD+, DTS-HD, MLP, DST, WMAP
F90	1920 x 2160p @ 59.99 Hz	D	
F91	1024 x 2400p @ 60.01 Hz	D	
F94	2048 x 1536p @ 60.00 Hz	D	
F96	2560 x 1600p @ 59.86 Hz	D	
F97	3840 x 2400p @ 24.00 Hz	D	
F98	1280 x 720p @ 60.00 Hz	H	2chLPCM
F99	1920 x 1080p @ 60.00 Hz	H	2chLPCM
F100	1024 x 768p @ 60.00 Hz	H	2chLPCM
F101	1280 x 1024p @ 50.00 Hz	H	2chLPCM
F102	1280 x 1024p @ 60.02 Hz	H	2chLPCM
F103	1280 x 1024p @ 75.02 Hz	H	2chLPCM
F104	1600 x 1200p @ 50.00 Hz	H	2chLPCM
F105	1600 x 1200p @ 60.00 Hz	H	2chLPCM
F106	1920 x 1200p @ 59.56 Hz	H	2chLPCM
F107	2560 x 1440p @ 59.95 Hz	H	2chLPCM

Mem	Resolution	Type	EDID features
F108	2560 x 1600p @ 59.86 Hz	H	2chLPCM
F109	3840 x 2400p @ 24.00 Hz	H	2chLPCM
F110	3840 x 2160p @ 24.00 Hz	H	2chLPCM
F111	3840 x 2160p @ 25.00 Hz	H	2chLPCM
F112	3840 x 2160p @ 30.00 Hz	H	2chLPCM
F118	3840 x 2160p @ 30.00 Hz	U	2chLPCM
F119	3840 x 2160p @ 30.00 Hz	U	2chLPCM, 8chLPCM, DD, DTS, AAC, DD+, DTS-HD, MLP, DST, WMAP
F120	3840 x 2160p @ 60.00 Hz	H	2chLPCM

Legend**D:** DVI EDID**H:** HDMI EDID**U:** Universal EDID, supporting many standard resolutions:

- **F29:** Universal EDID for DVI signals (no audio support).
- **F47:** HDMI EDID supporting PCM audio.
- **F48:** HDMI EDID supporting all type of audio.
- **F49:** HDMI EDID supporting all type of audio and deep color.
- **F89:** Universal EDID for analog signals (no audio support).
- **F118:** HDMI EDID supporting PCM audio and 4K@30 Hz signals.
- **F119:** HDMI EDID supporting all type of audio and 4K@30 Hz signals.

Please note that minor changes in the factory EDID list may be applied in further firmware versions.

11.8. Maximum Extension Distances

Resolution	Pixel clock rate	Cable lengths (Auto / Longreach TPS mode)		
		CAT5e AWG24	CAT7 AWG26**	CAT7 AWG23
1024x768@60Hz	65 MHz	100 m / 130 m*	90 m / 120 m*	120 m / 170 m*
1280x720p@60Hz	73.8 MHz	100 m / 130 m*	90 m / 120 m*	120 m / 170 m*
1920x1080p@60Hz / 24bpp	148.5 MHz	100 m / 130 m*	90 m / 120 m*	120 m / 170 m*
1920x1200@60Hz	152.9 MHz	100 m / NA	90 m / NA	120 m / NA
1600x1200@60Hz	162 MHz	100 m / NA	90 m / NA	120 m / NA
1920x1080@60Hz / 36bpp	223.6 MHz	70 m / NA	70 m / NA	100 m / NA
3840x2160@30Hz UHD	297 MHz	70 m / NA	70 m / NA	100 m / NA
4096x2160@30Hz 4K	297 MHz	70 m / NA	70 m / NA	100 m / NA

* With Long reach operation mode, which supports pixel clock frequencies up to 148.5 MHz.

** When remote powering is used with AWG26 cables, distances are 20% shorter.

11.9. Applied Ports (Network Settings)

The following ports are necessary to pass via a network switch/firewall for a proper working between the device and the softwares:

Purpose/function	Affected software	Protocol	Port nr.
Firmware update TFTP	LDU2	UDP	69
		UDP	49990
		UDP	49995
Device Discovery	LDC	UDP	224.0.0.251:5353
Remote IP	LDC	UDP	230.76.87.82:37421
Find me (LMDMP)	-	UDP	230.76.87.82:37422
LW2 protocol	-	TCP	10001
LW3 protocol	-	TCP	6107
HTTP port	-	TCP	80
RS-232 command injection	-	TCP	8001
IR command injection	-	TCP	9001, 9002

11.10. Release Notes of the Firmware Packages

v1.5.0b3

Release date: 2021-05-26

New feature:

- Added AND operator for Event Manager Conditions (Advanced Control pack v3)
- Added Condition triggering for Event Manager (Advanced Control pack v3) for HDMI-TPS-RX110AY-Plus and HDMI-TPS-RX220AK only!
- Added Condition detect on property change to anything in Event Manager (Advanced Control pack v3)
- Added Variable handling for Event Manager (Advanced Control pack v3) for HDMI-TPS-RX110AY-Plus and HDMI-TPS-RX220AK only!
- Added Permanent TCP clients with configurable target IP address, and Message recognizer for TCP clients (Advanced Control pack v3) for HDMI-TPS-RX110AY-Plus and HDMI-TPS-RX220AK only!
- Added LW3 command-salvo over Http POST (protocol.lw3) (Advanced Control pack v3) for HDMI-TPS-RX110AY-Plus and HDMI-TPS-RX220AK only!
- Added Http message sending with sendHttpPost and sendHttpPut (target server IP, target filepath, header, body) (Advanced Control pack v3) for HDMI-TPS-RX110AY-Plus and HDMI-TPS-RX220AK only!
- Added method to send Wake On LAN packet (Advanced Control pack v3)
- Added cleartext login function (disabled by default) (Advanced Control pack v3) for HDMI-TPS-RX110AY-Plus and HDMI-TPS-RX220AK only!
- Added MAC filtering (Advanced Control pack v3) for HDMI-TPS-RX110AY-Plus and HDMI-TPS-RX220AK only!
- Added IP port and services filtering (Advanced Control pack v3) for HDMI-TPS-RX110AY-Plus and HDMI-TPS-RX220AK only!
- Added Macro capability (running partial device preset with tags) (Advanced Control pack v3) for HDMI-TPS-RX110AY-Plus and HDMI-TPS-RX220AK only!
- Added new method for CEC control button sendClick (Advanced Control pack v3) for HDMI-TPS-RX110AY-Plus and HDMI-TPS-RX220AK only!
- Added LMDMP (Lightware Multicast Device Management Protocol) feature.
- Modified DeviceLabel property default text to LW_<productname>_<serialnum>
- Added properties in root node: FirmwareVersion, PackageVersion, MacAddress.
- Minor performance improvements and modifications.
- Added Network HostName property (default: lightware-<serialnum>).
- Added new ConnectedSource property for media output nodes.
- Introduces “--test” option for the update CLI command. This “update test mode” checks communication with the device over various protocols. One can perform this verification step before actually starting the device update.

Bugfix:

- Update Control USB interface driver.

- Improved network compatibility with 10.x.x.x IP address range.
- Fixed issue with tick counter when the device is continuously operating for a very long time.

v1.4.0b14

Release date: 2020-02-07

New feature:

- KVM transmission between USB HID extension (Human Interface Devices, e.g. keyboard, mouse, presenter and a PC or a Laptop) for HDMI-TPS-RX220AK only! The device utilizes control over USB KVM, and can be remotely powered over TPS link with PoE (IEEE 802.3af), a useful array of features to further simplify the operation for system integrators and users.
- RX220AK works as a matrix.

v1.3.1b6

Release date: 2019-09-25

New feature:

- Compatible for LDU2 only! Use LDU2 v2.0.0 or later for the upgrade!
- Added 'Disable default button function' option to support button customization in Event Manager
- Added 'Dark mode' function to turn off front panel LEDs
- Modified RS-232 modes to support SendMessage in Control mode
- Firmware platform library updated
- CEC - sendCEC command (e.g. turn on the TV with Event Actions) for HDMI-TPS-RX110AY-Plus only!
- Sending IR codes (SendProntoHex e.g. send max. 200 Byte IR code with Event Actions) for HDMI-TPS-RX110AY-Plus only!

v1.1.0b3

Release date: 2018-04-09

11.11. Hashtag Keyword List

This user's manual contains keywords with hashtags (#) to help you find the relevant information as quick as possible.

The format of the keywords is the following:

#<keyword>

The usage of the keywords: use the **Search** function (Ctrl+F / Cmd+F) of your PDF reader application, type the # (hashtag) character and the wished keyword.

The **#new** special keyword indicates a new feature/function that has just appeared in the latest firmware or software version.

Example

#dhcp

This keyword is placed at the DHCP (dynamic IP address) setting in the front panel operation, the Lightware Device Controller (LDC) and the LW3 programmer's reference section.

The following list contains all hashtag keywords placed in the document with a short description belonging to them. The list is in **alphabetical order** by the hashtag keywords.

Hashtag Keyword ↓↑	Description
#advancedview	Advanced view / Terminal window
#analogaudio	Analog audio related settings
#autoselect	Autoselect feature settings
#backup	Configuration cloning (backup)
#balance	Balance (for analog audio) setting
#bootload	Bootload mode setting
#builtinweb	Built-in miniweb
#buttonlock	Front panel button lock setting
#cablediagnostics	Cable diagnostics tool in LDC
#cec	CEC related settings
#commandinjection	RS-232 command injection settings
#configurationcloning	Configuration cloning (backup)
#crosspoint	Crosspoint switch setting
#darkmode	Dark mode setting
#devicelabel	Device label
#dhcp	Dynamic IP address (DHCP) setting
#diagnostic	Failure diagnostic related tool/information

Hashtag Keyword ↓↑	Description
#edid	EDID related settings
#eventmanager	Event manager
#factory	Factory default settings
#firmwareversion	Firmware version query
#framedetector	Frame detector in LDC
#function	Function button
#hdcp	HDCP-encryption related setting
#highlightme	Find the device in LDC Device discovery
#http	Http post and put messaging, salvo commands
#identifyme	Identify me (identify the device) feature
#infra	Infrared port related settings
#infrared	Infrared port related settings
#ipaddress	IP address related settings
#label	Device label
#lock	Port lock setting
#lockbutton	Front panel button lock setting
#log	System log
#login	Cleartext login feature
#macfilter	MAC filtering (IT security)
#macro	Macro-handling
#message	Message sending via communication ports
#miniweb	Built-in miniweb
#mute	Port mute setting
#network	Network (IP address) related settings
#nosyncscreen	Test pattern (no sync screen) settings
#portblock	IP port blocking (IT security)
#portstatus	Source/destination port status query
#producttype	Product type query
#protocol	RS-232 protocol setting
#reboot	Restarting the device
#recognizer	RS-232 recognizer related settings

Hashtag Keyword ↴↑	Description
#relay	Relay related settings
#restart	Restarting the device
#rs232	RS-232 related settings
#rs-232	RS-232 related settings
#rs232recognizer	RS-232 recognizer related settings
#rs-232recognizer	RS-232 recognizer related settings
#serial	RS-232 related settings
#serialnumber	Serial number query
#signaltypes	HDMI/DVI signal type setting
#status	Status query
#switch	Crosspoint switch setting
#systemlog	System log
#tcprecognizer	TCP message recognizer-related settings
#terminal	Advanced view / Terminal window
#testpattern	Test pattern (no sync screen) settings
#tpsmode	TPS (HDBaseT) mode setting
#unlock	Port unlock setting
#unmute	Port unmute setting
#variables	Variable-management
#volume	Volume (for analog audio) setting
#web	Built-in miniweb

11.12. Further Information

Limited Warranty Statement

1. Lightware Visual Engineering PLC (Lightware) warrants to all trade and end user customers that any Lightware product purchased will be free from manufacturing defects in both material and workmanship for three (3) years from purchase unless stated otherwise below. The warranty period will begin on the latest possible date where proof of purchase/delivery can be provided by the customer. In the event that no proof can be provided (empty 'Date of purchase' field or a copy of invoice), the warranty period will begin from the point of delivery from Lightware.

1.1. 25G and MODEX product series will be subject to a seven (7) year warranty period under the same terms as outlined in this document.

1.2. If during the first three (3) months of purchase, the customer is unhappy with any aspect of a Lightware product, Lightware will accept a return for full credit.

1.3. Any product that fails in the first six (6) months of the warranty period will automatically be eligible for replacement and advanced replacement where available. Any replacements provided will be warranted for the remainder of the original unit's warranty period.

1.4. Product failures from six (6) months to the end of the warranty period will either be repaired or replaced at the discretion of Lightware. If Lightware chooses to replace the product, then the replacement will be warranted for the remainder of the original unit's warranty period.

2. The above-stated warranty and procedures will not apply to any product that has been:

2.1. Modified, repaired or altered by anyone other than a certified Lightware engineer unless expressly agreed beforehand.

2.2. Used in any application other than that for which it was intended.

2.3. Subjected to any mechanical or electrical abuse or accidental damage.

2.4. Any costs incurred for repair/replacement of goods that fall into the above categories (2.1., 2.2., 2.3.) will be borne by the customer at a pre-agreed figure.

3. All products to be returned to Lightware require a return material authorization number (RMA) prior to shipment, and this number must be clearly marked on the box. If an RMA number is not obtained or is not clearly marked on the box, Lightware will refuse the shipment.

3.1. The customer will be responsible for in-bound and Lightware will be responsible for out-bound shipping costs.

3.2. Newly repaired or replaced products will be warranted to the end of the originally purchased product's warranty period.

Document Revision History

Rev.	Release date	Changes	Editor
1.0	22-12-2016	Initial version	Tamas Forgacs
:			
2.1	04-12-2017	Major updates for firmware v1.2.0, updated Troubleshooting chapter	Tamas Forgacs
2.2	31-10-2018	1080p120Hz signal support info added	Judit Barsony
2.3	08-10-2019	Added supplement in connection with HDMI-TPS-RX110AY-Plus model, implemented hashtag keywords for the optimized information search	Tamas Forgacs
3.0	28-09-2020	Document re-structured; graphical and minor updates	Tamas Forgacs
3.1	25-06-2021	Advanced Control Pack v3 features added; LDU2 CLI section added	Laszlo Zsedenyi
3.2	08-07-2022	Box contents information updated - Infrared emitter/detector accessory no longer supplied; minor corrections	Nikolett Keindl
3.3	16-09-2022	Bulk Management chapters added, minor corrections	Nikolett Keindl
3.4	04-11-2022	Minor corrections for HTML export	Laszlo Zsedenyi
3.5	12-05-2023	IR Message Sending examples updated	Nikolett Keindl

Contact Us

sales@lightware.com

+36 1 255 3800

support@lightware.com

+36 1 255 3810

Lightware Visual Engineering PLC.

Peterdy 15, Budapest H-1071, Hungary

www.lightware.com